TOTO SW583

TOTO WASHLET S350e Electronic Bidet Toilet Seat User Manual

Model: SW583

1. Introduction

This manual provides comprehensive instructions for the installation, operation, and maintenance of your TOTO WASHLET S350e Electronic Bidet Toilet Seat. Please read this manual thoroughly before use to ensure proper function and safety.

The TOTO WASHLET S350e is designed to provide a comfortable and hygienic cleansing experience. It features an advanced EWATER+ system, automatic lid functions, and personalized settings.



Image 1.1: TOTO WASHLET S350e Electronic Bidet Toilet Seat and its remote control.

2. Product Features

The TOTO WASHLET S350e incorporates several features for enhanced hygiene and user comfort:

- **Warm Water Cleansing:** Provides an instant and continuous warm water stream with pulsating and oscillating options.
- **Heated Seat:** Offers adjustable temperature settings for comfort.
- **Warm Air Dryer:** Dries the cleansed area, reducing the need for toilet paper.
- **Automatic Open/Close Lid:** Senses user approach and departure for hands-free operation.
- **PREMIST:** Mists the toilet bowl with water before each use to help prevent waste adhesion.
- **EWATER+:** Electrolyzed water cleans the wand before and after use, and helps clean the toilet bowl upon departure.
- **Deodorizer:** Neutralizes odors for a fresh environment.
- **Nightlight:** Gently illuminates the toilet area.
- **Remote Control:** Allows for personalized settings and two user memory profiles.



Image 2.1: Key comfort and cleansing features.



Image 2.2: Automatic functions and hygiene systems.



Image 2.3: Wand hygiene and design details.



Image 2.4: Nightlight feature in a bathroom setting.



Image 2.5: TOTO WASHLET S350e installed.

3. Setup and Installation

Installation of the TOTO WASHLET S350e requires a 120V GFCI outlet. Refer to the detailed installation manual (PDF) available on the product page for complete instructions. Basic steps are outlined below.

3.1 Included Components



Image 3.1: Included components for installation.

3.2 Required Tools and Power



Image 3.2: Tools and power requirements.

3.3 Installation Steps Overview



Image 3.3: Overview of installation steps.

3.4 Optional Accessories



Image 3.4: Optional accessories for specific toilet configurations.

3.5 Interactive Instructions

For detailed, interactive 3D installation instructions, download the free BILT Intelligent Instructions app.



Image 3.5: BILT app for guided installation.

4. Operating Instructions

The WASHLET S350e is operated using the included wireless remote control. Ensure the remote has fresh AA batteries (included).

4.1 Remote Control Functions



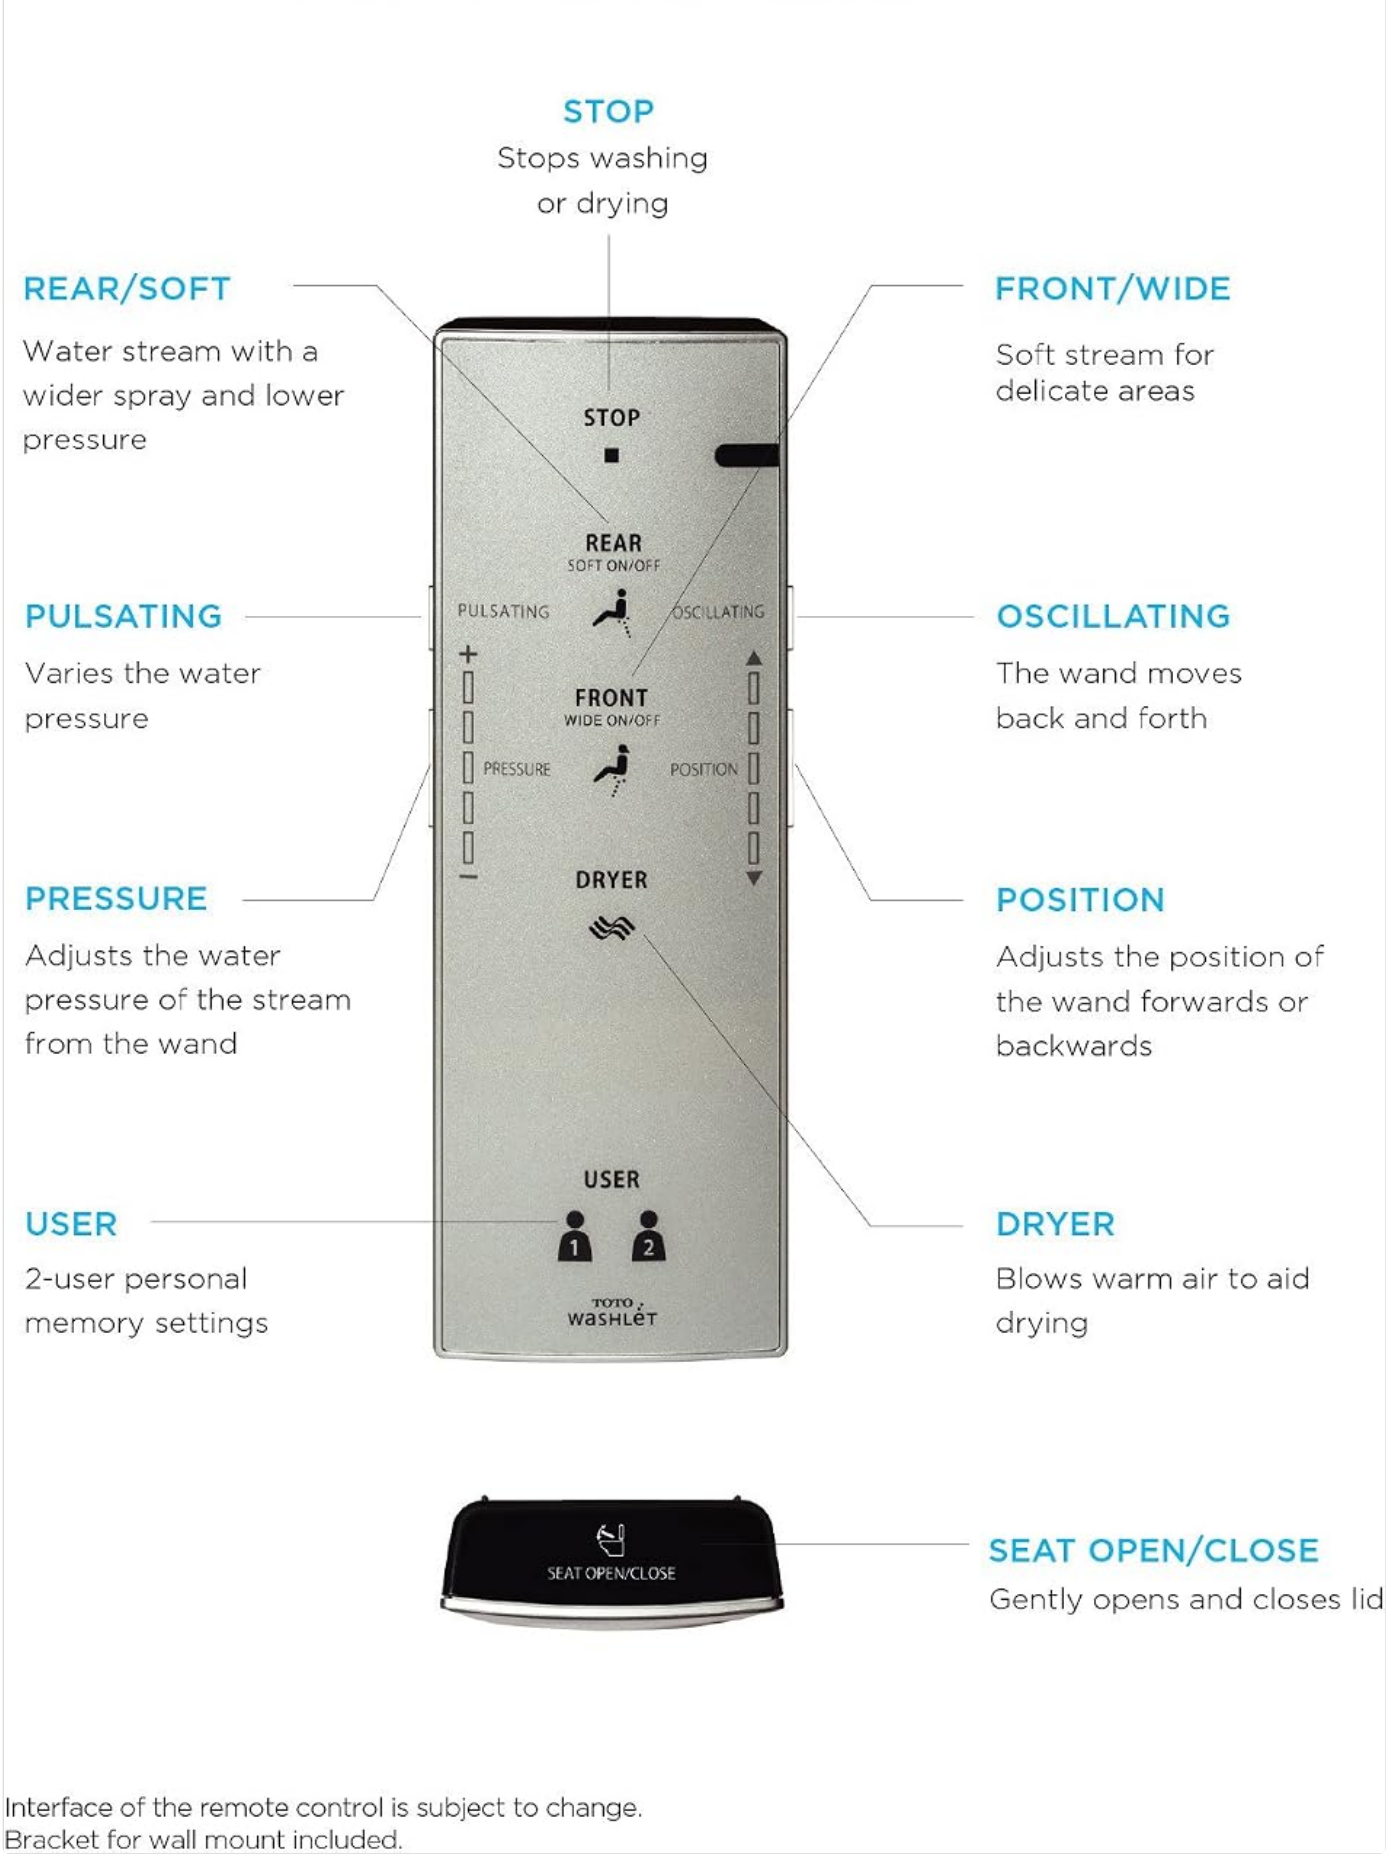


Image 4.1: Remote control layout and functions.

- **STOP:** Stops all washing or drying functions.
- **REAR/SOFT:** Activates the rear cleansing spray. The 'Soft' option provides a wider, gentler spray.
- **FRONT/WIDE:** Activates the front cleansing spray. The 'Wide' option provides a broader spray for delicate areas.

- **PULSATING:** Varies the water pressure for a massage-like effect.
- **OSCILLATING:** Moves the wand back and forth for a wider cleansing area.
- **PRESSURE:** Adjusts the water pressure of the spray.
- **POSITION:** Adjusts the forward or backward position of the wand.
- **DRYER:** Activates the warm air dryer.
- **USER 1/2:** Saves and recalls two personalized user settings for spray, temperature, and position.
- **SEAT OPEN/CLOSE:** Manually controls the automatic lid opening and closing function.

4.2 Adjustable Water Spray and Pressure



Image 4.2: Different spray patterns and wand adjustments.

5. Maintenance

Regular maintenance ensures optimal performance and hygiene of your WASHLET S350e.

- **EWATER+ Cleansing:** The EWATER+ system automatically cleans the wand and helps clean the toilet bowl.
- **Self-Cleaning Wand:** The wand is designed to self-clean before and after each use.
- **Quick Release:** The WASHLET unit can be easily removed from the toilet for thorough cleaning of the seat and toilet bowl. Press the quick-release button and slide the unit forward.
- **General Cleaning:** Use a soft cloth and mild, non-abrasive cleaner for the exterior surfaces. Avoid harsh chemicals.



Image 5.1: Design features aiding maintenance.

6. Troubleshooting

If you encounter any issues with your TOTO WASHLET S350e, please refer to the full user guide (PDF) for detailed troubleshooting steps. Common issues may include:

- No power or unit not turning on.
- Water spray not functioning or inconsistent.
- Heated seat not warming.

- Remote control not responding.

For further assistance, please contact TOTO Technical Support.

7. Specifications

Feature	Detail
Model Number	SW583#01
Color	Cotton White
Shape	Round
Material	Plastic
Product Dimensions	18.88"L x 15.31"W
Item Weight	13.5 Pounds
Voltage	120 Volts
Amperage	15 Amperage
Temperature Range (Water)	86 - 104 Degrees Fahrenheit
Batteries (Remote)	2 AA batteries (included)
UPC	739268232143

7.1 Dimensions and Fitment



Image 7.1: WASHLET S350e Round model dimensions.



Image 7.2: Toilet bowl compatibility guide.

8. Warranty and Support

8.1 Warranty Information

The TOTO WASHLET S350e is covered by a Manufacturer One Year Limited Warranty. Please refer to the warranty documentation included with your product for full terms and conditions.

8.2 Technical Support

For technical assistance, installation inquiries, or troubleshooting, please contact TOTO Technical Support at**1-888-295-8134**. Press 4 when prompted.



Image 8.1: TOTO support network information.

© 2023 TOTO. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question