Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Bajaj RSM-BAJ-6699

Bajaj 20 Litres Grill Microwave Oven User Manual

Model: 2005 ETB (RSM-BAJ-6699)

1. Introduction

This manual provides essential information for the safe and efficient operation of your Bajaj 20 Litres Grill Microwave Oven. Please read these instructions carefully before using the appliance and retain them for future reference.
The Bajaj 20 Litres Grill Microwave Oven is designed for household use, offering versatile cooking options including microwave, grill, and combination cooking. Its 20-liter capacity makes it suitable for bachelors or small families.

2. Important Safety Instructions

When using electrical appliances, basic safety precautions should be followed, including the following:

- Read all instructions before using the appliance.
- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
- The oven should be adjusted or repaired only by properly qualified service personnel.
- Ensure the appliance is properly grounded.
- Do not immerse the cord or plug in water.
- Close supervision is necessary when the appliance is used by or near children.
- Do not use the oven for purposes other than its intended use.

3. Product Overview

Familiarize yourself with the components of your microwave oven.



Figure 3.1: Front view of the Bajaj 20 Litres Grill Microwave Oven, showing the door, handle, and control panel.



Figure 3.2: Interior view of the microwave oven, showing the glass turntable and roller ring.

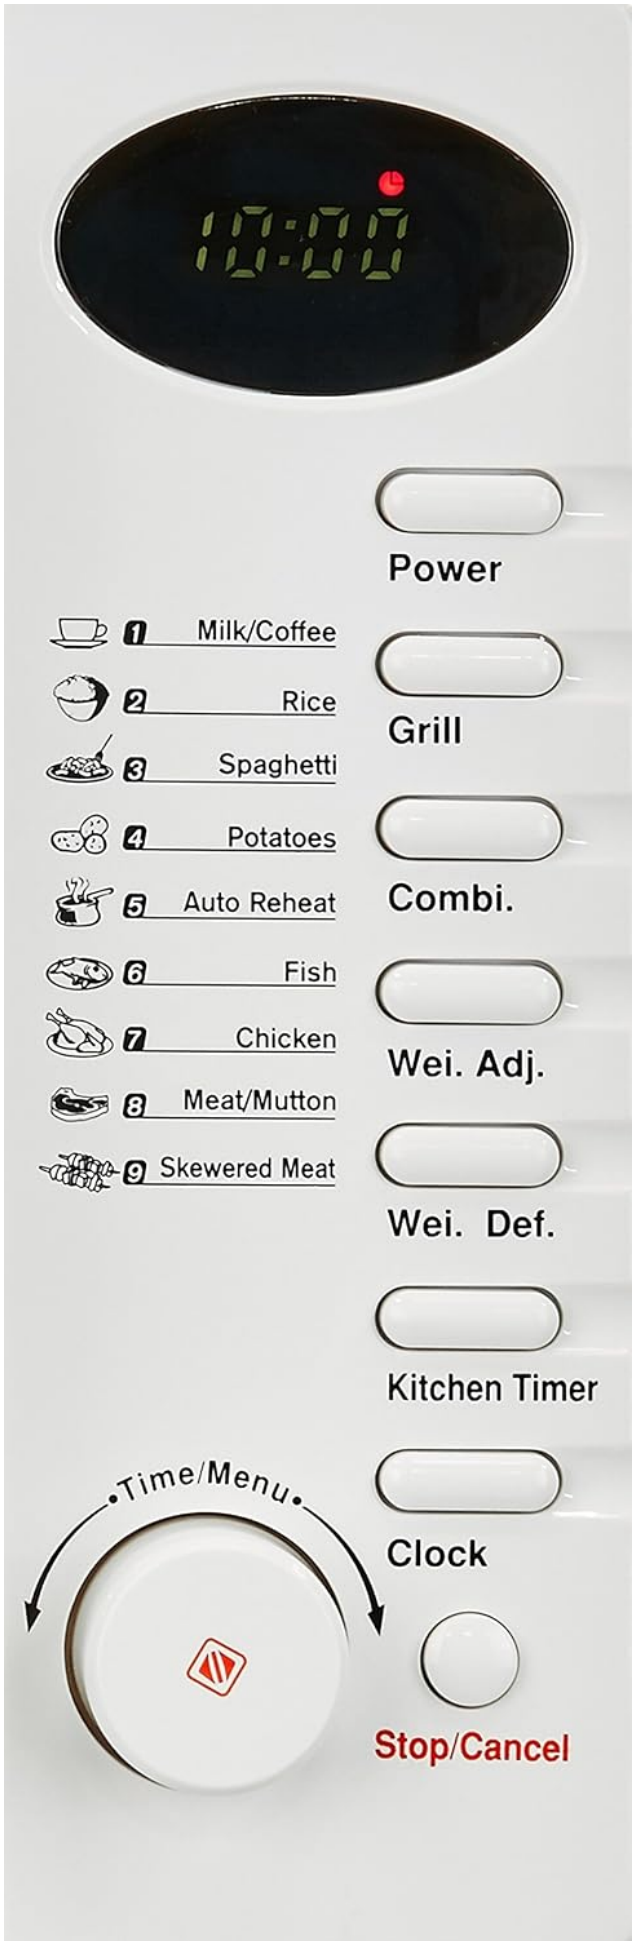


Figure 3.3: Detailed view of the control panel, featuring tactile buttons for various functions and a jog dial for time/menu selection.



Figure 3.4: Rear view of the microwave oven, displaying the product label with model number, power specifications, and safety warnings.

Components:

- **Oven Cavity:** The cooking chamber.
- **Glass Turntable:** Rotates food for even cooking.
- **Roller Ring:** Supports the turntable.
- **Control Panel:** Features tactile buttons and a jog dial for setting functions, time, and power levels.
- **Oven Door:** Equipped with a safety interlock system.
- **Grill Rack:** Used for grilling functions (included).

4. Setup and Installation

Unpacking:

- Remove all packaging materials from inside and outside the oven.
- Check the oven for any damage, such as a misaligned or bent door, damaged door seals, or dents in the cavity. Do not operate the oven if any damage is present.
- Ensure all accessories are present: glass turntable, roller ring, and grill rack.

Placement:

- Place the oven on a flat, stable surface that can support its weight and the heaviest food likely to be cooked in it.
- Maintain a minimum clearance of 10 cm (4 inches) from the rear, 5 cm (2 inches) from the sides, and 20 cm (8 inches) from the top for proper ventilation.
- Do not block air vents.
- Keep the oven away from heat and water sources.



Figure 4.1: Product dimensions for proper placement: 489mm (width), 343mm (depth), 275mm (height).

Electrical Connection:

- Plug the oven into a properly installed and grounded wall outlet.
- Ensure the voltage and frequency match the specifications on the rating label (230 Volts, 50 Hz).
- Do not use extension cords unless absolutely necessary, and ensure they are rated for the appliance's power consumption.

5. Operating Instructions

Setting the Clock:

1. Plug in the oven. The display will show "0:00".
2. Press the **Clock** button once.
3. Turn the **Time/Menu** jog dial to set the hour.
4. Press the **Clock** button again.
5. Turn the **Time/Menu** jog dial to set the minutes.
6. Press the **Clock** button to confirm.

Microwave Cooking:

1. Place food in a microwave-safe container on the turntable.
2. Close the door.
3. Press the **Power** button repeatedly to select the desired power level (P100, P80, P50, P30, P10). P100 is full power.
4. Turn the **Time/Menu** jog dial to set the cooking time.
5. Press the **Start/Cancel** button to begin cooking.

Grill Cooking:

The grill function is ideal for toasting, browning, and crisping food.

1. Place food on the grill rack, then place the rack on the turntable.
2. Close the door.

3. Press the **Grill** button.
4. Turn the **Time/Menu** jog dial to set the grilling time.
5. Press the **Start/Cancel** button to begin grilling.

Combination Cooking:

This mode combines microwave and grill cooking for faster and more even results.

1. Place food in a suitable container on the turntable or grill rack.
2. Close the door.
3. Press the **Combi.** button repeatedly to select the desired combination mode (C-1, C-2).
4. Turn the **Time/Menu** jog dial to set the cooking time.
5. Press the **Start/Cancel** button to begin.

Auto Cook Menu:

The oven features 9 pre-programmed auto cook menus for convenience.

1. Place food in the oven.
2. Turn the **Time/Menu** jog dial to select the desired auto cook menu (e.g., A-1 for Milk/Coffee, A-2 for Rice, etc.). The display will show the menu number.
3. Press the **Start/Cancel** button to confirm the selection and start cooking. For some menus, you may need to adjust the weight using the **Wei. Adj.** button.

Refer to the control panel image (Figure 3.3) for specific auto cook menu items.

Defrosting:

The oven offers defrosting by weight.

1. Place the frozen food in a microwave-safe container.
2. Press the **Wei. Def.** button.
3. Turn the **Time/Menu** jog dial to select the weight of the food.
4. Press the **Start/Cancel** button to begin defrosting.

Child Lock Function:

To prevent unsupervised operation by children, activate the child lock.

- **To activate:** Press and hold the **Stop/Cancel** button for 3 seconds. A "LOCK" indicator will appear on the display.
- **To deactivate:** Press and hold the **Stop/Cancel** button for 3 seconds again. The "LOCK" indicator will disappear.

6. Maintenance and Cleaning

Regular cleaning helps maintain the performance and longevity of your microwave oven.

- **Before Cleaning:** Always unplug the oven from the power outlet.
- **Oven Interior:** Wipe the inside cavity with a damp cloth after each use. For stubborn stains, use a mild detergent. Avoid abrasive cleaners or scouring pads.
- **Oven Door:** Clean the door seals and sealing surfaces regularly with a soft, damp cloth to ensure proper closure and prevent microwave leakage.
- **Glass Turntable and Roller Ring:** These can be washed in warm soapy water or in a dishwasher. Ensure they are completely dry before placing them back in the oven.

- **Exterior:** Wipe the exterior surface with a soft, damp cloth. Do not use harsh chemicals or abrasive materials.
- **Odor Removal:** To remove odors, combine a cup of water with the juice of one lemon in a microwave-safe bowl. Microwave on high for 5 minutes, then let it sit in the oven for 10 minutes before wiping clean.

7. Troubleshooting

If you encounter issues with your microwave oven, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Oven will not start	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped.	Ensure plug is securely in outlet; Close door firmly; Check household fuse/circuit breaker.
Microwave output low	Incorrect power level selected.	Ensure P100 (full power) is selected for maximum output.
Food not cooking evenly	Food not stirred or turned; Turntable not rotating; Improper dish used.	Stir or turn food during cooking; Check turntable and roller ring for obstructions; Use microwave-safe, round dishes.
Oven light not working	Bulb needs replacement.	Contact qualified service personnel for bulb replacement.
Excessive steam from door	Normal during cooking, especially high-moisture foods.	This is normal and not a fault.

If the problem persists after attempting these solutions, please contact Bajaj customer service.

8. Specifications

Brand	Bajaj
Model	2005 ETB (RSM-BAJ-6699)
Capacity	20 Litres
Installation Type	Countertop
Oven Cooking Mode	Grill, Microwave, Combination
Power Levels	5
Special Features	Auto Cook (9 menus), Child Lock, Jog Dial Control
Voltage	230 Volts
Wattage (Microwave)	800 Watts (Microwave)
Wattage (Grill Heater)	1000 Watts (Heater)
Item Weight	14 kg 200 g
Item Dimensions (LxWxH)	48.9 cm x 34.3 cm x 27.5 cm (Based on visual representation in product images)

Colour	White

9. Warranty and Support

Your Bajaj 20 Litres Grill Microwave Oven comes with a comprehensive warranty:

- **Product Warranty:** 1 year on the product.
- **Magnetron Warranty:** 1 year on the magnetron.

For service, support, or warranty claims, please contact Bajaj customer service. Refer to the warranty card included with your product for detailed terms and conditions.
Included Components: Grill Microwave oven, warranty card, and user manual.

© 2024 Bajaj. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

How can I download a user manual for the 2015 ETB Bajaj Microwave Oven?

The user manual for the Bajaj 20 Litres Grill Microwave Oven, Model 2005 ETB (RSM-BAJ-6699), is available directly on ManualsPlus. You can view and read the complete manual on the following page: Bajaj 20...
Read full answer

Open the live page

https://manuals.plus/asin/B009P2KSTC

More documents and user manuals: **https://manuals.plus/**