Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Playmobil 5419

Playmobil 5419 Princess Chest Instruction Manual

Your guide to setting up and enjoying your Playmobil Princess Chest.

1. Introduction

The Playmobil 5419 Princess Chest offers an engaging play experience, allowing children to unfold a compact chest into a royal setting. This set includes a princess figure, two kittens with a basket, a mannequin with a dress, a dressing table, and various accessories such as a crown, fan, hat, and perfume bottle. Designed for easy setup and imaginative play, the chest can be securely locked with a key, which can be conveniently stored underneath.

2. Safety Information

- **Age Recommendation:** This product is suitable for children aged 4 years and up. Small parts may pose a choking hazard for younger children.
- **Adult Supervision:** Adult supervision is recommended during initial assembly and play to ensure proper use and safety.
- **Material Safety:** All components are made from durable, child-safe plastic.
- **Choking Hazard:** Keep small accessories away from children under 3 years of age.

3. Package Contents

Carefully unpack all items and verify that all components are present before beginning assembly. The Playmobil 5419 Princess Chest includes the following:

- 1 x Princess Figure
- 1 x Mannequin
- 1 x Dress
- 1 x Cape
- 1 x Hat
- 1 x Crown
- 1 x Fan
- 1 x Perfume Bottle

- 1 x Key
- 2 x Kitten Figures
- 1 x Basket
- 1 x Dressing Table
- 1 x Stool
- 1 x Side Table
- 1 x Bench
- 1 x Plant Pot
- 1 x Foldable Princess Chest (Castle Facade)



Figure 1: All included components of the Playmobil 5419 Princess Chest, neatly arranged for inspection.

4. Setup

The Playmobil Princess Chest is designed for easy transformation from a compact chest to an elaborate play scene. Follow these steps for initial setup:

1. **Unlock the Chest:** Locate the key (often stored underneath the chest). Insert the key into the lock on the front of the chest and turn it to unlock.
2. **Unfold the Sides:** Gently pull the side panels of the chest outwards. These panels will reveal additional play areas, such as rooms with mirrors and windows.
3. **Extend the Floor:** The central floor section will fold down to create a larger play surface.
4. **Position Accessories:** Place the dressing table, stool, side table, bench, and plant pot within the unfolded castle interior as desired. Dress the mannequin and the princess figure with their respective outfits and

accessories.

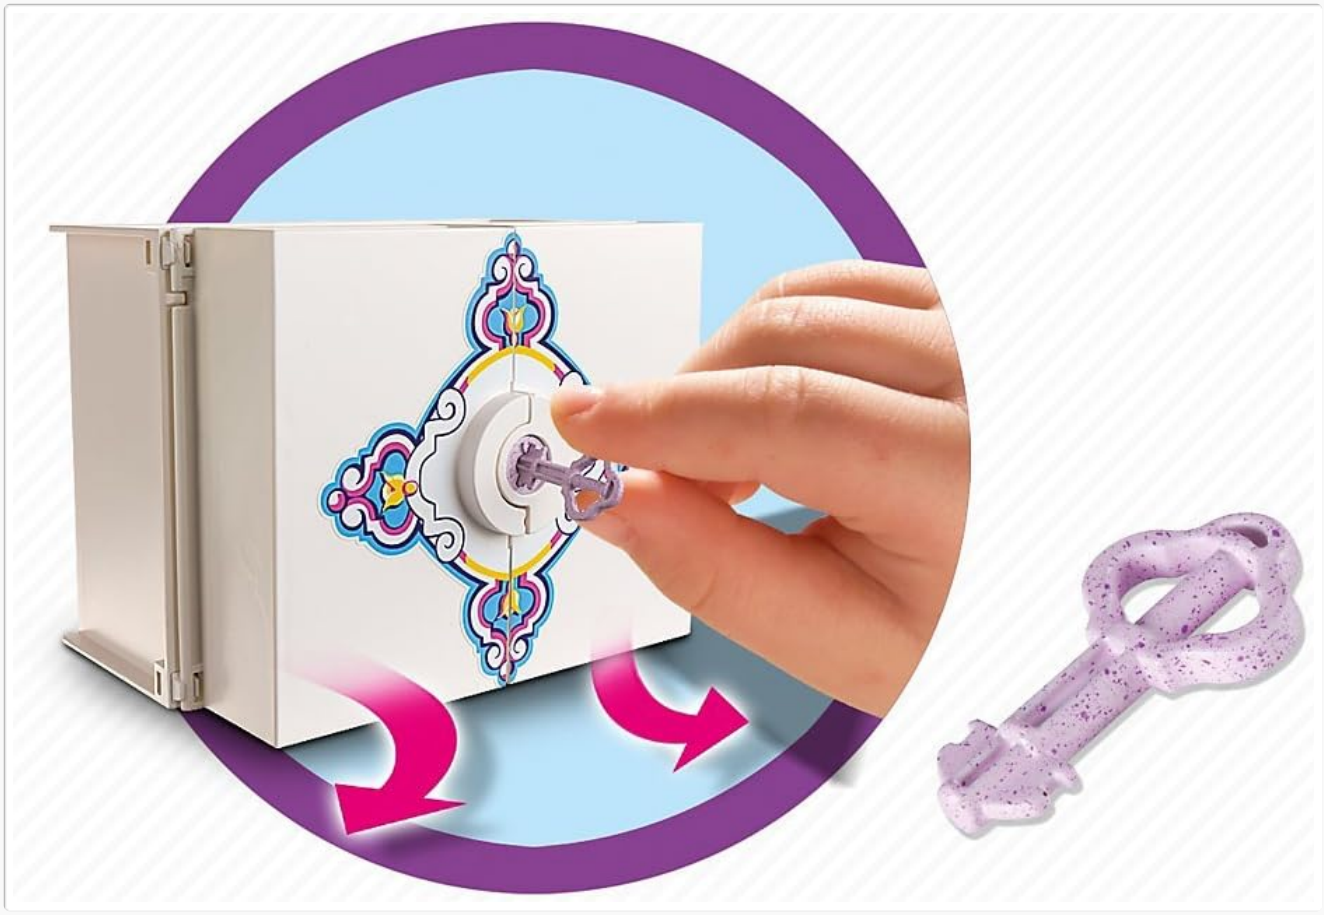


Figure 2: Detailed view of the key and lock mechanism for the Princess Chest.



Figure 3: Visual guide illustrating how the Princess Chest unfolds to reveal the play area.

5. Operating the Play Set

Once set up, the Playmobil Princess Chest provides a versatile environment for imaginative play. Children can engage in various scenarios:

- **Character Play:** Use the princess figure and kittens to create stories within the castle setting.
- **Accessory Interaction:** Utilize the dressing table, mannequin, and various accessories to prepare the princess for royal events or daily activities.
- **Exploration:** The multi-room design encourages exploration and different play angles.
- **Portability:** When playtime is over, simply fold the castle back into its chest form, lock it with the key, and store the key underneath for easy transport or storage.



Figure 4: The Playmobil Princess Chest in its fully unfolded state, ready for play with all accessories.



Figure 5: Children engaging in imaginative play with the Playmobil Princess Chest.

6. Maintenance

To ensure the longevity and hygiene of your Playmobil Princess Chest, follow these simple maintenance guidelines:

- **Cleaning:** Most plastic parts (without stickers) can be cleaned under running water. Use mild soap if necessary. Avoid harsh chemical agents, as they may damage the plastic or printed details.
- **Drying:** Allow all parts to air dry completely before reassembling or storing to prevent moisture buildup.
- **Storage:** When not in use, fold the chest back into its compact form and store it in a dry, cool place away from direct sunlight to prevent discoloration or material degradation.

7. Troubleshooting

If you encounter any issues with your Playmobil Princess Chest, consider the following:

- **Chest Not Opening/Closing:** Ensure the key is fully inserted and turned. Check for any obstructions preventing the panels from folding or unfolding smoothly.
- **Missing Parts:** Refer to the "Package Contents" section. If a part is genuinely missing upon unboxing, contact Playmobil customer support.
- **Damaged Parts:** If any part is damaged, discontinue use and contact customer support for assistance.

8. Specifications

Feature	Detail
Model Number	5419
Brand	Playmobil
Product Dimensions (L x W x H)	35 x 10 x 25 cm (13.8 x 3.9 x 9.8 inches)
Weight	0.28 kg (0.62 lbs)
Material	Plastic
Recommended Age	4 years and up
Number of Pieces	76
Batteries Required	No
Educational Value	Imagination, Invention, Creativity
UPC	885409641333, 885172762273, 885451961632
International Article Code	04008789054197

9. Warranty and Support

Playmobil products are manufactured to high-quality standards. While specific warranty details are not provided in this manual, Playmobil typically offers support for manufacturing defects. For any inquiries regarding product issues, missing parts, or general support, please contact Playmobil customer service.
You may also find additional information and resources on the official Playmobil website or the dedicated product page:

- **Playmobil Official Website:** www.playmobil.com
- **Product Information Page:** miniklappbox.playmobil.com

© 2023 Playmobil. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B00A30YWDS

More documents and user manuals: **https://manuals.plus/**