Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Acura TL

Acura TL 2001 Owner's Manual: Essential Guide

Your comprehensive guide to operating and maintaining your 2001 Acura TL.

Introduction to Your 2001 Acura TL

This guide provides an overview of the essential information found in the original 2001 Acura TL Owner's Manual. It is designed to help you understand the features, operation, and maintenance requirements of your vehicle to ensure safe and efficient driving.

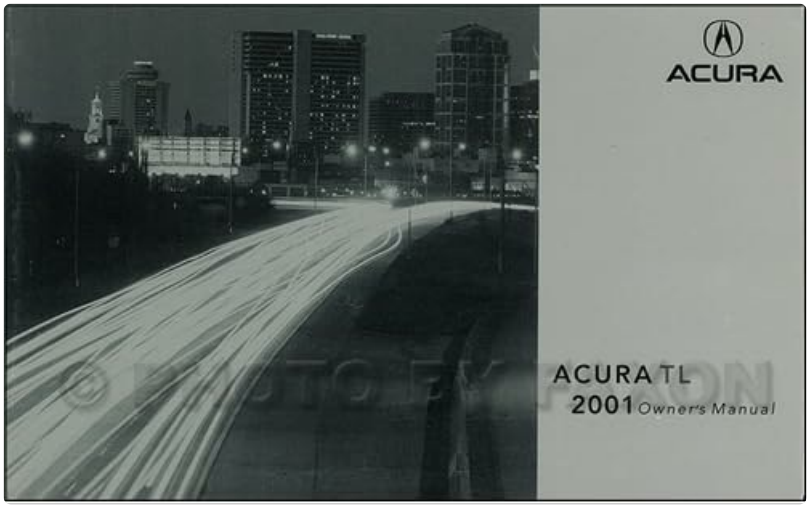


Image: Front cover of the 2001 Acura TL Owner's Manual, displaying the Acura logo and vehicle model. This manual contains detailed instructions for all aspects of the vehicle.

Vehicle Setup and Familiarization

Before operating your Acura TL, it is recommended to familiarize yourself with its key components and controls. This section covers initial adjustments and understanding your vehicle's layout.

- **Seating and Mirror Adjustment:** Properly adjust your driver's seat, steering wheel, and all mirrors (rearview and side mirrors) for optimal visibility and comfort. Refer to the manual for specific lever and button locations.
- **Dashboard Controls:** Understand the layout of your dashboard, including the instrument cluster (speedometer, tachometer, fuel gauge, temperature gauge) and warning lights.
- **Climate Control:** Learn how to operate the heating, ventilation, and air conditioning (HVAC) system for

passenger comfort.

- **Audio System:** Familiarize yourself with the radio, CD player, and other audio functions.

Operating Your Acura TL

This section outlines the procedures for starting, driving, and safely operating your 2001 Acura TL.

Starting the Engine

1. Ensure the transmission is in Park (P) or Neutral (N).
2. Insert the key into the ignition switch.
3. Turn the key to the START (III) position and release it once the engine starts.

Driving Controls

- **Transmission:** Understand the different gear positions (P, R, N, D, D3, 2, 1) and their appropriate use.
- **Braking System:** Familiarize yourself with the foot brake and parking brake operation.
- **Lighting:** Know how to operate headlights, high beams, turn signals, and hazard lights.
- **Wipers and Washers:** Operate the windshield wipers and washers for clear visibility.

Maintenance Schedule and Procedures

Regular maintenance is crucial for the longevity and performance of your Acura TL. Adhere to the recommended service intervals.

Routine Checks

- **Engine Oil:** Check oil level regularly and change according to the maintenance schedule.
- **Coolant:** Monitor coolant level and condition.
- **Brake Fluid:** Inspect brake fluid level.
- **Tire Pressure:** Check tire pressure monthly, including the spare.
- **Wiper Blades:** Replace wiper blades when they show signs of wear.

Scheduled Maintenance

Refer to the full owner's manual for a detailed maintenance schedule, typically found in a dedicated section. This includes intervals for:

- Oil and filter changes
- Tire rotation
- Brake inspection
- Fluid replacements (transmission, power steering)
- Spark plug replacement
- Timing belt replacement (if applicable)

Troubleshooting Common Issues

This section provides guidance on addressing minor issues you might encounter with your vehicle.

Symptom	Possible Cause	Action
Engine will not start	Dead battery, faulty starter, no fuel	Check battery terminals, ensure fuel in tank, consult manual for jump-starting procedure.
Warning light illuminated	Various system malfunctions	Identify the specific warning light in the manual and follow recommended actions.
Flat tire	Puncture, low pressure	Refer to the manual for instructions on changing a flat tire and using the spare.

For more complex issues or if troubleshooting steps do not resolve the problem, it is recommended to consult a qualified Acura service technician.

Specifications

Key specifications for the 2001 Acura TL (may vary by trim level):

- **Engine:** 3.2L V6 SOHC VTEC
- **Horsepower:** Approximately 225 hp
- **Transmission:** 5-speed automatic with SportShift
- **Fuel Tank Capacity:** Approximately 17.2 US gallons (65 liters)
- **Tire Size:** Typically P205/60R16
- **Dimensions (Approximate):**
  - Length: 193.1 inches (4905 mm)
  - Width: 70.3 inches (1785 mm)
  - Height: 56.3 inches (1430 mm)

For precise and complete specifications, always refer to the original 2001 Acura TL Owner's Manual or official Acura documentation.

Additional Resources

For further assistance or detailed information, consider the following:

- **Official Acura Website:** www.acura.com (for general brand information and current models)
- **Authorized Acura Dealerships:** For service, parts, and expert advice.

© 2001 Acura. All rights reserved. This document is a summary and does not replace the official owner's manual.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B00AALXITY

More documents and user manuals: **https://manuals.plus/**