

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [BRIO](#) /
- › [BRIO Remote Control Travel Train Instruction Manual](#)

BRIO 33510

BRIO Remote Control Travel Train Instruction Manual

Model: 33510 | Brand: BRIO

INTRODUCTION

This manual provides essential information for the safe and effective operation of your BRIO Remote Control Travel Train. Please read these instructions carefully before use to ensure proper setup, operation, and maintenance. This toy train set is designed to provide interactive play with its remote control, light, and sound features, compatible with all BRIO wooden railway sets.

PRODUCT OVERVIEW

The BRIO Remote Control Travel Train is an engaging toy designed for children aged 3 and above. It features a train engine, a passenger wagon, and a train driver figure. The train is controlled by an intuitive remote, allowing for forward movement at two speeds, reverse, and activation of light and sound effects. Its design ensures compatibility with existing BRIO wooden railway systems, expanding play possibilities.

- **Interactive Play:** Features an easy-to-use remote control with light and sound functions.
- **Battery Operated:** Requires 4 AA batteries (not included) for operation, supporting two-speed forward movement.
- **Compatibility:** Fully compatible with all BRIO wooden railway sets.
- **Age Appropriate:** Suitable for children aged 3 years and older.
- **Quality Construction:** Made from 100% FSC-certified beech wood and durable plastic components.



Image: The complete BRIO Remote Control Travel Train set, including the remote control, train engine, passenger wagon, and train driver figure, displayed out of its packaging.

WHAT'S IN THE BOX

Verify that all components are present upon opening the package:

- 1 x Remote Control
- 1 x Remote Control Engine (Train)
- 1 x Wagon
- 1 x Train Driver Figure (with movable arms and legs)



Image: An overhead view of the four main components included in the set: the remote control, the train engine, the passenger wagon, and the train driver figure.

SETUP

Battery Installation

The BRIO Remote Control Travel Train requires 4 AA batteries for operation. Batteries are not included and must be purchased separately.

1. Locate the battery compartment on the underside of the train engine.
2. Using a small screwdriver, open the battery compartment cover.
3. Insert 4 AA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Replace the battery compartment cover and secure it with the screw.

Important: Always use new, high-quality batteries. Do not mix old and new batteries, or different types of batteries. Remove batteries if the toy will not be used for an extended period.



Image: A visual representation indicating that 4 AA batteries are required for the train, with an arrow pointing from the remote to the train, suggesting control.

Assembly

Connect the wagon to the train engine using the magnetic couplers. The train driver figure can be placed inside the wagon or used independently for imaginative play.

OPERATING INSTRUCTIONS

The remote control operates the train using infrared (IR) technology. Ensure a clear line of sight between the remote and the train for optimal performance.

Remote Control Functions

- **Direction Lever:** Move the lever forward for two speeds, or backward for reverse. Center position stops the train.
- **Light Button:** Press the button with the light bulb icon to activate the train's headlight.
- **Sound Button:** Press the button with the speaker icon to activate the train's sound effects (e.g., horn).
- **Channel Selector (A/B):** The remote features two channels (A and B). Ensure the channel selected on the remote matches the channel set on the train engine if you are operating multiple BRIO remote control trains simultaneously.



Image: A detailed view of the remote control, highlighting the two channel selector (A/B), the light button, and the sound button.

Playing with the Train

Place the train on any BRIO wooden railway track. Use the remote control to guide the train along the tracks. The train can also be operated on smooth, flat surfaces without tracks.



Image: The BRIO Remote Control Travel Train running on wooden railway tracks, with the remote control positioned nearby, illustrating its operation.

MAINTENANCE

- **Cleaning:** Wipe the train and remote control with a dry or slightly damp cloth. Do not immerse in water. Avoid using harsh chemicals or abrasive cleaners.
- **Storage:** Store the toy in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** Remove batteries if the toy is not used for extended periods to prevent leakage and damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Train does not move or respond to remote.	<ul style="list-style-type: none"> • Low or dead batteries in train or remote. • Incorrect battery polarity. • No clear line of sight between remote and train. • Remote and train on different channels. • Train in auto-sleep mode. 	<ul style="list-style-type: none"> • Replace all batteries in both the train and remote. • Check battery orientation. • Ensure remote is pointed directly at the train within a short distance (e.g., 1.5 meters). • Verify both remote and train are set to the same channel (A or B). • Press any button on the train or remote to wake it up.
Train moves slowly or struggles on inclines.	<ul style="list-style-type: none"> • Low battery power. • Too many wagons or heavy load. 	<ul style="list-style-type: none"> • Replace batteries. • Reduce the number of wagons or load being pulled.

Problem	Possible Cause	Solution
Light or sound features not working.	<ul style="list-style-type: none"> • Low battery power. • Malfunction. 	<ul style="list-style-type: none"> • Replace batteries. • If problem persists, contact customer support.

SPECIFICATIONS

Feature	Detail
Product Dimensions	11.02 x 3.54 x 5.91 inches
Item Weight	10.3 ounces
Model Number	33510
Recommended Age	36 months - 10 years
Batteries Required	4 AA batteries (not included)
Manufacturer	BRIO
Release Date	January 1, 2016


WARRANTY AND SUPPORT


For information regarding product warranty, returns, or technical support, please refer to the official BRIO website or contact BRIO customer service directly. Keep your proof of purchase for any warranty claims.

For further assistance, visit: www.brio.net

© 2024 BRIO. All rights reserved.

Related Documents - 33510

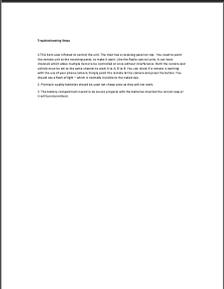	<p>BRIO World Remote Control Travel Train Troubleshooting Guide</p> <p>Provides essential troubleshooting steps for the BRIO World Remote Control Travel Train, helping users resolve issues related to infrared control, channel synchronization, remote operation, and battery performance.</p>
	<p>BRIO Battery-Operated Steaming Train - User Manual and Instructions</p> <p>Comprehensive guide for the BRIO Battery-Operated Steaming Train (model 33884). Learn how to install batteries, operate the train, generate steam, and understand safety precautions. Includes tips for optimal play and maintenance.</p>
	<p>BRIO Remote Control Train - User Manual and Operating Instructions</p> <p>Comprehensive guide for the BRIO Remote Control Train, covering operation, battery installation, safety precautions, and FCC compliance. Learn how to set up and enjoy your BRIO RC train.</p>

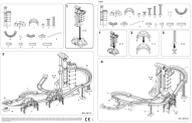	<p>BRIO Battery Metro Engine: Features, Operation & Safety Guide Comprehensive guide to the BRIO Battery Metro Engine, covering its features, how to operate it, battery replacement, and essential safety warnings.</p>
	<p>BRIO Central Train Station - Battery Replacement and Operation Guide Instructions and safety information for the BRIO Central Train Station toy, detailing how to replace batteries and operate its sound features. Includes important warnings and guidelines for safe use.</p>
	<p>BRIO Lift & Load Warehouse Set 33887 Assembly Instructions Detailed assembly instructions and layout suggestions for the BRIO Lift & Load Warehouse Set 33887, a wooden toy train accessory from BRIO.</p>

Documents - BRIO – 33510



[pdf]

BRIO IR Express 33510 service ravensburger de @api deki pages 1626 |||

BRIO IR Express **33510** Fragen und Antworten zum BRIO „IR Express Reisezug **33510** Mit dem BRIO „IR Express Reisezug werden Sie zum Zugführer. Wie schalte ich den Reisezug an bzw. aus Der IR - Express hat einen extra verbauten Einschalt bzw. Ausschaltknopf. Er befindet sich an der Unterseite des Z...

lang:de score:29 filesize: 4.95 M page_count: 6 document date: 0000-00-00

[pdf] Catalog

Railway catalogue Brio RAILWAY 23 BRIO brio net 3 33210 33511 33042 33010 33028 33700 22 33727 33726 33728 33729 My first train play! When children start playing with toys they show great curiosity for STEAM WORLD 33036 33391 Did you know that in the old days trains used coal as fuel Yes my grandmother told me about power ful steam engines and challenge of RW Catalogue 2015 ENG Low res portal ~ media Files Customer ashx |||

Railway catalogue Hello Hi and welcome to our BRIO Railway world Join us on our journey to the ... 04 33319 www.brio.net 27 BRIO RAILWAY 33214 33592 33596 28 www.brio.net 33215 33593 33213 **33510** 33746 3 3 33737 33695 33509 33610 33749 BRIO RAILWAY 33693 33696 33508 www.brio...

lang:en score:19 filesize: 8.52 M page_count: 27 document date: 2015-03-31


[pdf] Catalog

Jernbanekatalog BRIO Portal 31 12 2015 Når barn begynner å leke med leketøy er de veldig nysgjerrige på detaljer og fokuserer en om gangen De liker kjøre våre Consumer RW Catalogue NO Low res portal brio net ~ media Files Customer Railway ashx |||

Jernbanekatalog Hei Hei og velkommen til vr BRIO jernbaneverden Bli med p en reise til byen, la ... 4 33319 www.brio.net 27 BRIO JERNBANE 33214 33592 33596 28 www.brio.net 33215 33593 33213 **33510** 33746 3 3 33737 33695 33509 33610 33749 BRIO JERNBANE 33693 33696 33508 www.bri...

lang:no score:19 filesize: 8.59 M page_count: 27 document date: 2015-03-31



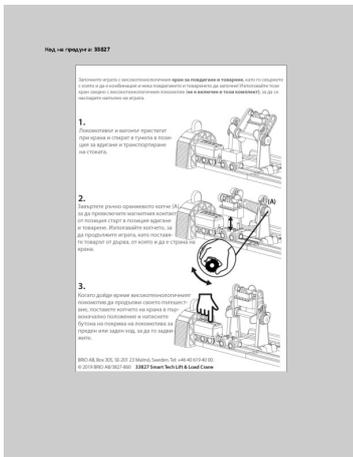

[pdf]

I Karakoleva тук Играчка парен локомотив Brio 33892 Igra4ka bg techinfo all brio genesis uf pages влакова станция 33649 |||

: 33827 : 30383 : **33510** 33213 : 33705 : 32270 : 33130 : 33214 : 33592 33593 : 33594
33595 : 33874 33935 : 33962 : 33873 33834 30189 33481 33835 33826 30255 33840
33506 33867 33811 33599 ...

lang:it score:14 filesize: 5.05 M page_count: 22 document date: 2021-05-13

Код	Наименование	Единица измерения	Цена
33827	Локомотив паровозный	шт.	12000
33828	Вагон пассажирский	шт.	1500
33829	Вагон грузовой	шт.	1500
33830	Вагон цистерна	шт.	1500
33831	Вагон-платформа	шт.	1500
33832	Вагон-платформа	шт.	1500
33833	Вагон-платформа	шт.	1500
33834	Вагон-платформа	шт.	1500
33835	Вагон-платформа	шт.	1500
33836	Вагон-платформа	шт.	1500
33837	Вагон-платформа	шт.	1500
33838	Вагон-платформа	шт.	1500
33839	Вагон-платформа	шт.	1500
33840	Вагон-платформа	шт.	1500
33841	Вагон-платформа	шт.	1500
33842	Вагон-платформа	шт.	1500
33843	Вагон-платформа	шт.	1500
33844	Вагон-платформа	шт.	1500
33845	Вагон-платформа	шт.	1500
33846	Вагон-платформа	шт.	1500
33847	Вагон-платформа	шт.	1500
33848	Вагон-платформа	шт.	1500
33849	Вагон-платформа	шт.	1500
33850	Вагон-платформа	шт.	1500
33851	Вагон-платформа	шт.	1500
33852	Вагон-платформа	шт.	1500
33853	Вагон-платформа	шт.	1500
33854	Вагон-платформа	шт.	1500
33855	Вагон-платформа	шт.	1500
33856	Вагон-платформа	шт.	1500
33857	Вагон-платформа	шт.	1500
33858	Вагон-платформа	шт.	1500
33859	Вагон-платформа	шт.	1500
33860	Вагон-платформа	шт.	1500
33861	Вагон-платформа	шт.	1500
33862	Вагон-платформа	шт.	1500
33863	Вагон-платформа	шт.	1500
33864	Вагон-платформа	шт.	1500
33865	Вагон-платформа	шт.	1500
33866	Вагон-платформа	шт.	1500
33867	Вагон-платформа	шт.	1500
33868	Вагон-платформа	шт.	1500
33869	Вагон-платформа	шт.	1500
33870	Вагон-платформа	шт.	1500
33871	Вагон-платформа	шт.	1500
33872	Вагон-платформа	шт.	1500
33873	Вагон-платформа	шт.	1500
33874	Вагон-платформа	шт.	1500
33875	Вагон-платформа	шт.	1500
33876	Вагон-платформа	шт.	1500
33877	Вагон-платформа	шт.	1500
33878	Вагон-платформа	шт.	1500
33879	Вагон-платформа	шт.	1500
33880	Вагон-платформа	шт.	1500
33881	Вагон-платформа	шт.	1500
33882	Вагон-платформа	шт.	1500
33883	Вагон-платформа	шт.	1500
33884	Вагон-платформа	шт.	1500
33885	Вагон-платформа	шт.	1500
33886	Вагон-платформа	шт.	1500
33887	Вагон-платформа	шт.	1500
33888	Вагон-платформа	шт.	1500
33889	Вагон-платформа	шт.	1500
33890	Вагон-платформа	шт.	1500
33891	Вагон-платформа	шт.	1500
33892	Вагон-платформа	шт.	1500
33893	Вагон-платформа	шт.	1500
33894	Вагон-платформа	шт.	1500
33895	Вагон-платформа	шт.	1500
33896	Вагон-платформа	шт.	1500
33897	Вагон-платформа	шт.	1500
33898	Вагон-платформа	шт.	1500
33899	Вагон-платформа	шт.	1500
33900	Вагон-платформа	шт.	1500

[Product Catalog - Toys and Home Goods](#)

A comprehensive catalog of toys and home goods, featuring a wide range of products from various brands, including remote control vehicles, building sets, lighting, kitchenware, and more.


lang:en score:14 filesize: 1.15 M page_count: 38 document date: 2019-06-27

Код	Наименование	Единица измерения	Цена
33827	Локомотив паровозный	шт.	12000
33828	Вагон пассажирский	шт.	1500
33829	Вагон грузовой	шт.	1500
33830	Вагон цистерна	шт.	1500
33831	Вагон-платформа	шт.	1500
33832	Вагон-платформа	шт.	1500
33833	Вагон-платформа	шт.	1500
33834	Вагон-платформа	шт.	1500
33835	Вагон-платформа	шт.	1500
33836	Вагон-платформа	шт.	1500
33837	Вагон-платформа	шт.	1500
33838	Вагон-платформа	шт.	1500
33839	Вагон-платформа	шт.	1500
33840	Вагон-платформа	шт.	1500
33841	Вагон-платформа	шт.	1500
33842	Вагон-платформа	шт.	1500
33843	Вагон-платформа	шт.	1500
33844	Вагон-платформа	шт.	1500
33845	Вагон-платформа	шт.	1500
33846	Вагон-платформа	шт.	1500
33847	Вагон-платформа	шт.	1500
33848	Вагон-платформа	шт.	1500
33849	Вагон-платформа	шт.	1500
33850	Вагон-платформа	шт.	1500
33851	Вагон-платформа	шт.	1500
33852	Вагон-платформа	шт.	1500
33853	Вагон-платформа	шт.	1500
33854	Вагон-платформа	шт.	1500
33855	Вагон-платформа	шт.	1500
33856	Вагон-платформа	шт.	1500
33857	Вагон-платформа	шт.	1500
33858	Вагон-платформа	шт.	1500
33859	Вагон-платформа	шт.	1500
33860	Вагон-платформа	шт.	1500
33861	Вагон-платформа	шт.	1500
33862	Вагон-платформа	шт.	1500
33863	Вагон-платформа	шт.	1500
33864	Вагон-платформа	шт.	1500
33865	Вагон-платформа	шт.	1500
33866	Вагон-платформа	шт.	1500
33867	Вагон-платформа	шт.	1500
33868	Вагон-платформа	шт.	1500
33869	Вагон-платформа	шт.	1500
33870	Вагон-платформа	шт.	1500
33871	Вагон-платформа	шт.	1500
33872	Вагон-платформа	шт.	1500
33873	Вагон-платформа	шт.	1500
33874	Вагон-платформа	шт.	1500
33875	Вагон-платформа	шт.	1500
33876	Вагон-платформа	шт.	1500
33877	Вагон-платформа	шт.	1500
33878	Вагон-платформа	шт.	1500
33879	Вагон-платформа	шт.	1500
33880	Вагон-платформа	шт.	1500
33881	Вагон-платформа	шт.	1500
33882	Вагон-платформа	шт.	1500
33883	Вагон-платформа	шт.	1500
33884	Вагон-платформа	шт.	1500
33885	Вагон-платформа	шт.	1500
33886	Вагон-платформа	шт.	1500
33887	Вагон-платформа	шт.	1500
33888	Вагон-платформа	шт.	1500
33889	Вагон-платформа	шт.	1500
33890	Вагон-платформа	шт.	1500
33891	Вагон-платформа	шт.	1500
33892	Вагон-платформа	шт.	1500
33893	Вагон-платформа	шт.	1500
33894	Вагон-платформа	шт.	1500
33895	Вагон-платформа	шт.	1500
33896	Вагон-платформа	шт.	1500
33897	Вагон-платформа	шт.	1500
33898	Вагон-платформа	шт.	1500
33899	Вагон-платформа	шт.	1500
33900	Вагон-платформа	шт.	1500

[Productos de alta calidad para el hogar y el entretenimiento](#)

Descubra una amplia gama de productos de alta calidad, desde electrónica y artículos para el hogar hasta juguetes y accesorios para niños. Encuentre las últimas novedades y ofertas.

lang:de score:14 filesize: 1.88 M page_count: 33 document date: 2019-03-01

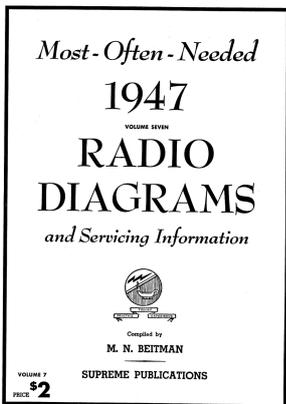

[pdf] Diagram

BEITMAN MANUALS Radio set diagrams and service data from 1930 to 1954 Beitman 1947 worldradiohistory Archive Rider SUPREME |||

Most Often AV Needed i9 VOLUME SEVEN amudimb NEW AGFJ S and Servicing Information VOLUME 7 PRICE ... q3 uo s43etu atp aapuas .10; pauinla.t st stsseqo atp equo 3543 luana alp y1- 341110 27nP3Ya peiQ **33510** Butlaupt ism alp ao 115ux wet 3 I am mint atm III aq lsntu 34535 issapsolg paupue4s awl Jo 54...

lang:es score:10 filesize: 8.04 M page_count: 194 document date: 2016-11-02