CHROMA 2161

CHROMA Acrylic Mural Paint Marker (Blacktop, 4 oz) User Manual

Introduction

The CHROMA Acrylic Mural Paint Marker is designed for creating vibrant and durable outdoor murals. This artist-grade paint marker features a 4 oz capacity of Blacktop colored acrylic paint, formulated to be lightfast and water-resistant. It offers excellent coverage and can be easily cleaned up with soap and water after use. This manual provides essential information for the proper setup, operation, and maintenance of your paint marker to ensure optimal performance and longevity.

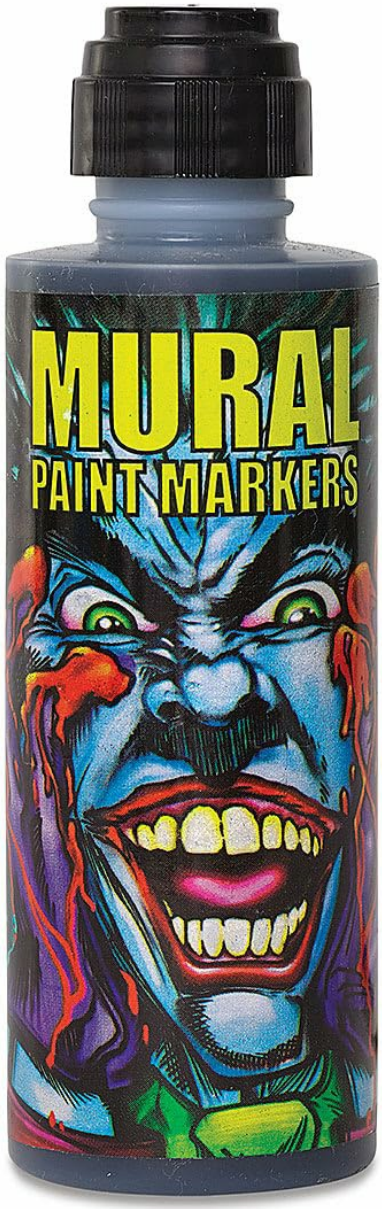

Image: CHROMA Acrylic Mural Paint Marker, Blacktop, 4 oz bottle. This image shows the product bottle, which contains the Blacktop acrylic mural paint. The bottle is designed for easy application and features the CHROMA brand logo.

Setup

1. **Unpack the Marker:** Carefully remove the CHROMA Acrylic Mural Paint Marker from its packaging. Inspect the bottle and applicator for any signs of damage.
2. **Prepare the Paint:** Before first use, ensure the cap is securely fastened. Shake the bottle vigorously for approximately 30-60 seconds to thoroughly mix the paint. This helps to ensure consistent color and flow.
3. **Prime the Applicator:** Remove the cap. Gently press the applicator nib onto a scrap surface (e.g., cardboard or paper) several times until the paint begins to flow consistently. Do not press excessively hard, as this can damage the nib.
4. **Prepare the Surface:** For best results, ensure your mural surface is clean, dry, and free of dust, grease, or loose particles. For highly porous surfaces or to achieve optimal adhesion and color vibrancy, a suitable primer may be applied beforehand.

Operating Instructions

- **Application:** Hold the marker firmly and apply paint to the desired surface. The applicator allows for controlled lines and fills. For broader strokes, apply more pressure; for finer details, use lighter pressure.
- **Layering:** Allow previous layers of paint to dry to the touch before applying subsequent layers. This prevents smudging and ensures color integrity. Drying time may vary depending on temperature, humidity, and paint thickness.
- **Drying Time:** The paint is typically dry to the touch within 30 minutes to an hour, but full cure can take up to 24-48 hours. Avoid exposing freshly painted surfaces to heavy moisture or abrasion during the curing period.
- **Safety Precautions:**
  - Use in a well-ventilated area.
  - Avoid contact with eyes and prolonged skin contact. In case of contact, rinse thoroughly with water.
  - Keep out of reach of children and pets.
  - Do not ingest.

Maintenance

- **Cleaning the Applicator:** After each use, wipe any excess paint from the applicator nib with a damp cloth. If the nib becomes clogged, gently rinse it under lukewarm water until clear, then dry thoroughly before re-capping.
- **Storage:** Always replace the cap securely after use to prevent the paint from drying out. Store the marker upright in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Long-Term Storage:** For extended periods of non-use, ensure the cap is tightly sealed. If the paint thickens over time, a small amount of distilled water can be added and mixed thoroughly, but this should be done sparingly to avoid compromising paint quality.

Troubleshooting

Problem	Possible Cause	Solution
Paint not flowing	Paint settled, applicator clogged, or not primed.	Shake bottle vigorously. Re-prime applicator by pressing on a scrap surface. Clean applicator nib if clogged (see Maintenance).
Uneven coverage	Insufficient surface preparation, inconsistent application pressure, or paint not mixed well.	Ensure surface is clean and primed. Apply paint with even pressure. Shake bottle thoroughly before and during use.
Paint drying too quickly on nib	Exposure to air, high temperature, or low humidity.	Work in a shaded or cooler area if possible. Recap immediately when not in use. Clean nib frequently.
Color appears dull	Paint not mixed properly, or applied too thinly.	Shake bottle thoroughly. Apply additional layers once previous layers are dry. Ensure surface is appropriately primed.

Specifications

- **Brand:** CHROMA
- **Model Number:** 2161

- **Color:** Blacktop
- **Paint Type:** Acrylic
- **Finish Type:** Matte
- **Item Volume:** 4 Fluid Ounces (approx. 118 ml)
- **Special Feature:** Non Toxic
- **Indoor/Outdoor Usage:** Outdoor
- **Surface Recommendation:** Versatile (Walls, Metal, Concrete, Plastic, etc.)
- **Item Weight:** 0.4 Pounds (approx. 181 grams)
- **Water Resistance Level:** Water Resistant
- **Included Components:** Applicator
- **UPC:** 092200021619

Warranty and Support

For specific warranty information or technical support regarding your CHROMA Acrylic Mural Paint Marker, please refer to the product packaging or contact CHROMA customer service directly. Contact details are typically available on the manufacturer's official website or product labeling.
Manufacturer: Chroma
Website: www.chromaonline.com (*Note: This is a placeholder link, please verify the actual manufacturer website for support.*)

© 2023 CHROMA. All rights reserved. This manual is for informational purposes only.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question