Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Leifheit 56673

Leifheit Click System Telescopic Handle 56673

Model: 56673

Introduction

The Leifheit Click System Telescopic Handle is a versatile tool designed to be compatible with various Leifheit cleaning attachments. Its innovative Easy-Click function allows for quick and secure attachment changes, making it an essential component for efficient household cleaning. This handle is extendable, providing optimal reach for different cleaning tasks.

Setup

To set up your Leifheit Click System Telescopic Handle, follow these steps:

1. **Unpack the Handle:** Carefully remove the telescopic handle from its packaging.
2. **Extend the Handle:** Twist the handle sections counter-clockwise to unlock, then pull to extend to your desired length. Twist clockwise to lock the handle securely in place. The handle can be extended from approximately 75 cm (29.5 inches) to 135 cm (53.15 inches).
3. **Attach a Cleaning Head:** Align the Leifheit cleaning head (sold separately) with the Easy-Click mechanism at the top of the handle. Push the cleaning head firmly onto the handle until you hear a distinct "click," indicating it is securely locked.



Image: The Leifheit Click System Telescopic Handle, shown in its compact form, ready for extension and attachment of various cleaning tools.



Image: An illustration demonstrating the Leifheit Click System, highlighting how various cleaning attachments, such as mops, dusters, and window cleaners, can be easily connected and disconnected from the telescopic handle.

Operating

Once a cleaning head is attached, the Leifheit Click System Telescopic Handle is ready for use. Its adjustable length makes it suitable for a wide range of cleaning tasks, from floor mopping to reaching high surfaces.

- **Adjusting Length:** For different tasks, adjust the handle length as described in the Setup section. A shorter length is ideal for close-up work, while a longer length provides extended reach for ceilings, high windows, or large floor areas.
- **Using with Attachments:** Operate the handle in conjunction with the specific Leifheit cleaning attachment. For example, when used with a floor mop, apply appropriate pressure and motion for effective cleaning.
- **Storage:** After use, the handle features an anti-slip head and a 360° swivel hanging hole for convenient storage, allowing it to be hung on a hook to save space.

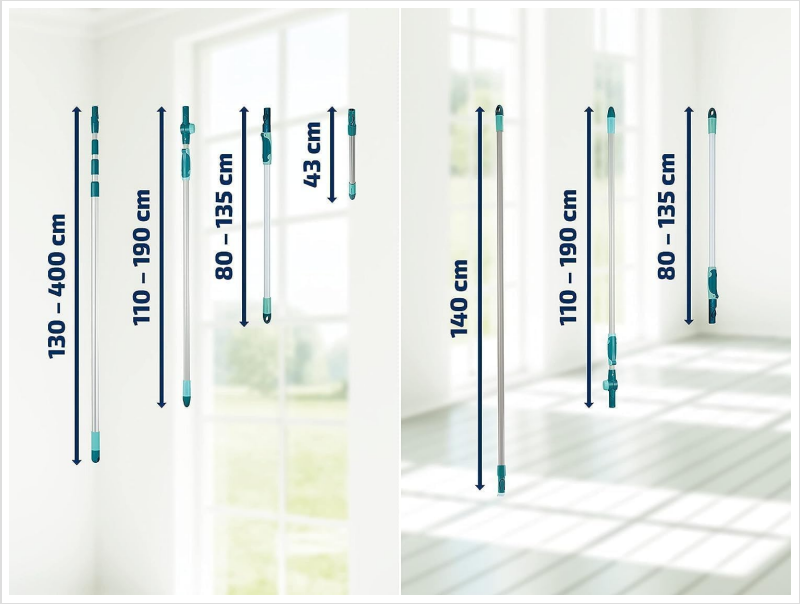


Image: A visual representation of the different adjustable lengths of Leifheit telescopic handles, including the 80-135 cm range of this specific model, illustrating its versatility for various cleaning heights.

Maintenance

Proper maintenance ensures the longevity and optimal performance of your telescopic handle:

- **Cleaning:** Wipe the handle with a damp cloth to remove any dirt or residue. Avoid using harsh abrasive cleaners that could damage the finish.
- **Drying:** Ensure the handle is completely dry before storing to prevent corrosion, especially if it has been exposed to water.
- **Storage:** Store the handle in a dry place, ideally hanging it by its swivel hole to keep it off the floor and prevent bending or damage.

Troubleshooting

If you encounter issues with your Leifheit Click System Telescopic Handle, consider the following:

- **Handle Not Extending/Retracting Smoothly:**
  • Ensure the locking mechanism is fully disengaged (twisted counter-clockwise).
  • Check for any debris or obstructions within the telescopic sections. Clean if necessary.
- **Cleaning Head Not Clicking In Securely:**
  • Verify that you are using a Leifheit Click System compatible cleaning head.
  • Ensure the attachment point on both the handle and the cleaning head is clean and free of obstructions.
  • Apply firm, direct pressure until you hear the click. Do not force it if misaligned.
- **Handle Feels Loose When Locked:**
  • Ensure the handle sections are twisted clockwise firmly to engage the lock. Do not overtighten.

Specifications

Feature	Detail
Brand	Leifheit
Model Number	56673
Material	Alloy Steel, Aluminum
Adjustable Length	75 cm to 135 cm (29.5 inches to 53.15 inches)
Item Weight	14.8 ounces
Special Features	Adjustable, Ergonomic, Easy-Click Function, Anti-slip head, 360° Swivel Hanging Hole
Color	Gray

Warranty Information

Specific warranty details for the Leifheit Click System Telescopic Handle (Model 56673) are not provided in this manual. For comprehensive warranty information, please refer to the official Leifheit website or contact Leifheit customer service directly.

Support

For further assistance, technical support, or inquiries regarding your Leifheit Click System Telescopic Handle,

please contact Leifheit customer service through their official website or the contact information provided with your purchase. You can also visit the Leifheit Store on Amazon for more product information.

© 2024 Leifheit. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B00BHBLYGA

More documents and user manuals: **https://manuals.plus/**