Omega 32630405003001

Omega Speedmaster Automatic Watch User Manual

Model: 32630405003001 | Brand: Omega

Product Overview

The Omega Men's 32630405003001 Speedmaster is a sophisticated analog display automatic self-wind watch, crafted with a durable stainless steel case and bracelet. It features a striking blue dial with three black subdials, protected by a scratch-resistant synthetic-sapphire crystal. This timepiece is designed for reliability and style, suitable for various occasions.

- Round watch in silver-tone stainless steel with a rotating black bezel.
- Blue dial with clear stick markers and three functional black subdials.
- Powered by an automatic self-wind movement, eliminating the need for battery replacement.
- Equipped with a synthetic-sapphire crystal for superior scratch resistance.
- Secure link bracelet with a reliable foldover-clasp closure.
- Water resistant up to 10 ATM (100 meters or 330 feet), suitable for swimming and snorkeling.





Figure 1: Front view of the Omega Speedmaster watch, highlighting its blue dial and stainless steel construction.

Your browser does not support the video tag.

Video 1: A 360-degree view of the Omega Speedmaster watch, showcasing its design and features from all angles.

Setup

Initial Winding and Time Setting

As an automatic self-wind watch, the Omega Speedmaster gains power from the motion of your wrist. For initial setup or

after a period of inactivity, it is recommended to manually wind the watch:

1. **Winding:** Unscrew the crown (if applicable, refer to specific model instructions) and turn it clockwise approximately 30-40 times. This will build up a power reserve.
2. **Setting Time:** Pull the crown out to the second position. Turn the crown to set the hour and minute hands to the correct time. Push the crown back in to start the watch.
3. **Setting Date:** If your model includes a date function, pull the crown out to the first position and turn it to adjust the date. Avoid setting the date between 9 PM and 3 AM, as this can damage the movement.

Bracelet Adjustment

The stainless steel bracelet can be adjusted for a comfortable fit. This typically involves removing or adding links. It is highly recommended to have this procedure performed by a qualified watchmaker or an authorized Omega service center to prevent damage to the bracelet or clasp mechanism.



Figure 2: The Omega Speedmaster watch worn on a wrist, illustrating its size and how it sits.

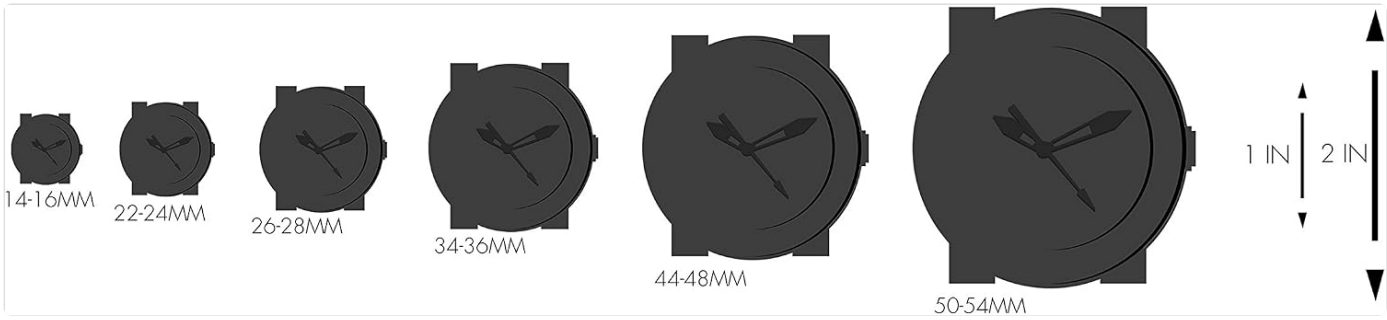


Figure 3: A general watch size guide, useful for understanding different watch diameters relative to wrist size. The Omega Speedmaster 32630405003001 has a 40mm case diameter.

Operating Instructions

Automatic Movement

Your Omega Speedmaster is equipped with an automatic self-winding mechanical movement. This means the watch is powered by the natural motion of your arm. When worn regularly (approximately 8-12 hours a day), the watch will remain wound. If the watch is not worn for an extended period, it may stop. In this case, manually wind it as described in the "Setup" section.

Chronograph Function

The Speedmaster model 32630405003001 features a chronograph (stopwatch) function, controlled by the pushers located on the side of the case, typically above and below the crown.

- **Start/Stop:** Press the top pusher to start the chronograph. Press it again to stop the timing.
- **Reset:** After stopping the chronograph, press the bottom pusher to reset all chronograph hands (seconds, minutes, hours) back to zero.
- The three black subdials on the main dial display the elapsed time: typically a small seconds hand, a 30-minute counter, and a 12-hour counter.

Tachymeter Bezel

The black bezel features a tachymeter scale. This scale can be used in conjunction with the chronograph to measure speed over a known distance (e.g., 1 kilometer or 1 mile). Start the chronograph at the beginning of the distance and stop it at the end. The number on the tachymeter scale indicated by the chronograph seconds hand will show the average speed in units per hour.

Care and Maintenance

- **Cleaning:** Clean your watch regularly with a soft, damp cloth. For the stainless steel case and bracelet, a mild soap solution can be used, ensuring to rinse thoroughly and dry completely. Avoid harsh chemicals or abrasive materials.
- **Water Resistance:** Your watch is water resistant to 100 meters (330 feet). This makes it suitable for swimming and snorkeling. However, it is not designed for scuba diving. Always ensure the crown is fully pushed in and screwed down (if applicable) before exposing the watch to water. Do not operate the pushers or crown while the watch is wet or submerged.
- **Temperature Extremes:** Avoid exposing your watch to extreme temperatures (above 60°C / 140°F or below 0°C / 32°F) or sudden temperature changes, as this can affect the movement and seals.
- **Magnetic Fields:** Keep your watch away from strong magnetic fields (e.g., speakers, refrigerators, MRI machines), as magnetism can affect the accuracy of mechanical movements.
- **Servicing:** For optimal performance and longevity, it is recommended to have your Omega watch serviced by an authorized Omega service center every 3-5 years. Regular servicing ensures the movement is lubricated, seals are intact, and accuracy is maintained.

Troubleshooting

Problem	Possible Cause	Solution
Watch has stopped or is losing time.	Insufficient power reserve (not worn enough), magnetism, or need for servicing.	Manually wind the watch (30-40 turns of the crown). If the issue persists, consult an authorized service center for demagnetization or servicing.
Condensation under the crystal.	Temperature change or compromised water resistance.	Immediately take the watch to an authorized service center. Do not attempt to dry it yourself.
Chronograph hands do not reset to zero.	Requires adjustment or servicing.	Consult an authorized service center for calibration.

For any issues not listed here or if solutions do not resolve the problem, please contact Omega customer support or an authorized service center.

Technical Specifications

Model Number: 32630405003001

Brand: Omega

Movement: Automatic Self-Wind

Case Material: Stainless Steel

Bracelet Material: Stainless Steel

Dial Color: Blue

Crystal: Synthetic-Sapphire

Water Resistance: 10 ATM (100 meters / 330 feet)

Product Dimensions: 5.91 x 5.91 x 5.91 inches

Item Weight: 2.3 Pounds

First Available Date: March 11, 2013

Warranty and Support

Your Omega Speedmaster watch is covered by a manufacturer's warranty against defects in materials and workmanship. The duration and terms of the warranty may vary by region and purchase date. Please refer to the warranty card included with your purchase for specific details.

For warranty claims, service, or technical support, please contact an authorized Omega boutique or service center. You can find a list of authorized locations and contact information on the official Omega website: www.omegawatches.com/customer-service.

When contacting support, please have your watch's model number (32630405003001) and serial number readily available.

© 2024 Omega. All rights reserved. This manual is for informational purposes only.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question