Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Beurer GS205

Beurer Weight Scale GS205 User Manual

Model: GS205

Glass Electronic Sequence 150 kg

1. Introduction

Thank you for choosing the Beurer Weight Scale GS205. This electronic glass scale is designed for accurate and convenient weight measurement in your home. Featuring an extra-large display and a sleek design, it offers ease of use and reliable performance. Please read this manual carefully before first use to ensure proper operation and to maximize the lifespan of your device.

2. Safety Information

- Always place the scale on a firm, flat surface to ensure accurate readings. Avoid carpets or uneven floors.
- The scale has a maximum capacity of 150 kg (330 lb / 23 st 8 lb). Do not exceed this weight to prevent damage.
- The glass platform can be slippery when wet. Ensure the surface is dry before stepping on it.
- Do not jump on the scale or drop heavy objects on it, as this may damage the glass or internal components.
- Keep the scale away from strong electromagnetic fields.
- This device is intended for personal use only and not for medical or commercial purposes.
- Keep batteries out of reach of children.

3. Product Overview

The Beurer GS205 features a modern design with a clear glass platform and an easy-to-read digital display. Key components include:

- **Glass Platform:** Made from toughened safety glass.
- **LCD Display:** Extra-large display with 40 mm digit size and blue illumination for clear visibility.
- **Battery Compartment:** Located on the underside of the scale.
- **Unit Conversion Switch:** Allows selection between kilograms (kg), pounds (lb), and stones (st).



Figure 3.1: Top view of the Beurer GS205 scale with its illuminated digital display showing a weight reading.



Figure 3.2: Detailed view of the extra-large LCD display, highlighting the 40mm digit size and the 'beurer' branding.

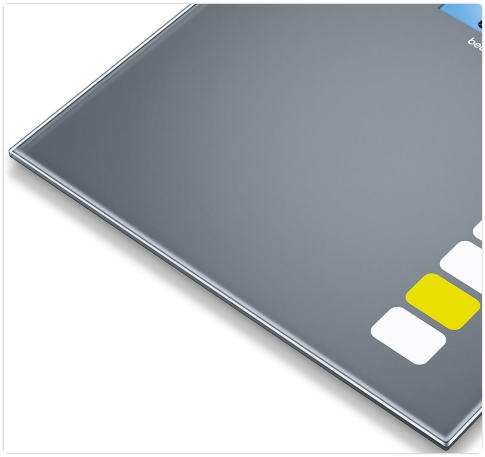


Figure 3.3: Side profile of the scale, illustrating its flat and sleek construction.

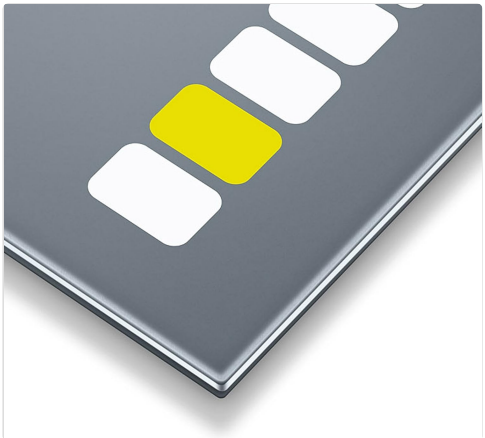


Figure 3.4: Corner detail of the scale,

showcasing the polished edge of the safety glass platform.

4. Setup

1. **Unpacking:** Carefully remove the scale from its packaging. Retain the packaging for future storage or transport.
2. **Battery Installation:**
    - Locate the battery compartment on the underside of the scale.
    - Open the battery compartment cover.
    - Insert **2 Lithium Metal batteries** (not included) according to the polarity indicators (+/-).
    - Close the battery compartment cover securely.
3. **Placement:** Place the scale on a hard, flat, and stable surface. Avoid soft surfaces like carpets, which can affect accuracy.
4. **Unit Selection:** On the underside of the scale, locate the switch to select your preferred unit of measurement: kilograms (kg), pounds (lb), or stones (st). Set it to your desired unit before first use.

5. Operating Instructions

1. **Initial Activation (Tap-On Function):** Gently tap the center of the scale platform with your foot. The display will illuminate and show '0.0' or '0.00', indicating it is ready for use.
2. **Taking a Measurement:**
    - Once '0.0' is displayed, step onto the scale barefoot and stand still, distributing your weight evenly.
    - Your weight will be displayed on the screen. The reading will flash a few times before stabilizing.
    - Step off the scale. The display will remain illuminated for a few seconds before automatically switching off (auto-shut-off function) to conserve battery life.
3. **Consistent Measurement:** For consistent results, weigh yourself at the same time of day, preferably in the morning before breakfast and after using the restroom.

6. Maintenance and Care

- **Cleaning:** Clean the scale with a damp cloth and a mild detergent if necessary. Do not use abrasive cleaning agents or immerse the scale in water.
- **Storage:** Store the scale in a dry place at room temperature. Avoid extreme temperatures or high humidity.
- **Battery Replacement:** If the display shows a 'Lo' or 'Err' message, or if the display becomes dim, it indicates low battery. Replace both batteries with new ones of the same type (2 Lithium Metal batteries).
- **Disposal:** Dispose of batteries and the device in accordance with local regulations. Do not dispose of them with household waste.

7. Troubleshooting

Problem	Possible Cause	Solution
Scale does not turn on / No display	Batteries are dead or incorrectly inserted.	Check battery polarity. Replace batteries (2 Lithium Metal batteries).

Problem	Possible Cause	Solution
Inaccurate readings / Fluctuating weight	Scale is on an uneven or soft surface (e.g., carpet). Scale was moved after initial activation.	Place scale on a hard, flat surface. Tap scale to reactivate if moved. Ensure you stand still.
Display shows 'Err' or 'O-Ld'	Overload indication; weight exceeds maximum capacity (150 kg).	Step off the scale. Ensure the weight is within the specified limit.
Display shows 'Lo'	Low battery indication.	Replace batteries.

8. Specifications

Model Number	GS205 (Item model number: 756.62)
Brand	Beurer
Type	Electronic Glass Weight Scale
Weight Capacity Maximum	150 kg (330 lb / 23 st 8 lb)
Graduation	100 grams
Display Type	LCD with blue illumination
Digit Size	40 mm
Platform Material	Safety Glass
Power Source	2 Lithium Metal batteries (required, not included)
Product Dimensions	30 x 30 x 1.9 cm
Item Weight	1.56 kg (1560 Grams)
Special Features	Extra-large display, Backlit Display, Flat construction, Automatic switch-off, Overload indication, Low-battery indicator

9. Warranty and Support

Beurer products are manufactured to the highest quality standards. For specific warranty terms and conditions, please refer to the warranty card included with your purchase or visit the official Beurer website. In case of technical issues or questions not covered in this manual, please contact Beurer customer support or the retailer where you purchased the product.

For further assistance, you may visit the product page on Amazon.eg.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B00BTQDOXY

More documents and user manuals: **https://manuals.plus/**