GoVideo DV1140

Go Video DV1140 DVD and VCR Combo Unit User Manual

Your comprehensive guide to setting up, operating, and maintaining your Go Video DV1140.

1. Introduction

The Go Video DV1140 is a versatile dual-deck unit designed to play both DVD discs and VHS tapes. This manual provides essential information for proper installation, operation, and care of your device, ensuring optimal performance and longevity.



Front view of the Go Video DV1140 DVD and VCR combo unit, showing the DVD tray on the left, VCR slot on the right, and front panel controls. The included remote control is positioned above the unit.

2. Setup

2.1 Unpacking

Carefully remove all components from the packaging. Ensure the following items are present:

- Go Video DV1140 DVD/VCR Combo Unit
- Remote Control
- A/V Cables (Yellow, Red, White)
- Power Cord

2.2 Connecting to Your TV

The Go Video DV1140 connects to your television using standard A/V cables. Follow these steps:

1. Locate the A/V output jacks on the back of the DV1140 unit (Yellow for Video, Red for Right Audio, White for Left Audio).
2. Locate the corresponding A/V input jacks on your television. These are typically labeled "Video In," "Audio In," or "Component In."
3. Connect the Yellow cable from the DV1140's Video Out to the TV's Video In.
4. Connect the Red cable from the DV1140's Right Audio Out to the TV's Right Audio In.
5. Connect the White cable from the DV1140's Left Audio Out to the TV's Left Audio In.
6. Plug the power cord into the DV1140 and then into a wall outlet.
7. Turn on your TV and select the correct input source (e.g., Video 1, AV, Input 2) that corresponds to where you connected the DV1140.

3. Operating Your Go Video DV1140

3.1 Basic DVD Playback

1. Press the **POWER** button on the unit or remote to turn on the DV1140.
2. Press the **DVD/VCR** button on the remote or front panel to select DVD mode.
3. Press the **DVD EJECT** button to open the DVD tray.
4. Place a DVD disc onto the tray with the label side facing up.
5. Press the **DVD EJECT** button again to close the tray. The disc will begin to load and play automatically or display the DVD menu.
6. Use the remote control's navigation buttons and **PLAY**, **PAUSE**, **STOP**, **REW**, and **FF** buttons for playback control.

3.2 Basic VCR Playback

1. Press the **POWER** button on the unit or remote to turn on the DV1140.
2. Press the **DVD/VCR** button on the remote or front panel to select VCR mode.
3. Insert a VHS tape into the VCR slot. The unit will automatically pull the tape in.
4. The tape may begin to play automatically, or you may need to press the **PLAY** button on the unit or remote.
5. Use the remote control's **PLAY**, **PAUSE**, **STOP**, **REW**, and **FF** buttons for playback control.
6. To eject the tape, press the **VCR EJECT** button.


3.3 Recording to VHS

The DV1140 allows you to record video to a VHS tape. Ensure a blank or recordable VHS tape is inserted.

1. Select the input source you wish to record from (e.g., Line 2 In for external devices).
2. Press the **REC** button on the front panel or remote control. Recording will begin immediately.
3. To stop recording, press the **STOP** button.

3.4 Using the Remote Control

The included remote control provides full functionality for both DVD and VCR operations. Familiarize yourself with the button layout for convenient control.

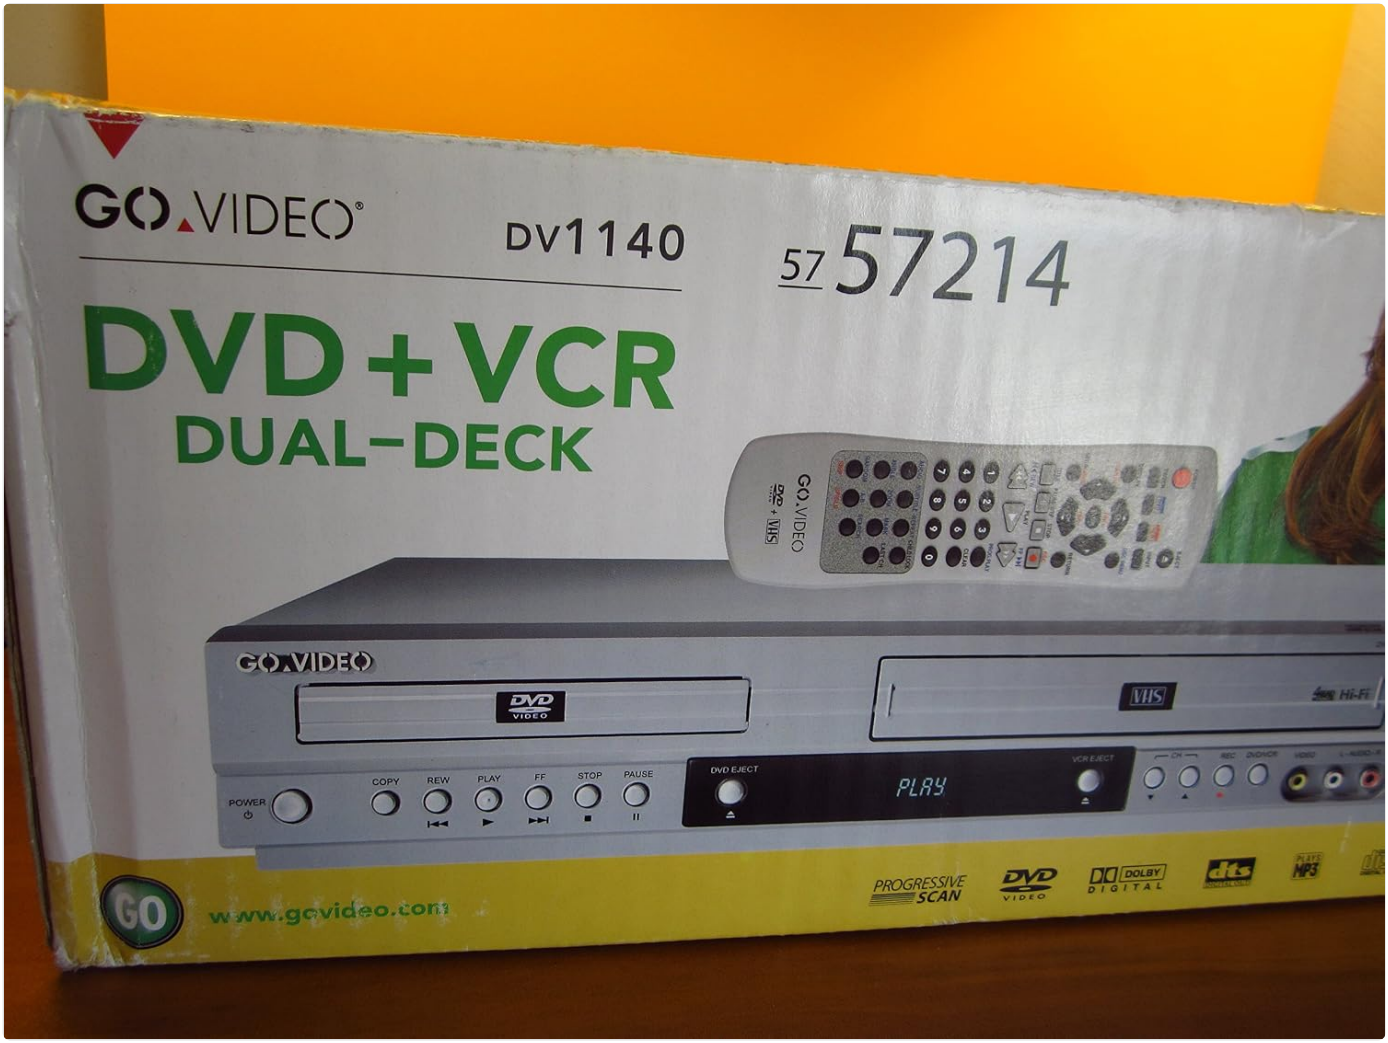

An overhead view of the Go Video DV1140 DVD and VCR combo unit with its remote control placed on top. This image provides a clear look at the layout of the remote's buttons.



A detailed view of the Go Video DV1140's front panel, highlighting the power button, DVD playback controls (Copy, Rew, Play, FF, Stop, Pause), DVD Eject, VCR Eject, and VCR controls (CH-, CH+, REC, DV/VCR, Video, L-Audio-R, Line 2 In).

4. Maintenance

4.1 Cleaning the Unit

- Always unplug the unit before cleaning.
- Use a soft, dry cloth to wipe the exterior of the unit.
- Do not use liquid cleaners, aerosols, or abrasive chemicals, as they may damage the finish.
- For the DVD tray and VCR slot, use specialized cleaning kits designed for these components if necessary, following their instructions carefully.

4.2 General Care

- Avoid placing the unit in direct sunlight or near heat sources.
- Ensure adequate ventilation around the unit to prevent overheating.
- Do not block ventilation openings.
- Keep the unit away from moisture and excessive dust.

5. Troubleshooting

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
No power	Power cord not securely connected; Power outlet not active.	Ensure power cord is firmly plugged into the unit and a working wall outlet. Test the outlet with another device.
No picture or sound	Incorrect TV input selected; A/V cables not connected properly.	Select the correct input source on your TV (e.g., AV1, Video). Check that all A/V cables are securely connected to the correct color-coded jacks on both the DV1140 and the TV.
Disc/Tape does not play	Disc/Tape inserted incorrectly; Disc/Tape is dirty or damaged; Incorrect mode selected.	Ensure disc is label-side up and tape is fully inserted. Clean the disc/tape. Press the DVD/VCR button to select the correct playback mode.
Remote control not working	Batteries are dead or inserted incorrectly; Obstruction between remote and unit.	Replace batteries with new ones, ensuring correct polarity. Remove any objects blocking the remote's signal path to the unit's sensor.

6. Specifications

Feature	Detail
Model Name	DV1140
Media Type	VHS, DVD
Special Feature	Multi-Format Playback
Resolution	1280x720
Connector Type	RF, A/V (RCA)
Audio Output Mode	Surround
Item Weight	11.35 Pounds
Package Dimensions	20.4 x 13.2 x 6.6 inches

7. Warranty Information

For detailed warranty information regarding your Go Video DV1140, please refer to the documentation included with your original purchase or visit the official Go Video website. Warranty terms and conditions may vary.

8. Customer Support

If you encounter issues not covered in this manual or require further assistance, please visit the Go Video customer support section on their official website for FAQs, additional resources, or contact information. Always provide your model number (DV1140) when seeking support.

© 2024 GoVideo. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question