Quictent 1501CWS-02

Quictent Premium 13x20 Party Tent Instruction Manual

Model: 1501CWS-02

1. Important Safety Information

Please read and understand all instructions and safety warnings before assembling and using this product. Failure to follow these instructions may result in product damage, personal injury, or property damage.

- This party tent is **not fireproof**. Keep all fire sources, including open flames, heaters, and cooking equipment, away from the tent fabric.
- Do not use this tent in severe weather conditions, including heavy winds, snow, or extreme rain. High winds can cause structural failure and damage.
- Ensure the tent is properly anchored to the ground using all provided stakes and ropes. Consider purchasing additional heavy-duty stakes and tie-down straps for increased stability, especially in areas prone to wind.
- Always ensure adequate ventilation if using any heat sources inside the tent, and never leave them unattended.
- Supervise children around the tent to prevent accidents.

2. Product Overview

The Quictent Premium 13x20 Party Tent is designed for various outdoor events, offering a spacious and protected area. It features a robust galvanized steel frame and a waterproof PE fabric cover with UV protection.

Key Features:

- **Sturdy Steel Frame:** Constructed with heavy-duty 38mm (1.5 inch) white powder-coated galvanized steel tubes and 42mm (1.66 inch) metal connectors for corrosion resistance and strong support.
- **Waterproof and UV Protection:** The top cover is made of 180g imported PE fabric, providing 100% waterproofing and blocking 99% of harmful UV rays.

- **Excellent Ventilation:** Includes 6 removable sidewalls and 2 zipper doors, allowing for cross-ventilation and adaptable configurations.
- **Convenient Storage:** Comes with durable Oxford black carry bags for easy storage and transport of components.



Image: The Quictent 13x20 Party Tent fully assembled, showcasing its use for an outdoor event with tables and chairs.

3. Specifications

Feature	Detail
Brand	Quictent
Model Number	1501CWS-02
Size	13x20 feet (236.22 x 118.11 x 114.17 inches)
Floor Area	260 Square Feet

Feature	Detail
Item Weight	125 Pounds
Material	Alloy Steel (Frame), 180g PE Fabric (Cover)
Color	White
Water Resistance Level	Waterproof
UV Protection	100% UV Block
Assembly Required	Yes

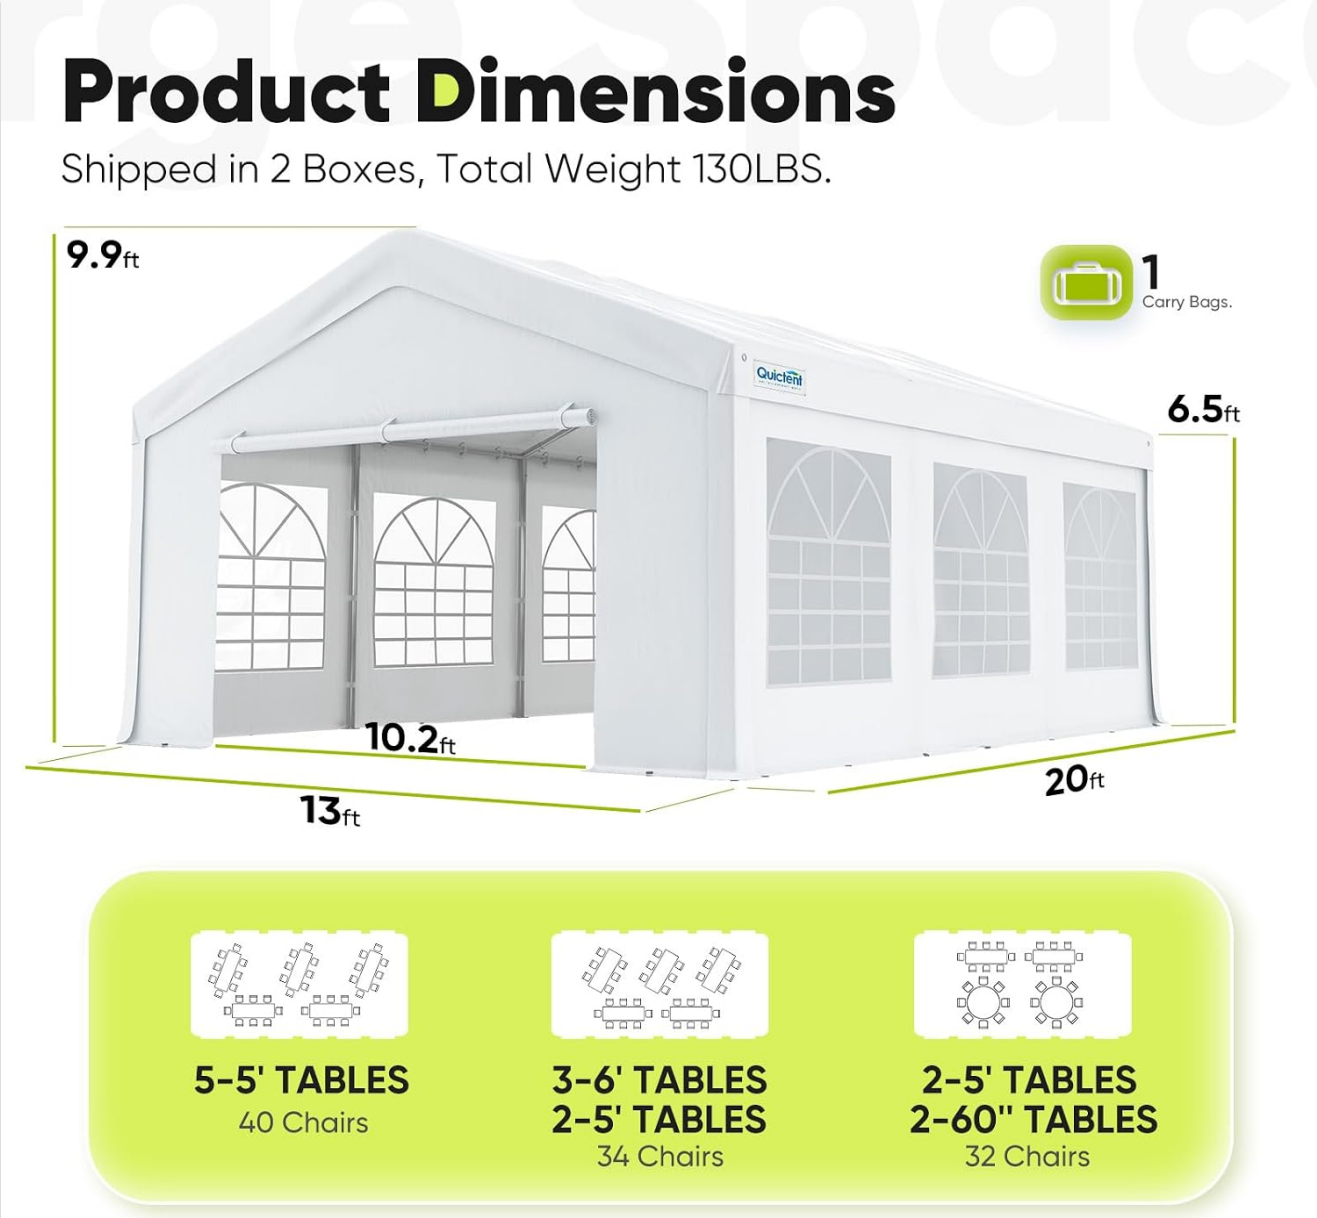


Image: Diagram illustrating the product dimensions of the 13x20 foot tent, including width, length, and height measurements.

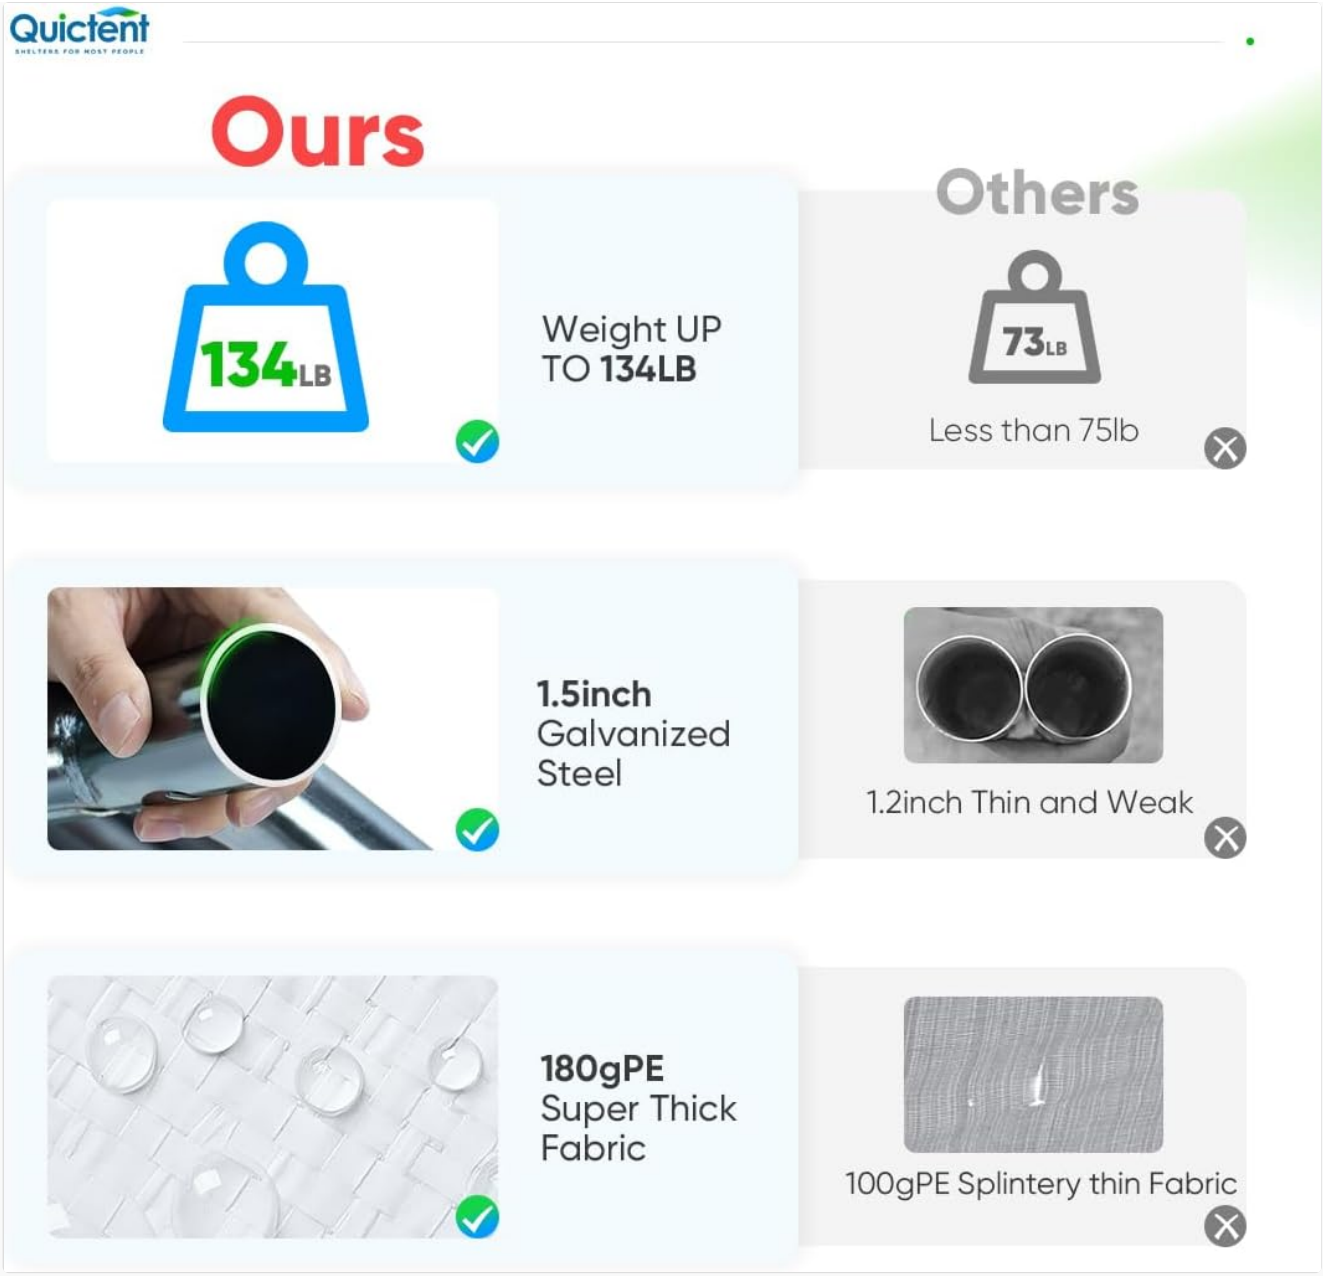


Image: Comparison of Quictent tent features (weight, galvanized steel frame, 180gPE fabric) against typical competitor products.

4. Setup Instructions

Assembly of the Quictent Party Tent requires at least 2-3 adults. For optimal efficiency, 3-4 people are recommended. Lay out all components before beginning assembly.


Estimated Setup Time:

- For the 13x20 ft model: Approximately 1 hour with 2 adults.

General Assembly Steps:

1. **Unpack and Organize:** Carefully unpack all boxes. Lay out all poles, connectors, and fabric covers. It is highly recommended to organize pieces by type and size to streamline the process.
2. **Assemble the Roof Frame:** Connect the roof poles and connectors according to the diagram. Ensure all connections are secure.
3. **Attach the Roof Cover:** Drape the roof cover over the assembled roof frame. Center the cover as accurately as possible to ensure an even fit and prevent undue stress on the fabric.

4. **Install Leg Poles:** Attach the leg poles to the roof frame.
5. **Attach Sidewalls and Doors:** Before extending the leg poles to their full height, attach the side zipped end panels. Then, secure the remaining sidewalls using the provided fasteners (e.g., bungee balls, Velcro).
6. **Anchor the Tent:** Securely anchor the tent to the ground using all provided stakes and ropes. For enhanced stability, especially in windy conditions, consider using heavier-duty stakes and additional tie-down straps.

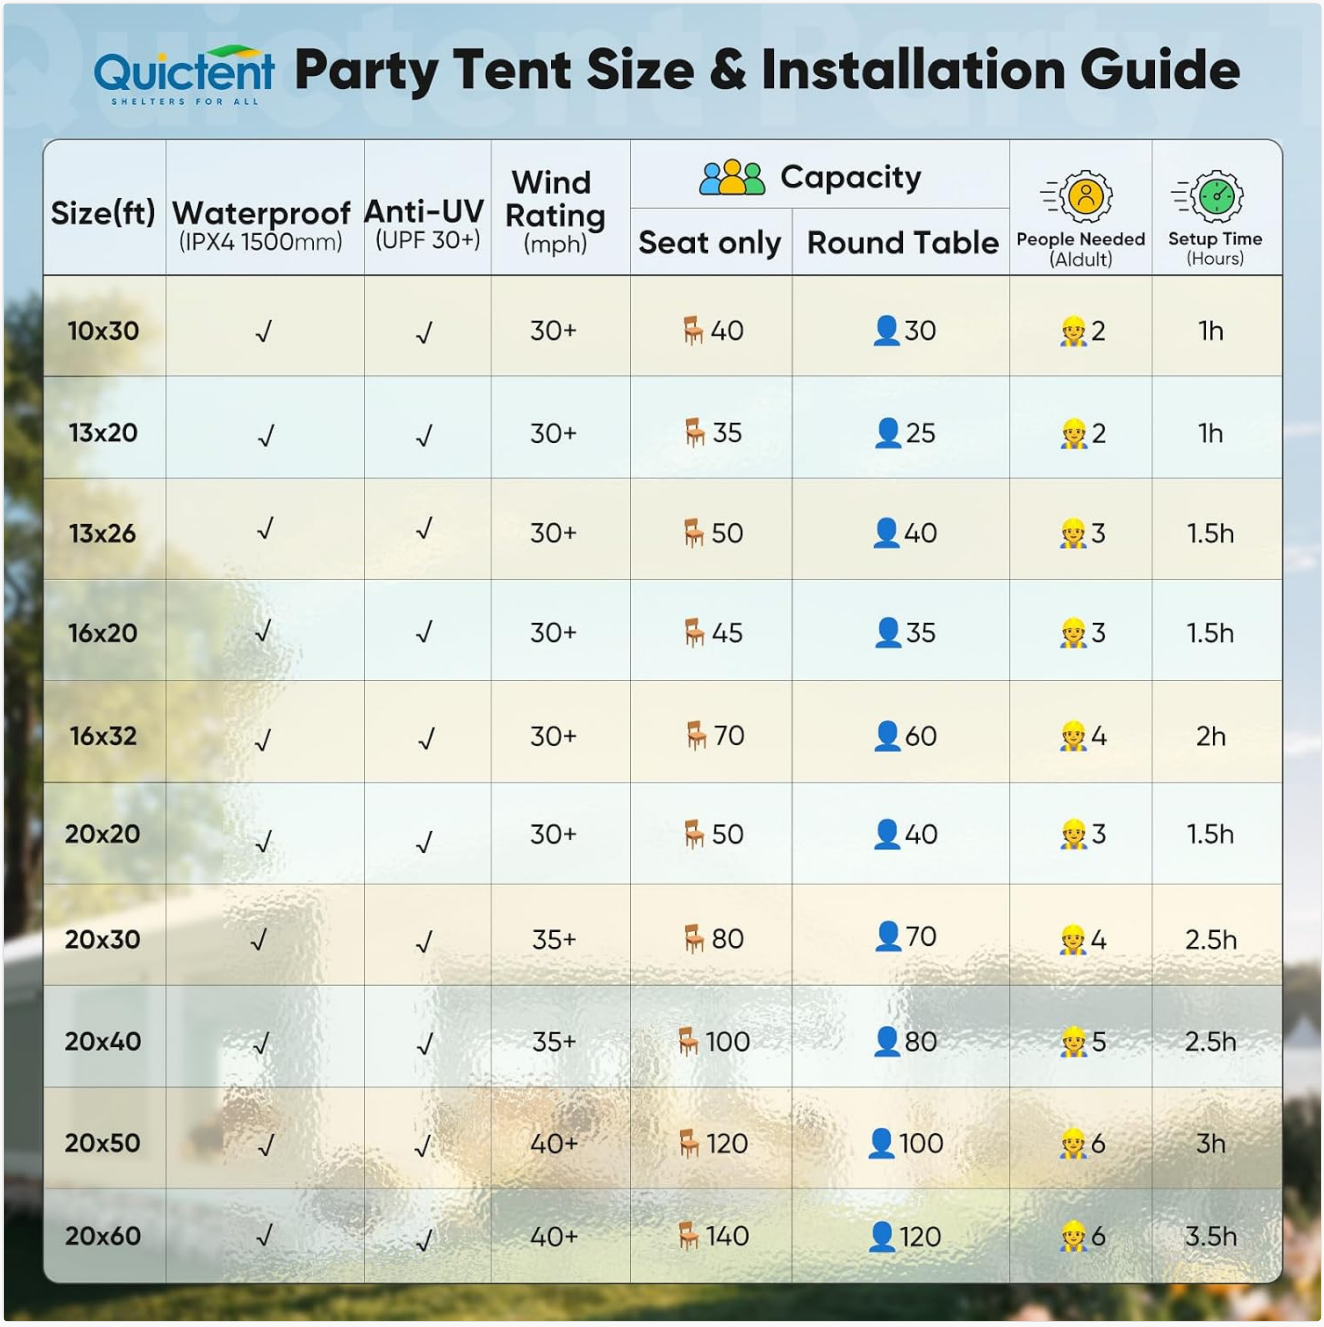

Size(ft)	Waterproof (IPX4 1500mm)	Anti-UV (UPF 30+)	Wind Rating (mph)	Capacity		People Needed (Aldult)	Setup Time (Hours)
				Seat only	Round Table		
10x30	√	√	30+	40	30	2	1h
13x20	√	√	30+	35	25	2	1h
13x26	√	√	30+	50	40	3	1.5h
16x20	√	√	30+	45	35	3	1.5h
16x32	√	√	30+	70	60	4	2h
20x20	√	√	30+	50	40	3	1.5h
20x30	√	√	35+	80	70	4	2.5h
20x40	√	√	35+	100	80	5	2.5h
20x50	√	√	40+	120	100	6	3h
20x60	√	√	40+	140	120	6	3.5h

Image: Quictent Party Tent Size & Installation Guide table, detailing specifications and setup requirements for various tent sizes, including the 13x20 ft model.

Your browser does not support the video tag.

Video: Detailed assembly guide for a Quictent party tent, demonstrating the step-by-step installation process. (Duration: 6:45)

5. Operating the Tent

The Quictent Party Tent offers flexible configurations to suit your event needs and weather conditions.

Sidewall and Door Management:

- The tent includes 6 removable sidewalls and 2 zipper doors. These can be attached or removed individually.
- For optimal ventilation on warm days, remove some or all sidewalls.
- The zipper doors allow for easy entry and exit and can be rolled up and secured when open.
- When fully enclosed, the sidewalls and doors provide protection from light rain and wind.



Image: Demonstrates the versatility of the removable sidewalls, showing configurations for complete dismantling, partial dismantling, and a fully enclosed tent.

6. Maintenance

Proper maintenance will extend the life of your Quictent Party Tent.

- **Cleaning the Fabric:** Clean the PE fabric cover and sidewalls with mild soap and water. Do not use harsh chemicals or abrasive cleaners, as these can damage the material and its waterproof coating. Allow the fabric to dry completely before storage to prevent mildew.
- **Frame Care:** Inspect the galvanized steel frame periodically for any signs of rust or damage. Clean any dirt or debris from the poles and connectors.

- **Storage:** When not in use, disassemble the tent and store all components in the provided carry bags in a dry, cool place, away from direct sunlight.
- **Inspect Before Each Use:** Before each assembly, inspect all poles, connectors, fabric, stakes, and ropes for wear or damage. Replace any damaged parts immediately.

7. Troubleshooting

Here are solutions to common issues you might encounter:

- **Tent instability in wind:** The provided stakes may be inadequate for strong winds or challenging ground. Always use all anchoring points. Consider purchasing heavier-duty ground stakes and additional tie-down straps to secure the tent more firmly. **Do not use the tent in winds exceeding its rated capacity (30+ mph for 13x20 ft model).**
- **Fabric cover does not fit correctly:** Ensure the frame is assembled squarely and the cover is centered before attempting to secure it. If the cover feels too tight, gently adjust the frame to ensure it is not skewed. Avoid excessive pulling on the fabric to prevent tearing.
- **Missing or damaged parts upon delivery:** If any parts are missing or damaged, contact Quictent customer service immediately for replacements.
- **Water leakage:** Ensure the roof cover is properly tensioned and secured to prevent water pooling. Check for any tears or punctures in the fabric.

8. Warranty and Support

Quictent stands behind the quality of its products.

- **Accessories Coverage:** Enjoy lifetime coverage for accessories such as connectors, pegs, ropes, and bungee balls.
- **Covers and Poles Coverage:** A 1-year coverage is provided for the tent covers and poles.
- **Parts Supply:** Lifetime 50% parts supply is available beyond the normal 1-year coverage period.

Customer Support:

For any questions, concerns, or to claim warranty service, please contact Quictent customer service. Refer to your purchase documentation or the Quictent official website for the most current contact information.

When contacting support, please have your model number (1501CWS-02) and proof of purchase readily available.

© 2026 Quictent. All rights reserved.