Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Bajaj 2310 ETC

Bajaj 23 L Convection Microwave Oven (2310 ETC) User Manual

Model: 2310 ETC

Introduction

This manual provides essential instructions for the safe and efficient operation of your Bajaj 23 L Convection Microwave Oven, Model 2310 ETC. Please read it thoroughly before using the appliance and retain it for future reference.

Important Safety Instructions

To reduce the risk of fire, electric shock, injury to persons, or exposure to excessive microwave energy when using your appliance, follow basic precautions, including:

- Read all instructions before using the appliance.
- Do not attempt to operate this oven with the door open or otherwise tampered with.
- Do not heat liquids or other foods in sealed containers as they are liable to explode.
- Ensure proper ventilation around the appliance.
- This appliance is designed for countertop installation.
- Use only microwave-safe cookware.
- **Child Lock Feature:** Activate the child lock to prevent accidental operation by children. Refer to the 'Operating Instructions' section for details.

Product Overview

The Bajaj 23 L Convection Microwave Oven (2310 ETC) offers versatile cooking options including microwave, grill, and convection modes. It features a 23-liter capacity, suitable for small families and bachelors.



Figure 1: Front view of the Bajaj 23 L Convection Microwave Oven (2310 ETC).

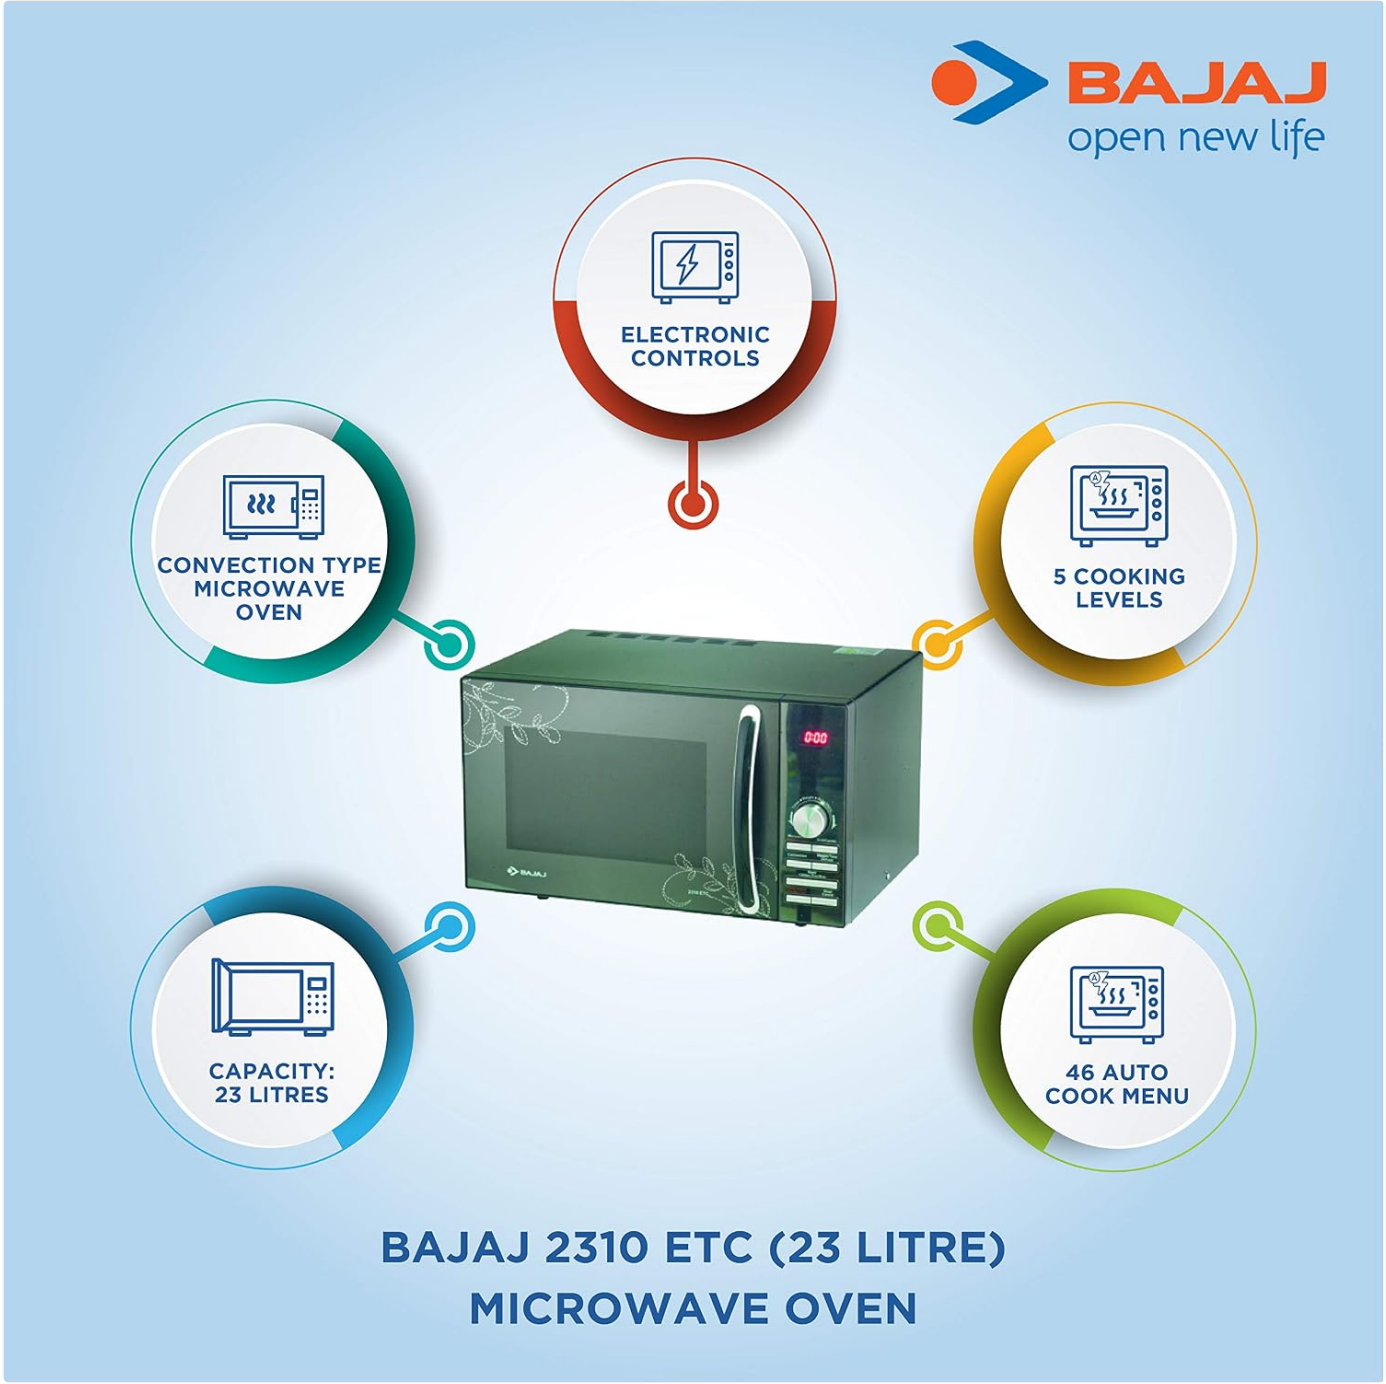


Figure 2: Key features including electronic controls, convection type, 5 cooking levels, 46 auto cook menu, and 23 litres capacity.

Setup

Unpacking

- Carefully remove the microwave oven and all packing materials from the carton.
- Check the oven for any damage, such as dents or a misaligned door. Do not operate if damaged.
- Ensure all included components are present: 1 microwave unit with attachment, instruction manual, warranty card.

Placement

- Place the oven on a flat, stable surface strong enough to hold its weight (approximately 14 kg).
- Ensure adequate ventilation: leave at least 10 cm of space at the back, 20 cm on the sides, and 30 cm above the oven.
- Do not block air vents.

- Keep the oven away from heat sources and water.

Electrical Connection

- Plug the oven into a grounded electrical outlet.
- Ensure the power supply matches the specifications listed on the appliance.

Operating Instructions

Control Panel

The oven features tactile buttons and a jog dial for setting time, temperature, and selecting functions.



Figure 3: Control panel with various function buttons and the central jog dial.

Basic Microwave Cooking

1. Place food in a microwave-safe container inside the oven.
2. Close the oven door securely.
3. Use the jog dial to set the desired cooking time.
4. Press the "Start/+30Sec./Confirm" button to begin cooking.

Convection Cooking

Convection mode is ideal for baking, roasting, and crisping.

1. Place food on the appropriate rack (if provided) in the oven.
2. Press the "Convection" button.
3. Use the jog dial to set the desired temperature and cooking time.
4. Press "Start/+30Sec./Confirm" to begin.

Grill/Combination Cooking

Use Grill mode for browning and toasting. Combination modes combine microwave and grill/convection for faster cooking with browning.

1. Select "Grill/Combi." button.
2. Choose the desired grill or combination setting using the jog dial.
3. Set cooking time and press "Start/+30Sec./Confirm".



Figure 4: Example of food being prepared using the oven's cooking functions.

Auto Cook Menu

The oven features an Auto Cook menu with preset programs for various dishes.

1. Press the "Auto Menu" button.
2. Rotate the jog dial to select the desired auto cook program.
3. Press "Start/+30Sec./Confirm" to confirm and start.

Defrost Function

Use the defrost function to thaw frozen foods by weight or time.

1. Place frozen food in the oven.
2. Press the "Weight/Time Defrost" button.
3. Use the jog dial to select defrost by weight or time, and adjust accordingly.
4. Press "Start/+30Sec./Confirm" to begin defrosting.

Child Lock

To activate the child lock, press and hold the "Stop/Cancel" button for approximately 3 seconds until a lock indicator appears on the display. To deactivate, repeat the process.

Maintenance and Cleaning

- Always unplug the oven before cleaning.
- Clean the oven interior and exterior with a damp cloth and mild detergent.
- Do not use abrasive cleaners or harsh chemicals.
- The glass turntable can be removed and washed in warm soapy water or a dishwasher.
- For odor removal, place a bowl of water with lemon slices inside and microwave for a few minutes.

Troubleshooting

Problem	Possible Cause	Solution
Oven does not start	Power cord not plugged in; Door not closed properly; Fuse blown	Check power connection; Ensure door is latched; Check household fuse/circuit breaker
Food not heating	Incorrect cooking time/power level; Non-microwave safe dish	Adjust settings; Use appropriate cookware
Light not working	Bulb needs replacement	Contact customer service for bulb replacement

Specifications

Feature	Specification
Brand	Bajaj
Model	2310 ETC
Capacity	23 Litres
Oven Cooking Mode	Convection
Wattage	800 Watts
Installation Type	Countertop
Special Features	Tact Button/Jog Dial, Child Lock, Auto Cook, Defrost
Item Weight	14 kg

Feature	Specification
Item Dimensions (LxWxH)	30 x 35 x 25 Centimeters

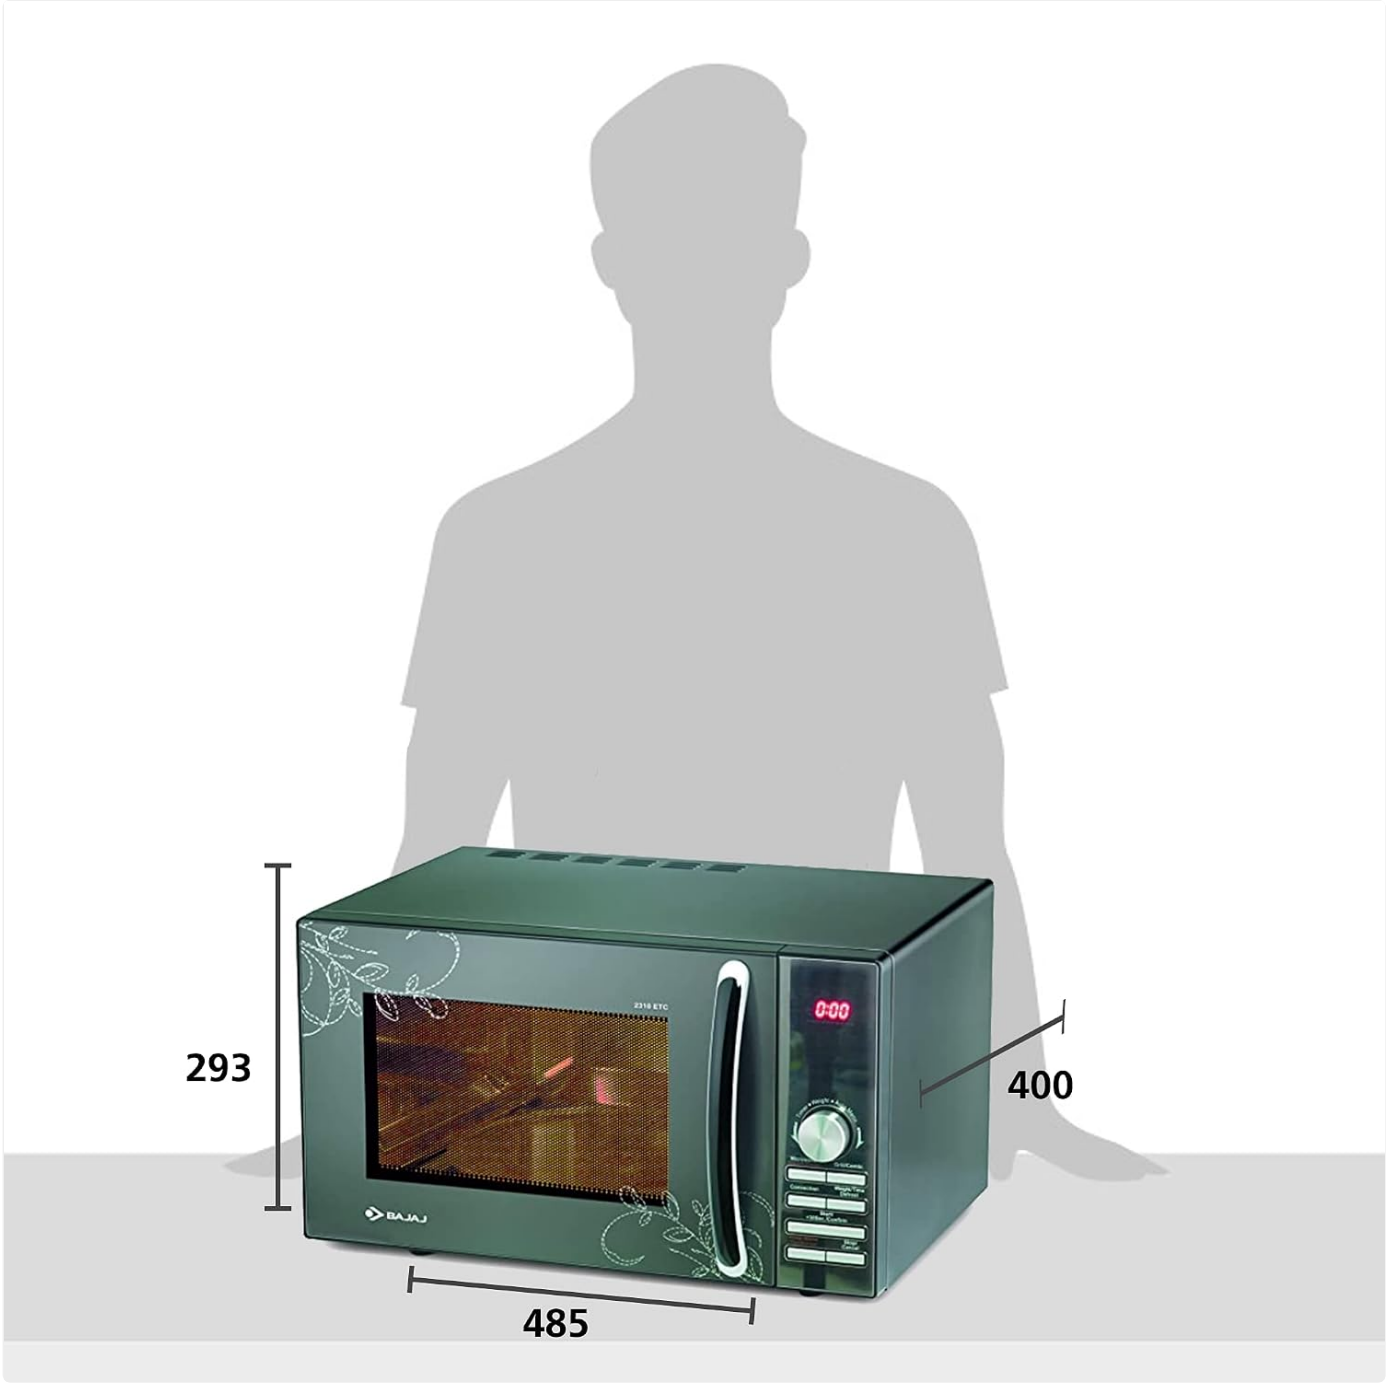


Figure 5: Dimensional overview of the microwave oven.

Warranty and Support

This product comes with a**1-year warranty** on the product. Please refer to the warranty card included in the packaging for detailed terms and conditions.
For technical assistance, service, or warranty claims, please contact Bajaj customer support.
Manufacturer: Imported and Marketed by Bajaj Electricals Ltd, 45/47, Veer Nariman Road, Mumbai, 400001.

© 2023 Bajaj Electricals Ltd. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

Can I use a baking tray and cake tin made of aluminum in the Bajaj 2310 ETC convection microwave oven for baking cakes and cookies?

Yes, you can use aluminum baking trays and cake tins in your Bajaj 2310 ETC, but ONLY when using the Convection mode. Here are the specific rules for your model based on the cooking...

Read full answer

Open the live page

https://manuals.plus/asin/B00F15AF22

More documents and user manuals: **https://manuals.plus/**