FABER MIRROR BK BRS X/V A90 LOGIC

FABER MIRROR BK BRS X/V A90 LOGIC Range Hood User Manual

Model: MIRROR BK BRS X/V A90 LOGIC

This manual provides essential information for the safe and efficient use of your FABER MIRROR BK BRS X/V A90 LOGIC wall-mounted range hood. Please read it thoroughly before installation and operation.

1. Safety Information

Always observe the following safety precautions to reduce the risk of fire, electric shock, or injury.

- **Electrical Safety:** Ensure the electrical installation complies with local regulations. Disconnect power before any maintenance or cleaning.
- **Installation:** Installation must be performed by a qualified technician. Ensure adequate ventilation in the room when the range hood is used simultaneously with appliances burning gas or other fuels.
- **Flammable Materials:** Do not flambé under the range hood. Do not leave frying pans unattended during use, as overheated oil can ignite.
- **Cleaning:** Regularly clean the grease filters to prevent fire hazards. Do not use abrasive or corrosive cleaning agents.
- **Children:** This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.

2. Setup and Installation

The FABER MIRROR BK BRS X/V A90 LOGIC is a wall-mounted range hood designed for recirculation. Proper installation is crucial for optimal performance and safety.

2.1 Unpacking and Inspection

Carefully remove the range hood from its packaging. Inspect for any damage during transit. Retain packaging materials for potential future transport or return.

2.2 Mounting the Hood

The hood should be mounted securely to a sturdy wall. Refer to the technical drawing for precise measurements and recommended mounting heights above your cooking surface.

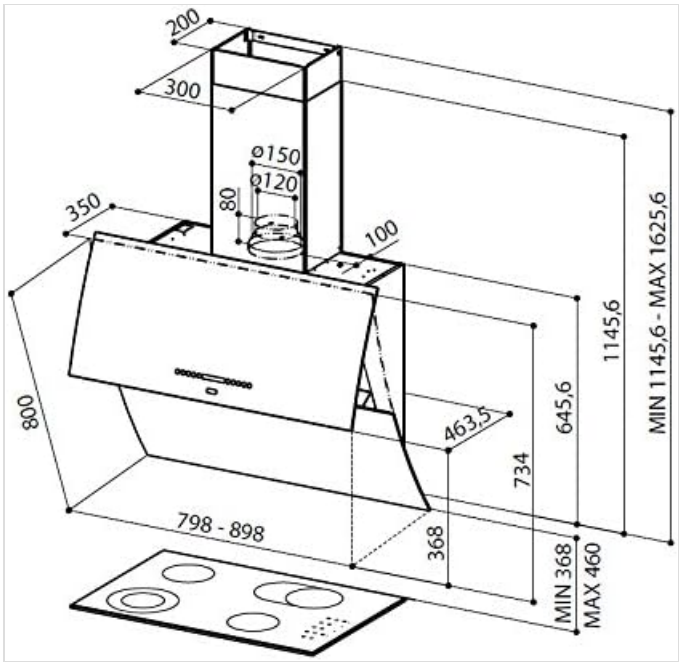


Figure 1: Technical drawing of the Faber Mirror BK BRS X/V A90 LOGIC Range Hood, illustrating its dimensions and installation requirements. This diagram provides critical measurements for proper placement and ducting.

2.3 Electrical Connection

Connect the hood to a suitable power supply according to local electrical codes. This appliance requires a dedicated circuit. It is highly recommended that a qualified electrician performs the electrical connection.

2.4 Recirculation Setup

As a recirculation type hood, it filters air through charcoal filters (not included, sold separately) and returns it to the kitchen. Ensure the air outlet is unobstructed.

3. Operating Instructions

Your FABER MIRROR BK BRS X/V A90 LOGIC range hood features intuitive controls for efficient operation.



Figure 2: Faber Mirror BK BRS X/V A90 LOGIC Range Hood with panels open, showcasing the internal filters and LED lighting. The control panel is visible on the upper glass panel.

3.1 Control Panel Overview

The control panel is integrated into the glass surface. It typically includes buttons for power, fan speed selection, and lighting.



Figure 3: Faber Mirror BK BRS X/V A90 LOGIC Range Hood with panels closed, showing its sleek black glass and stainless steel design. The touch controls are subtly integrated.

3.2 Fan Speed Selection

Press the fan speed buttons to adjust the extraction power. Use lower speeds for light cooking and higher speeds for intense cooking or strong odors. The maximum extraction capacity is 860 m^3/h.

3.3 Lighting

Press the light button to turn the integrated LED lighting on or off, illuminating your cooking area.

4. Maintenance and Cleaning

Regular maintenance ensures the longevity and efficiency of your range hood.

4.1 Cleaning Grease Filters

The metal grease filters (Type: Metal) should be cleaned regularly, typically every 2-4 weeks depending on usage. They can be washed by hand with hot soapy water or in a dishwasher on a low-temperature cycle.

- To remove filters: Open the glass panels and unlatch the filters.
- After cleaning, ensure filters are completely dry before re-installing.

4.2 Replacing Charcoal Filters (for Recirculation)

If using the hood in recirculation mode, charcoal filters (not included) need to be replaced periodically, usually every 3-6 months. Refer to the specific charcoal filter instructions for replacement.

4.3 Exterior Cleaning

Clean the exterior surfaces (glass and stainless steel) with a soft cloth and a mild, non-abrasive cleaner. Avoid harsh chemicals or abrasive pads that could scratch the finish.

5. Troubleshooting

Before contacting customer service, please refer to the following table for common issues and their potential solutions.

Problem	Possible Cause	Solution
Hood does not turn on.	No power supply; tripped circuit breaker.	Check power connection; reset circuit breaker.
Low suction power.	Clogged grease filters; charcoal filters saturated.	Clean grease filters; replace charcoal filters.
Excessive noise.	Loose components; improper installation.	Check for loose parts; ensure secure mounting.
Lights not working.	Faulty LED module; loose connection.	Contact qualified service personnel for replacement.

6. Technical Specifications

Feature	Detail

Feature	Detail
Model Name	MIRROR BK BRS X/V A90 LOGIC
Manufacturer	FABER S.p.A.
Reference Number	110.0255.527
Type of Extraction	Recirculation
Maximum Extraction Capacity	860 m^3/h
Noise Level (Max)	72 dB
Installation Type	Wall-mounted
Color	Black, Stainless Steel
Housing Material	Glass, Stainless Steel
Grease Filter Type	Metal
Motor Power	270 W
Dimensions (W x D x H)	898 mm x 350 mm x 734 mm (min height 734mm, max 1145.6mm)
Weight	31 kg
Global Trade Item Number (GTIN)	08015139038055

7. Warranty and Support

For warranty information, technical support, or service requests, please contact FABER S.p.A. directly or refer to the warranty card included with your product. Keep your purchase receipt as proof of purchase.

For further assistance, please visit the official FABER website or contact their customer service department.

© 2023 FABER S.p.A. All rights reserved. Information in this manual is subject to change without notice.