Signstek YL-99

Signstek YL-99 Keyless Entry Door Lock Instruction Manual

Model: YL-99

1. Introduction

This manual provides detailed instructions for the installation, operation, and maintenance of your Signstek YL-99 Keyless Entry Door Lock. Please read this manual thoroughly before installation and use to ensure proper function and security.



Image 1: Signstek YL-99 Keyless Entry Door Lock, Satin Nickel. This electronic door knob features a keypad for keyless access and is designed for enhanced security.

2. Setup and Installation

Installation of the Signstek YL-99 Keyless Entry Door Lock requires basic tools, primarily a screwdriver. Follow these steps for a successful installation:

2.1. Door Compatibility

The lock is designed to fit most standard US doors. Verify your door's dimensions:

- **Backset:** 2-3/8 inches (60mm) or 2-3/4 inches (70mm)
- **Door Hole Diameter:** 2-1/8 inches (54mm)
- **Door Thickness:** 1.3 to 2.15 inches

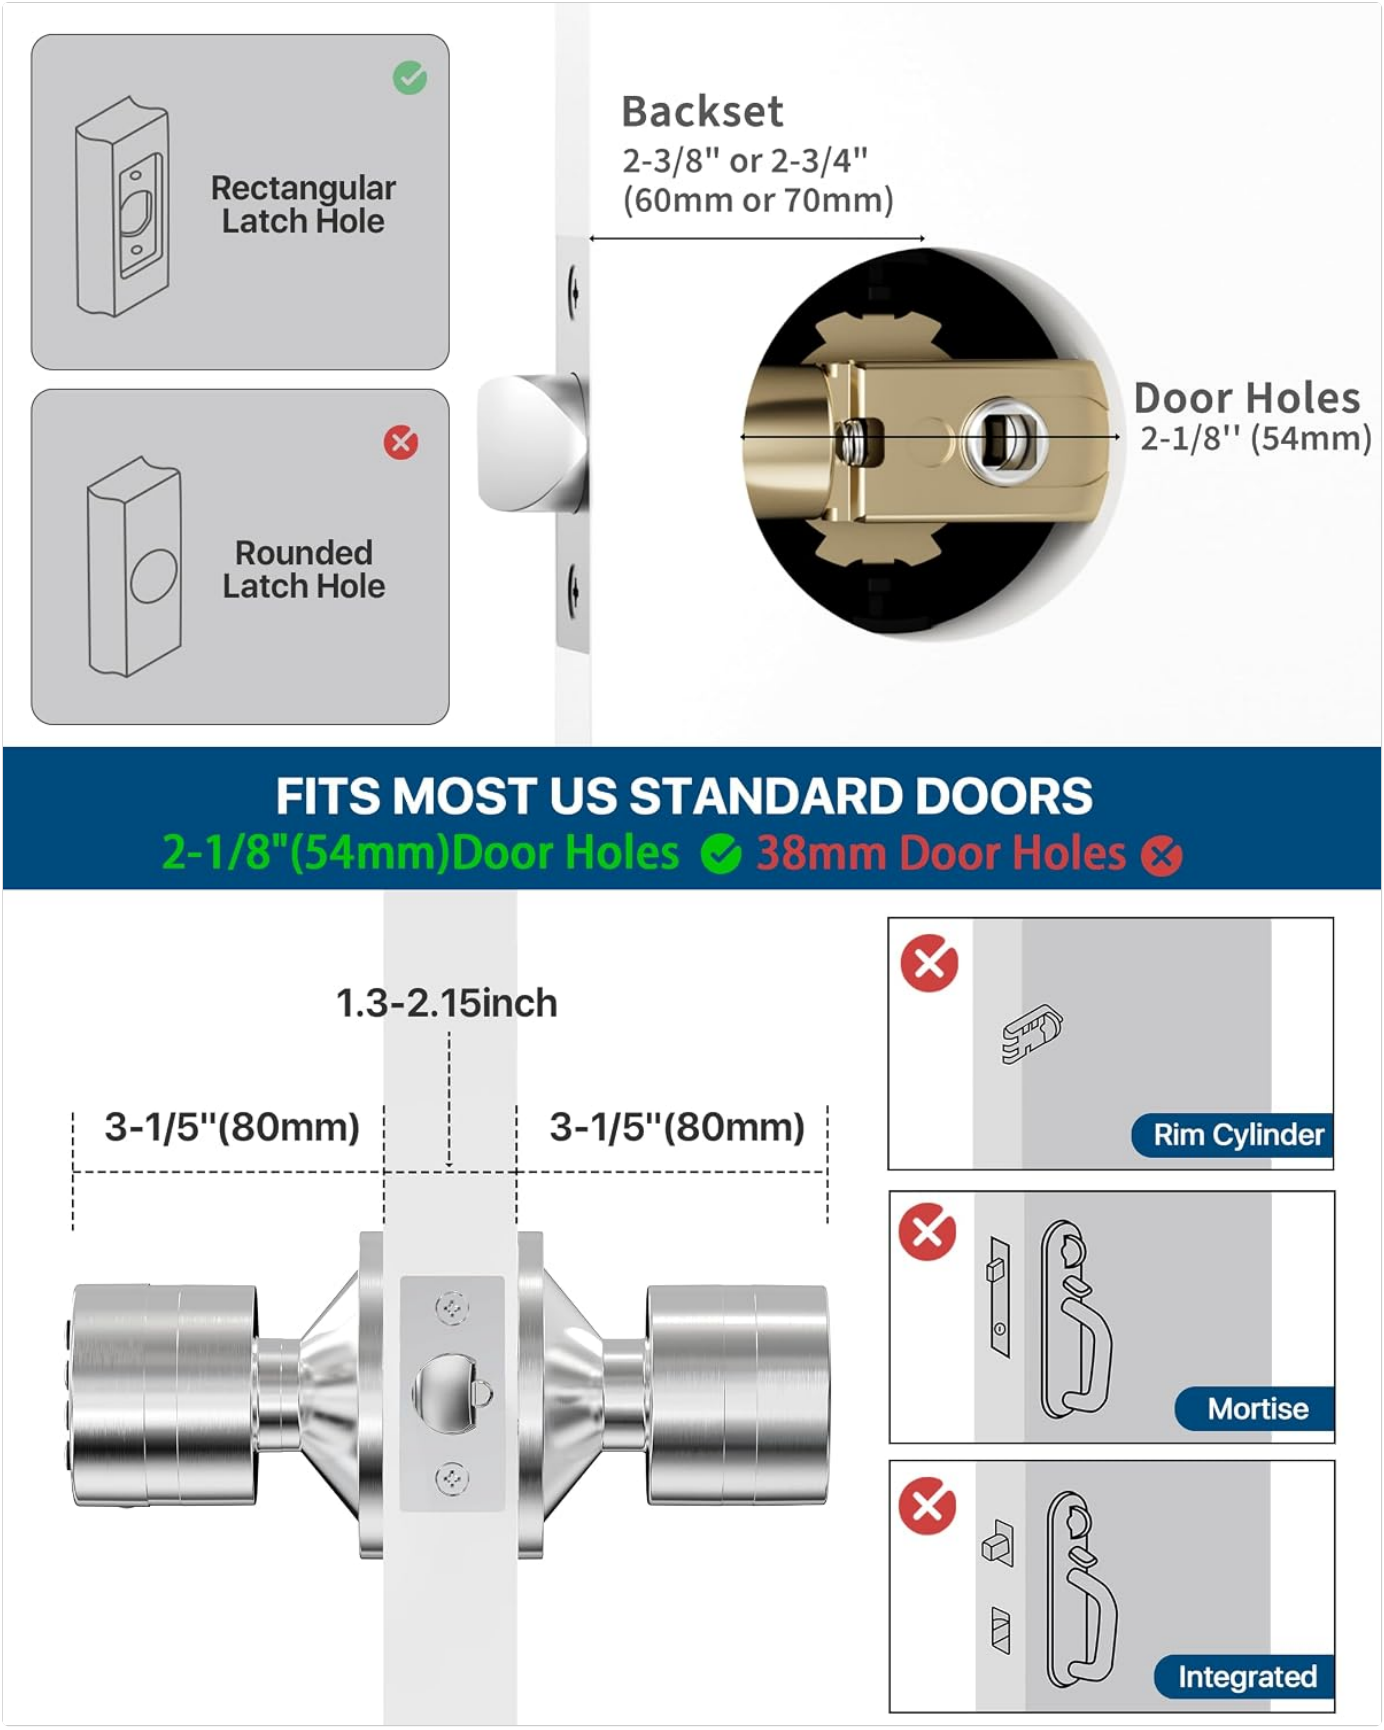


Image 2: Door dimension requirements for the Signstek YL-99 Keyless Entry Door Lock, illustrating compatible backset and door hole sizes.

2.2. Battery Installation

The lock requires 4 AAA batteries (not included). Install them into the battery box located within the interior knob assembly.

1. Remove the battery cover from the interior knob.

2. Insert 2 AAA batteries into each of the two battery slots. Ensure correct polarity.
3. Replace the battery cover.

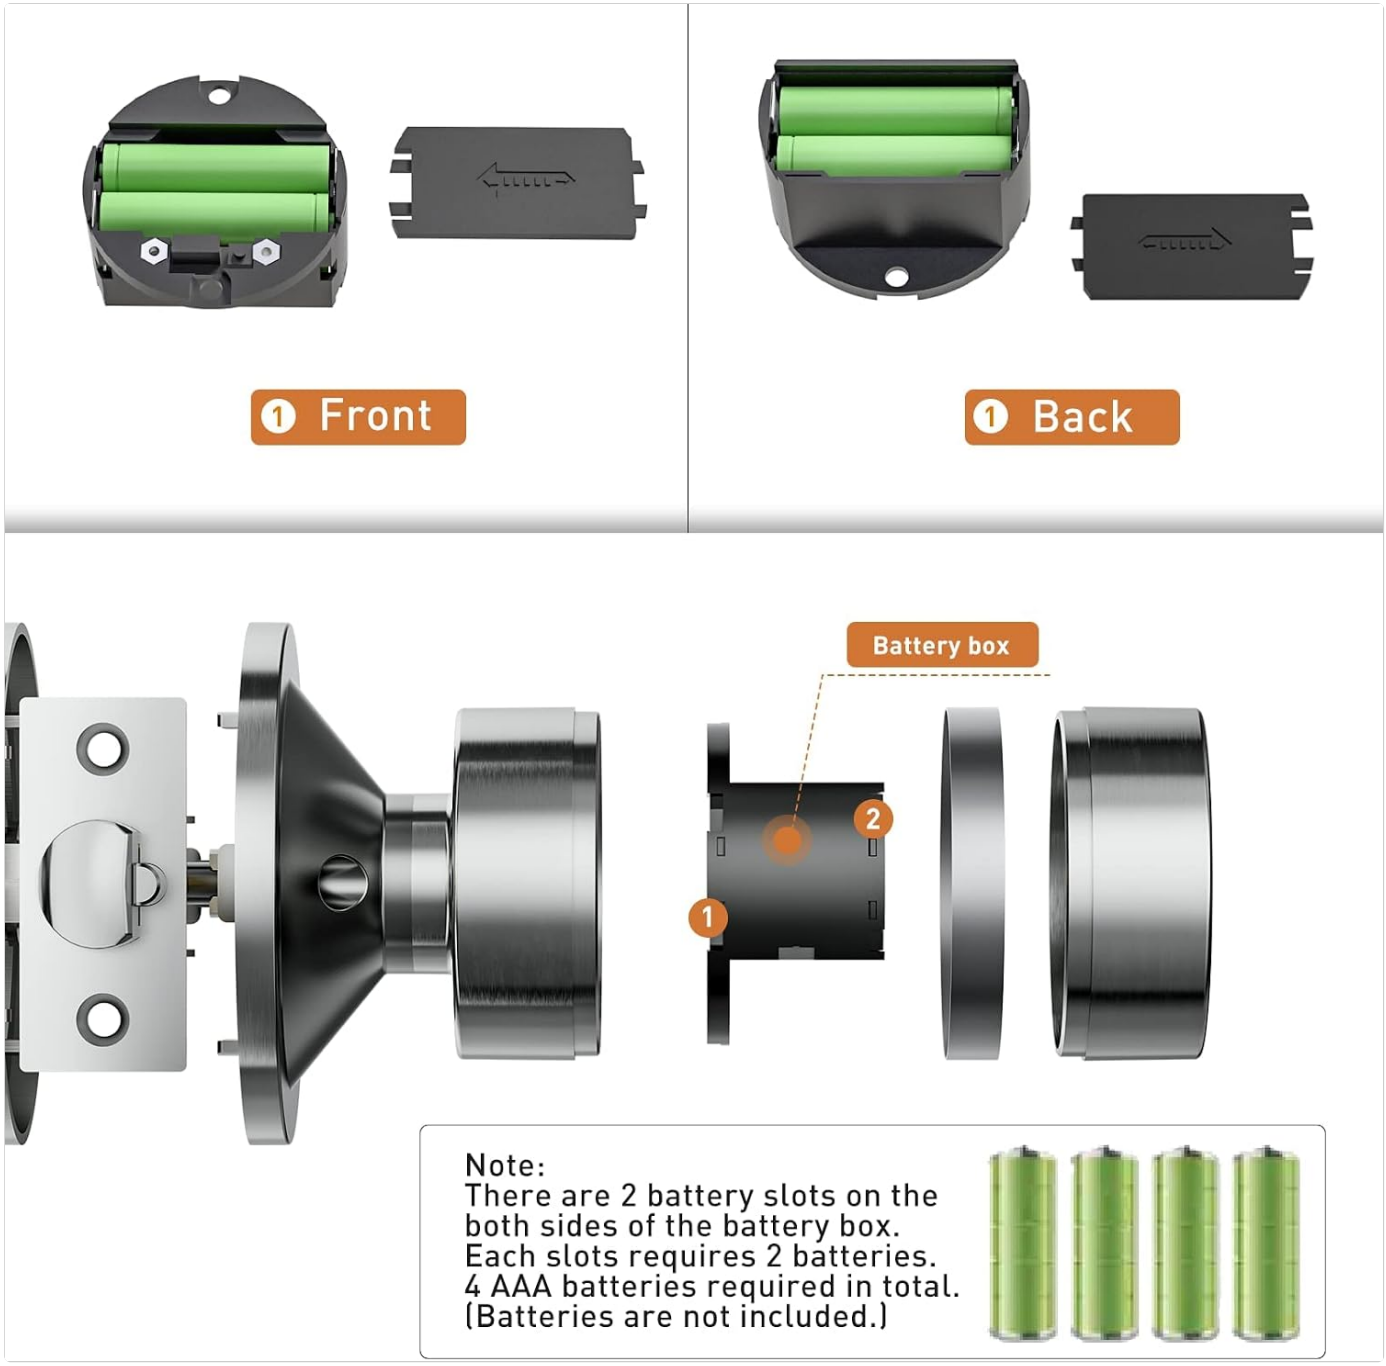


Image 3: Exploded view of the interior knob showing the battery box and the placement of 4 AAA batteries.

2.3. Latch and Knob Assembly

Install the latch mechanism into the door edge, ensuring it is flush. Then, assemble the interior and exterior knobs, connecting any necessary wires and securing them with the provided screws.



Image 4: A hand using a screwdriver to install the latch mechanism of the Signstek YL-99 Keyless Entry Door Lock into a door frame.

3. Operating Instructions

3.1. Setting and Changing Codes

The lock supports up to 15 different user codes, in addition to a master code. Codes can be up to 15 digits long.

1. **To Enter Programming Mode:** Enter the current Master Code followed by the '#' key. The keypad will illuminate, and you will hear a beep.
2. **To Change Master Code:** While in programming mode, press '0' then '#'. Enter your new Master Code (4-15 digits) followed by '#'. Re-enter the new Master Code followed by '#' to confirm.
3. **To Add User Code:** While in programming mode, press '1' then '#'. Enter the new User Code (4-15 digits) followed by '#'. Re-enter the new User Code followed by '#' to confirm.
4. **To Delete User Code:** While in programming mode, press '2' then '#'. Enter the User Code to be deleted followed by '#'. Re-enter the User Code followed by '#' to confirm.

5. **To Delete All User Codes:** While in programming mode, press '3' then '#'.



Image 5: The keypad of the Signstek YL-99 lock, highlighting its ability to store multiple access codes for various users.

3.2. Unlocking and Locking

- **To Unlock:** Enter a valid user code or master code, then press the '#' key. The lock will disengage, allowing the knob to turn.
- **Automatic Locking:** The lock features an auto-lock function, securing the door automatically after a short period once closed.
- **Mute Function:** For enhanced security and quiet operation, the lock includes a mute function to prevent audible beeps when entering codes. Refer to the full instruction manual for activation/deactivation steps.



Image 6: The Signstek YL-99 Keyless Entry Door Lock on a wooden door, illustrating its automatic locking feature.

4. Maintenance

4.1. Battery Replacement

The lock will emit a two-tone beep to indicate low battery power. Replace all 4 AAA batteries promptly to ensure continuous operation. Battery life is approximately 1.5 years under normal usage.

4.2. Emergency Power Supply

In case batteries completely drain, an emergency power supply port is located on the exterior knob. Connect an external 9V battery (not included) to this port to temporarily power the lock and gain entry.

4.3. Waterproofing

The exterior knob is designed to be splash-proof and can withstand outdoor conditions. The interior knob is not waterproof and should be used indoors only.



Image 7: Illustration of the Signstek YL-99 lock's waterproof exterior knob and the recommendation for indoor use of the interior knob.

5. Specifications

Feature	Detail
Brand	Signstek
Model Number	YL-99
Lock Type	Keypad
Material	Zinc
Color	Satin Nickel

Item Dimensions (L x W x H)	7.09 x 3.94 x 3.15 inches
Item Weight	2 Pounds
Power Source	Battery Powered (4 AAA batteries required)
Special Features	Electronic Keypad Knob, Keyless Entry, Mute Mode, Passage Function, Emergency Power Supply

6. Warranty and Support

For warranty information and customer support, please refer to the product packaging or contact Signstek customer service directly. Specific warranty terms and conditions may vary.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question