Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Homepointe FS40-8JCA

HomePoint 16 Inch Standing Oscillating Pedestal Fan

MODEL: FS40-8JCA

Product Overview

The HomePoint 16-inch Standing Oscillating Pedestal Fan is designed to provide comprehensive airflow and cooling for various indoor spaces, including living rooms, offices, basements, and bedrooms. This fan features a robust and durable construction, ensuring prolonged and reliable use. Its modern aesthetic allows it to seamlessly complement any room decor.
Key features include:

- **Adjustable Velocity:** Compact 16-inch freestanding fan provides comprehensive airflow for any room in your home; Includes three adjustable speed settings for personalized comfort.
- **Wide Angle Oscillation:** Fan head is tilt-adjustable allowing you to direct airflow precisely where needed with full range oscillation feature that ensures even air circulation throughout the room.
- **Customizable Elevation:** Adjustable height feature allows for customizable use, making it suitable for standing desks, staying cool while sitting on the couch, and various other applications.
- **Indestructible:** Intricately lined grill and rounded base, both thoughtfully designed, enhance stability while the robust and durable construction ensures prolonged and reliable use in various settings.
- **Modern Aesthetic:** Stylish design seamlessly complements the decor of any room, making it ideal for use in the living room, bedroom, home office, or even outdoors on the patio.

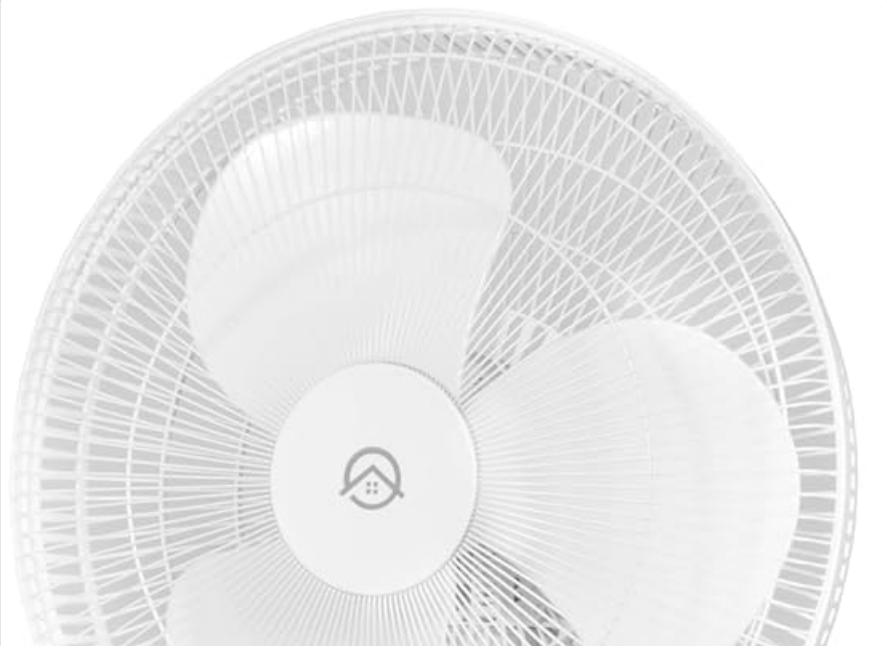




Figure 1: Front view of the HomePoint 16 Inch Standing Oscillating Pedestal Fan, showcasing its white finish and three-blade design.

Important Safety Instructions

WARNING: To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.

- Read all instructions before using this fan.
- Always unplug the fan before cleaning or servicing.
- Do not operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
- Do not insert or allow fingers or foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the fan.
- Do not block air openings or operate near curtains or other materials that may be drawn into the fan.
- This fan is intended for indoor use only. Do not use outdoors.
- Do not use in wet or damp locations such as bathrooms.
- Always place the fan on a stable, flat surface to prevent tipping.

Package Contents

Please check the box for the following items:

- Fan Head Assembly (motor, blades, front and rear grilles)
- Adjustable Height Pole
- Round Base
- Base Weight (if separate)
- Mounting Screws/Hardware
- User Manual (this document)

Setup Instructions

Follow these steps to assemble your HomePoint Pedestal Fan:

1. **Assemble the Base:** Place the base weight (if included) onto the round base. Insert the bottom part of the adjustable height pole into the center hole of the base. Secure it with the provided screw or knob from underneath the base.
2. **Attach the Fan Head:** Carefully align the fan head assembly with the top of the adjustable height pole. Ensure the connection is secure.
3. **Secure the Grilles:** If the grilles are separate, attach the rear grille to the motor housing, ensuring it clicks into place or is secured with clips/screws. Then, attach the fan blades to the motor shaft, securing them with the provided cap/nut. Finally, attach the front grille, ensuring all clips are fastened securely around the edges.





Figure 2: Rear view of the fan, illustrating the power cord and the connection point between the fan head and the adjustable pole.

Operating Instructions

Your HomePoint Pedestal Fan is designed for simple and effective operation.

Power and Speed Control

The fan features a rotary knob or push buttons located on the motor housing for power and speed selection. The settings typically include:

- **0** / **OFF:** Turns the fan off.
- **1** / **Low:** Provides a gentle breeze for quiet operation.
- **2** / **Medium:** Offers moderate airflow for general cooling.
- **3** / **High:** Delivers maximum airflow for rapid cooling.

Rotate the knob or press the corresponding button to select your desired speed.

Oscillation Function

To activate the oscillation feature, locate the small knob or button on the top-rear of the motor housing. Push it down to enable the fan head to sweep from side to side, distributing air across a wider area. Pull the knob up to stop oscillation and direct airflow in a fixed direction.

Adjusting Height and Tilt

- **Height Adjustment:** Loosen the height adjustment collar on the pole, extend or retract the pole to the desired height, and then tighten the collar securely.
- **Tilt Adjustment:** The fan head can be tilted up or down to direct airflow. Gently push or pull the fan head to the desired angle. The friction mechanism will hold it in place.



Figure 3: Close-up view of the fan's control panel, showing the speed settings (0, 1, 2, 3) and the oscillation pull-knob.

Maintenance

Regular cleaning will help maintain your fan's performance and extend its lifespan.

- **Cleaning the Exterior:** Unplug the fan before cleaning. Use a soft, damp cloth to wipe down the exterior surfaces. Do not use abrasive cleaners or chemicals.
- **Cleaning the Grilles and Blades:** Over time, dust and pet hair can accumulate on the grilles and blades, reducing airflow. To clean, carefully remove the front grille (refer to assembly instructions for removal). Wipe the blades and grilles with a damp cloth or use a vacuum cleaner with a brush attachment. Ensure all parts are completely dry before reassembling.
- **Motor Housing:** Periodically, dust may accumulate inside the motor housing through cooling holes. While not typically user-serviceable, gentle vacuuming of the exterior vents can help. For deeper cleaning, professional servicing is recommended.
- **Storage:** When not in use for extended periods, store the fan in a cool, dry place, preferably in its original packaging, to protect it from dust and damage.

Troubleshooting

If you encounter issues with your fan, try these common solutions:

Problem	Possible Cause	Solution
Fan does not turn on	No power; Fan not plugged in; Power outlet not working; Speed setting is '0' or 'OFF'.	Ensure fan is securely plugged into a working outlet. Check circuit breaker. Turn speed control to '1', '2', or '3'.
Reduced airflow	Dust buildup on blades/grilles; Obstruction in front/rear of fan.	Unplug fan and clean grilles and blades as per Maintenance section. Remove any obstructions.
Fan is noisy or rattling	Loose parts; Fan not on a stable surface; Dust/debris inside motor housing.	Ensure all assembly screws are tight. Place fan on a flat, stable surface. Clean fan thoroughly. If noise persists, contact customer support.
Oscillation not working	Oscillation knob/button not engaged correctly.	Push down the oscillation knob/button firmly to engage.

Specifications

Feature	Detail
Brand	Homepointe
Model Name	HomePointe FS40-8JCA HP 16 Inch WHT Stand Fan
Model Number	FS40-8JCA
ASIN	B00FDYSD02
Size	16 Inches
Color	White
Electric Fan Design	Floor Fan
Power Source	Corded Electric
Product Dimensions	18.3"D x 4.7"W x 22.9"H
Room Type	Bedroom, Living Room, Office
Special Feature	Oscillating
Recommended Uses	Air Circulation
Wattage	19 Milliwatts
Number of Blades	3
Speed Settings	3 RPM
Voltage	120 Volts
Item Weight	12.35 pounds

Feature	Detail
Indoor/Outdoor Usage	Indoor
Control Method	Touch
Blade Material	Plastic
Main Power Connector Type	Standard Electrical Plug (e.g., NEMA 5-15 in the United States)
UPC	052088877371

Warranty and Support

Homepointe stands behind the quality of its products. For specific warranty details, including coverage period and terms, please refer to the warranty card included with your purchase or visit the official Homepointe website. If you require technical assistance, troubleshooting beyond this manual, or have questions about parts and service, please contact Homepointe customer support through the contact information provided on their official website or product packaging.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B00FDYSD02

More documents and user manuals: **https://manuals.plus/**