Beurer KS 19 (704.06)

Beurer Fresh KS 19 Kitchen Scales Instruction Manual

Model: KS 19 (704.06)

Introduction

This instruction manual provides essential information for the safe and efficient operation of your Beurer Fresh KS 19 Kitchen Scales. Please read this manual thoroughly before first use and keep it for future reference. This digital kitchen scale is designed for precise weighing of food ingredients up to 5 kg.

Important Safety Information

- Always place the scale on a firm, flat, and stable surface to ensure accurate measurements.
- Do not overload the scale beyond its maximum capacity of 5 kg.
- Avoid exposing the scale to extreme temperatures, direct sunlight, or high humidity.
- Do not immerse the scale in water or other liquids. Clean with a damp cloth only.
- Keep the scale away from strong electromagnetic fields.
- This device is intended for household use only, not for commercial or medical purposes.
- Keep batteries out of reach of children. Dispose of batteries according to local regulations.

Package Contents

- 1x Beurer Fresh KS 19 Kitchen Scales
- 1x Lithium Metal Battery (CR2032, pre-installed or included separately)
- 1x Instruction Manual

Setup

Battery Installation

The Beurer Fresh KS 19 Kitchen Scales require one CR2032 Lithium Metal battery, which is included. If the battery

is not pre-installed or needs replacement:

1. Locate the battery compartment on the underside of the scale.
2. Open the battery compartment cover.
3. Insert the CR2032 battery with the positive (+) side facing upwards.
4. Close the battery compartment cover securely.

Initial Placement

Place the kitchen scale on a hard, flat, and level surface. Ensure there are no vibrations or air currents that could affect the measurement.

Operating Instructions



Image: The Beurer Fresh KS 19 Kitchen Scales, featuring a vibrant lime slice design on its glass surface. The digital display shows a weight of '198g', with touch-sensitive buttons for 'unit' and 'tara' (tare) functions visible below the display.

Turning On/Off

- **To Turn On:** Lightly press the power button (often integrated with the 'tare' button or a separate touch key). The display will show "0" or "0g" when ready for use.
- **To Turn Off:** The scale usually has an automatic shut-off function after a period of inactivity to conserve battery. You can also manually turn it off by pressing and holding the power/tare button for a few seconds.

Weighing Items

1. Turn on the scale. Ensure the display shows "0" or "0g".
2. Place the item directly onto the weighing surface.
3. Read the weight displayed on the LCD screen.

Unit Conversion

To change the unit of measurement (e.g., from grams to milliliters, pounds, or ounces):

- With the scale on and showing "0", press the "UNIT" button.
- Each press will cycle through the available units: grams (g), milliliters (ml), pounds (lb), and ounces (oz).
- Select your desired unit before weighing.

Tare Function (Zero Function)

The tare function allows you to weigh multiple ingredients in the same container or to subtract the weight of a container.

1. Place an empty container on the scale. The display will show its weight.
2. Press the "TARA" (tare) button. The display will reset to "0".
3. Add the first ingredient to the container. The display will show the weight of only the ingredient.
4. To add another ingredient, press "TARA" again to reset the display to "0", then add the next ingredient. Repeat as needed.

Care and Maintenance

- **Cleaning:** Wipe the scale surface with a slightly damp cloth. Do not use abrasive cleaners or immerse the scale in water.
- **Storage:** Store the scale in a dry place at room temperature. Avoid placing heavy objects on the scale when not in use.
- **Battery Replacement:** Replace the battery when the low battery indicator appears on the display or if the scale does not turn on.

Troubleshooting

Problem	Possible Cause	Solution
Scale does not turn on.	Dead or incorrectly installed battery.	Check battery orientation. Replace battery if necessary.
Inaccurate measurements.	Scale not on a flat surface; overloaded; external interference.	Ensure scale is on a stable, flat surface. Do not exceed 5 kg. Avoid vibrations.
Display shows "Err" or "O-Ld".	Scale is overloaded.	Remove items immediately. Do not exceed 5 kg capacity.

If you encounter issues not listed here or require further assistance, please contact customer support.

Technical Specifications

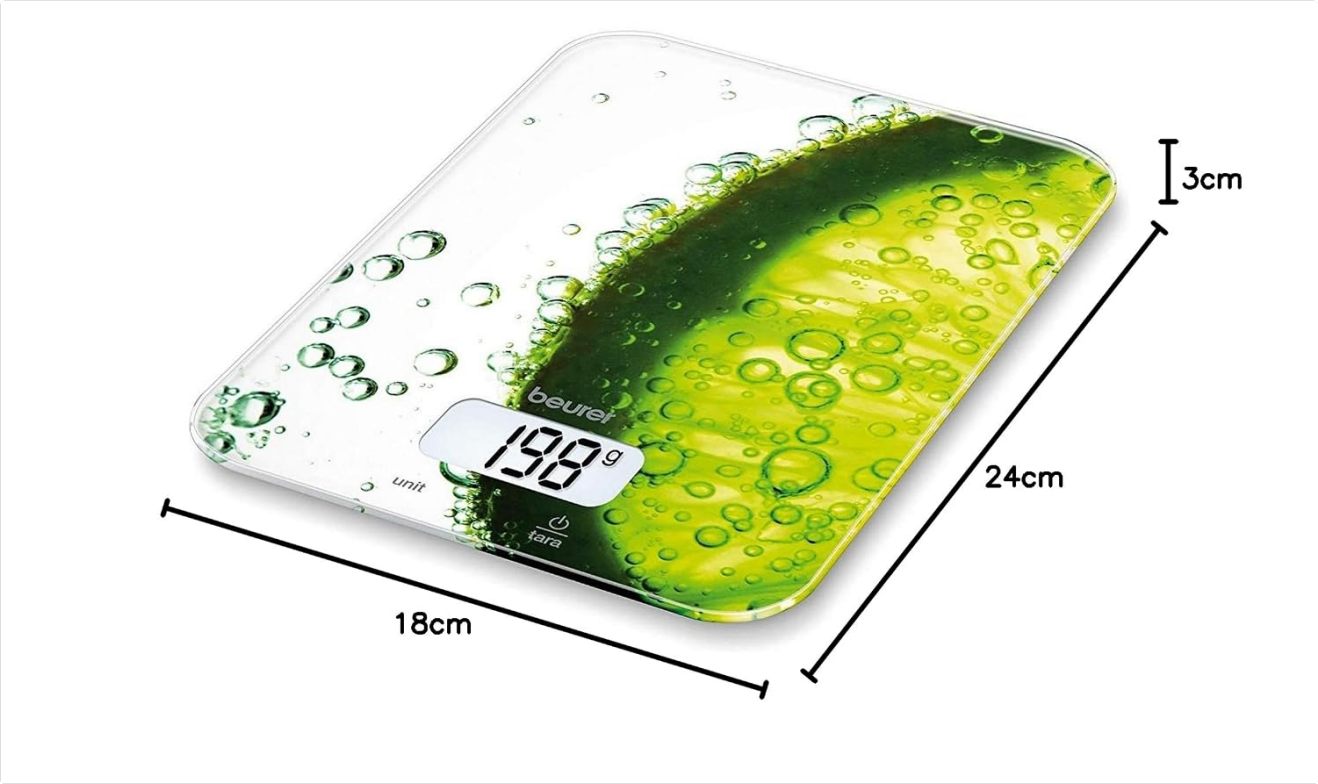


Image: The Beurer Fresh KS 19 Kitchen Scales shown with its approximate dimensions. The scale measures approximately 24 cm in length, 18 cm in width, and 3 cm in height, highlighting its compact design.

Brand	Beurer
Model Number	704.06
Special Feature	Backlit Display
Display Type	LCD
Weight Limit	5 Kilograms
Readout Accuracy	1 gram (typical for kitchen scales of this type)
Item Weight	0.32 Grams
Product Dimensions	20 x 14.5 x 1.65 cm
Batteries	1 Lithium Metal battery (CR2032), included
Country of Origin	China

Warranty and Customer Support

Beurer products are manufactured to high quality standards. For information regarding warranty terms and conditions, please refer to the warranty card included with your product or visit the official Beurer website for your region.

For troubleshooting assistance, product inquiries, or to report any issues, please contact Beurer Customer Support:

- **Phone:** 0124 4477111
- **Email:** support@beurerindia.com

Manufacturer: Beurer GMBH, Soflinger, Ulm, Germany.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question