Verizon Ellipsis 7

Verizon Ellipsis 7 4G LTE Tablet User Manual

Model: Ellipsis 7

1. Introduction

This manual provides essential information for setting up, operating, maintaining, and troubleshooting your Verizon Ellipsis 7 4G LTE Tablet. Please read this guide thoroughly to ensure proper use and to maximize your device's performance.

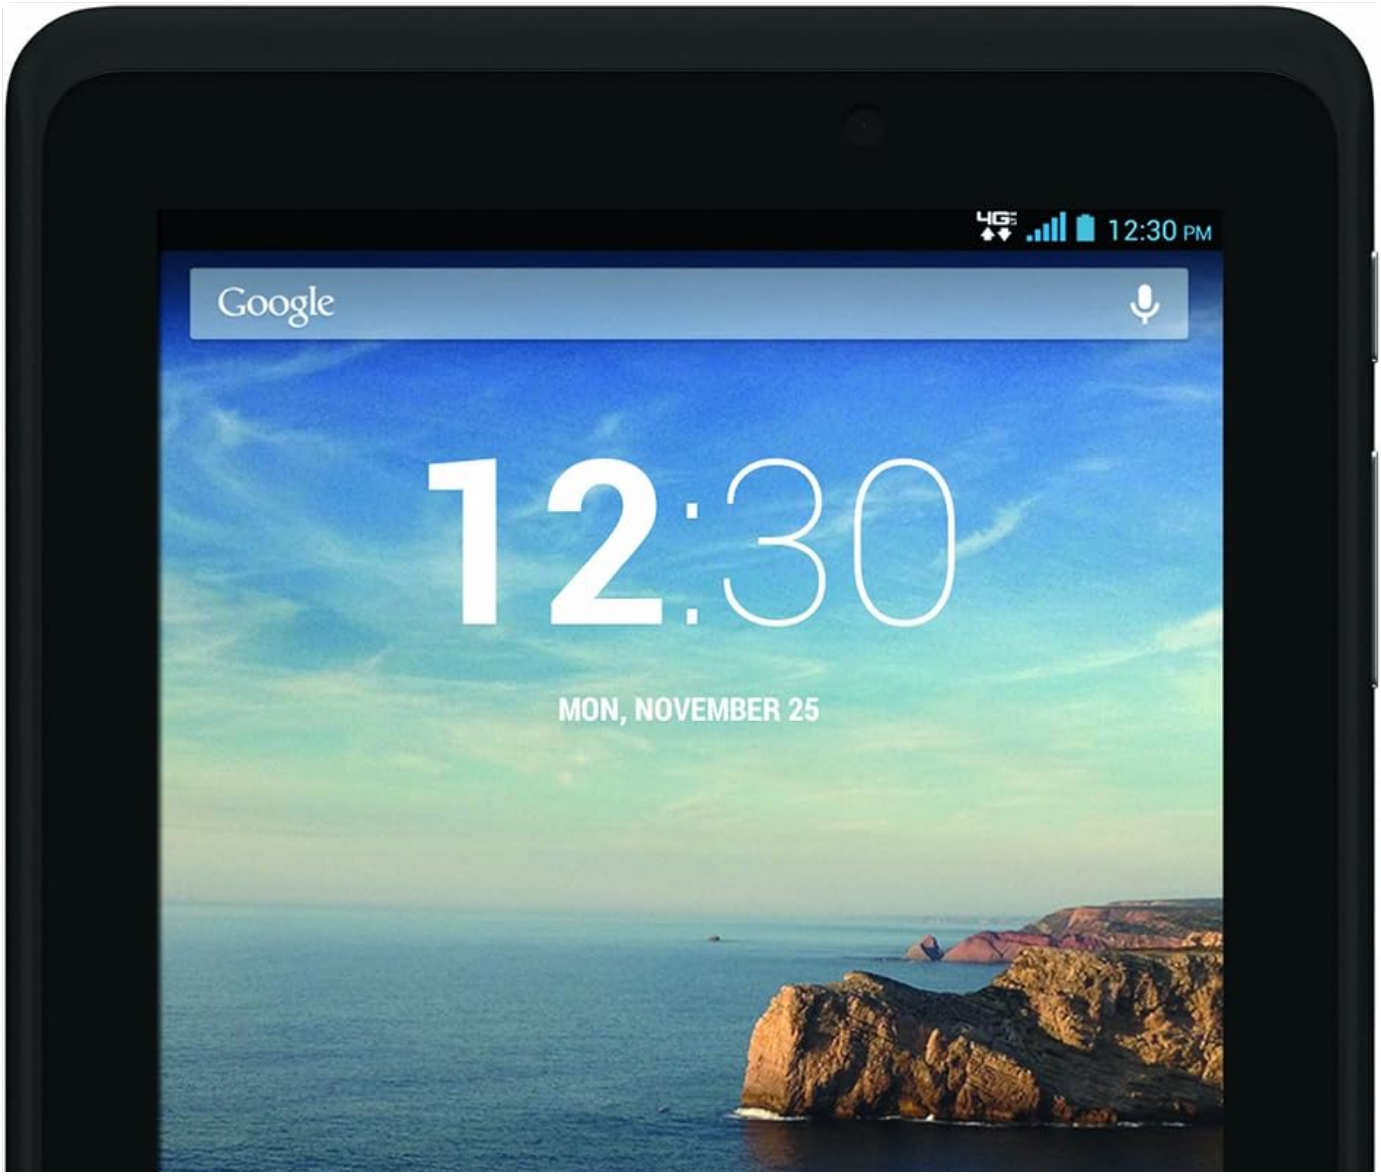




Figure 1: Front view of the Ellipsis 7 tablet.

2. Device Overview

Familiarize yourself with the physical features of your Ellipsis 7 tablet.





Figure 2: Side view highlighting buttons and ports.

The tablet features a 7.0-inch display, a 3.2MP rear camera, and a 0.3MP front camera. It supports Wi-Fi and 4G LTE connectivity.





Figure 3: Rear view of the Ellipsis 7 tablet.

3. Setup

3.1 Initial Charging

Before first use, fully charge your tablet. Connect the provided charger to the tablet's charging port and a power outlet. The battery indicator will show charging status.

3.2 Powering On/Off

- **To Power On:** Press and hold the Power button (located on the side) until the Verizon logo appears.
- **To Power Off:** Press and hold the Power button until the power options menu appears. Select "Power off" and confirm.

3.3 SIM Card Installation (Optional)

The Ellipsis 7 supports 4G LTE connectivity. A SIM card is required for cellular data services and is not included with the tablet. If you have a compatible SIM card from Verizon Wireless, insert it into the designated SIM card slot according to the instructions provided by your service provider.

3.4 Initial Setup Wizard

Upon first power-on, the tablet will guide you through an initial setup process. This includes:

1. **Language Selection:** Choose your preferred language.
2. **Wi-Fi Connection:** Connect to an available Wi-Fi network to access the internet.
3. **Google Account:** Sign in with an existing Google account or create a new one. This is necessary for downloading apps from the Google Play Store and syncing data.
4. **Date & Time:** Set the correct date and time.

4. Operating Your Tablet

The Ellipsis 7 runs on Android 4.2.2 (Jelly Bean).

4.1 Basic Navigation

- **Touchscreen:** Interact with the tablet by tapping, swiping, pinching, and spreading fingers on the screen.
- **Home Button:** Returns to the home screen.
- **Back Button:** Returns to the previous screen or closes the current application.
- **Recent Apps Button:** Displays a list of recently used applications for quick switching.

4.2 Connecting to Networks

- **Wi-Fi:** Go to *Settings > Wi-Fi*, turn Wi-Fi on, and select an available network. Enter the password if required.
- **4G LTE:** If a SIM card is installed and activated, cellular data will connect automatically. Manage cellular settings under *Settings > More > Mobile networks*
- **Bluetooth:** To pair with Bluetooth devices, go to *Settings > Bluetooth*, turn it on, and select the device from the list.

4.3 Camera Usage

The tablet features a 3.2MP rear camera and a 0.3MP front-facing camera.

1. Open the Camera application from the home screen or app drawer.
2. Tap the camera icon to switch between front and rear cameras.
3. Tap the shutter button to take a photo or start/stop video recording.

4.4 App Management

Download applications from the Google Play Store. To manage installed apps, go to *Settings > Apps*. From here, you can uninstall, force stop, or clear data for applications.

5. Maintenance

5.1 Battery Care

- Avoid extreme temperatures, which can degrade battery life.
- For optimal battery longevity, avoid frequently discharging the battery completely or keeping it at 100% charge for extended periods.
- Use only Verizon-approved chargers.

5.2 Cleaning the Device

Use a soft, lint-free cloth to clean the screen and body of the tablet. Avoid using harsh chemicals or abrasive materials.

5.3 Software Updates

Periodically check for system updates to ensure your tablet has the latest software and security patches. Go to *Settings > About tablet > System updates*.

5.4 Storage Management

The tablet has 8 GB of internal storage. To manage storage, go to *Settings > Storage*. You can clear cached data or uninstall unused apps to free up space.

6. Troubleshooting

If you encounter issues with your tablet, try the following solutions:

- **Device Not Powering On:** Ensure the battery is charged. Connect the charger and wait a few minutes before attempting to power on again.
- **Screen Unresponsive:** Perform a soft reset by pressing and holding the Power button for about 10-15 seconds until the device restarts.
- **Wi-Fi Connection Issues:** Restart your Wi-Fi router and the tablet. Forget the network in Wi-Fi settings and reconnect.
- **Apps Crashing/Slow Performance:** Close background applications. Clear app cache (*Settings > Apps > [App Name] > Clear cache*). If issues persist, consider uninstalling and reinstalling the app.
- **Battery Draining Quickly:** Reduce screen brightness, disable unused features like Bluetooth or GPS, and close background apps.
- **Factory Reset:** As a last resort, you can perform a factory data reset. This will erase all data on the tablet. Go to

Settings > Backup & reset > Factory data reset **Backup important data before proceeding.**

For further assistance, contact Verizon Wireless customer support.

7. Specifications

Display	7.0-inch, 1200 x 800 pixels
Operating System	Android 4.2.2 (Jelly Bean)
Processor Speed	1.2 GHz
Internal Storage	8 GB
Rear Camera	3.2 MP
Front Camera	0.3 MP
Connectivity	Wi-Fi, 4G LTE, Bluetooth, GPS
Dimensions (L x W x H)	7.72 x 4.94 x 0.4 inches
Weight	12.7 ounces
Battery	1 Lithium Ion (included)
ASIN	B00GJ3MF9Q
Date First Available	November 27, 2013

8. Warranty and Support

For information regarding your product's warranty, please refer to the documentation included with your purchase or visit the official Verizon Wireless support website. For technical assistance, you can contact Verizon Wireless customer support directly.
Verizon Wireless Support: www.verizon.com/support/

© 2023 Verizon Wireless. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question