Whirlpool 481245059576

Whirlpool Inner Oven Glass User Manual


Brand: Whirlpool | Model: 481245059576

1. Introduction

This manual provides essential information for the safe and correct installation, operation, and maintenance of your Whirlpool inner oven glass replacement part. Please read these instructions carefully before proceeding with any installation or maintenance to ensure proper function and safety.

2. Product Overview

The Whirlpool inner oven glass is a genuine OEM replacement part designed to restore the functionality and appearance of your oven door. It is specifically manufactured to fit a range of Whirlpool and IKEA oven models, ensuring a precise fit and optimal thermal performance.

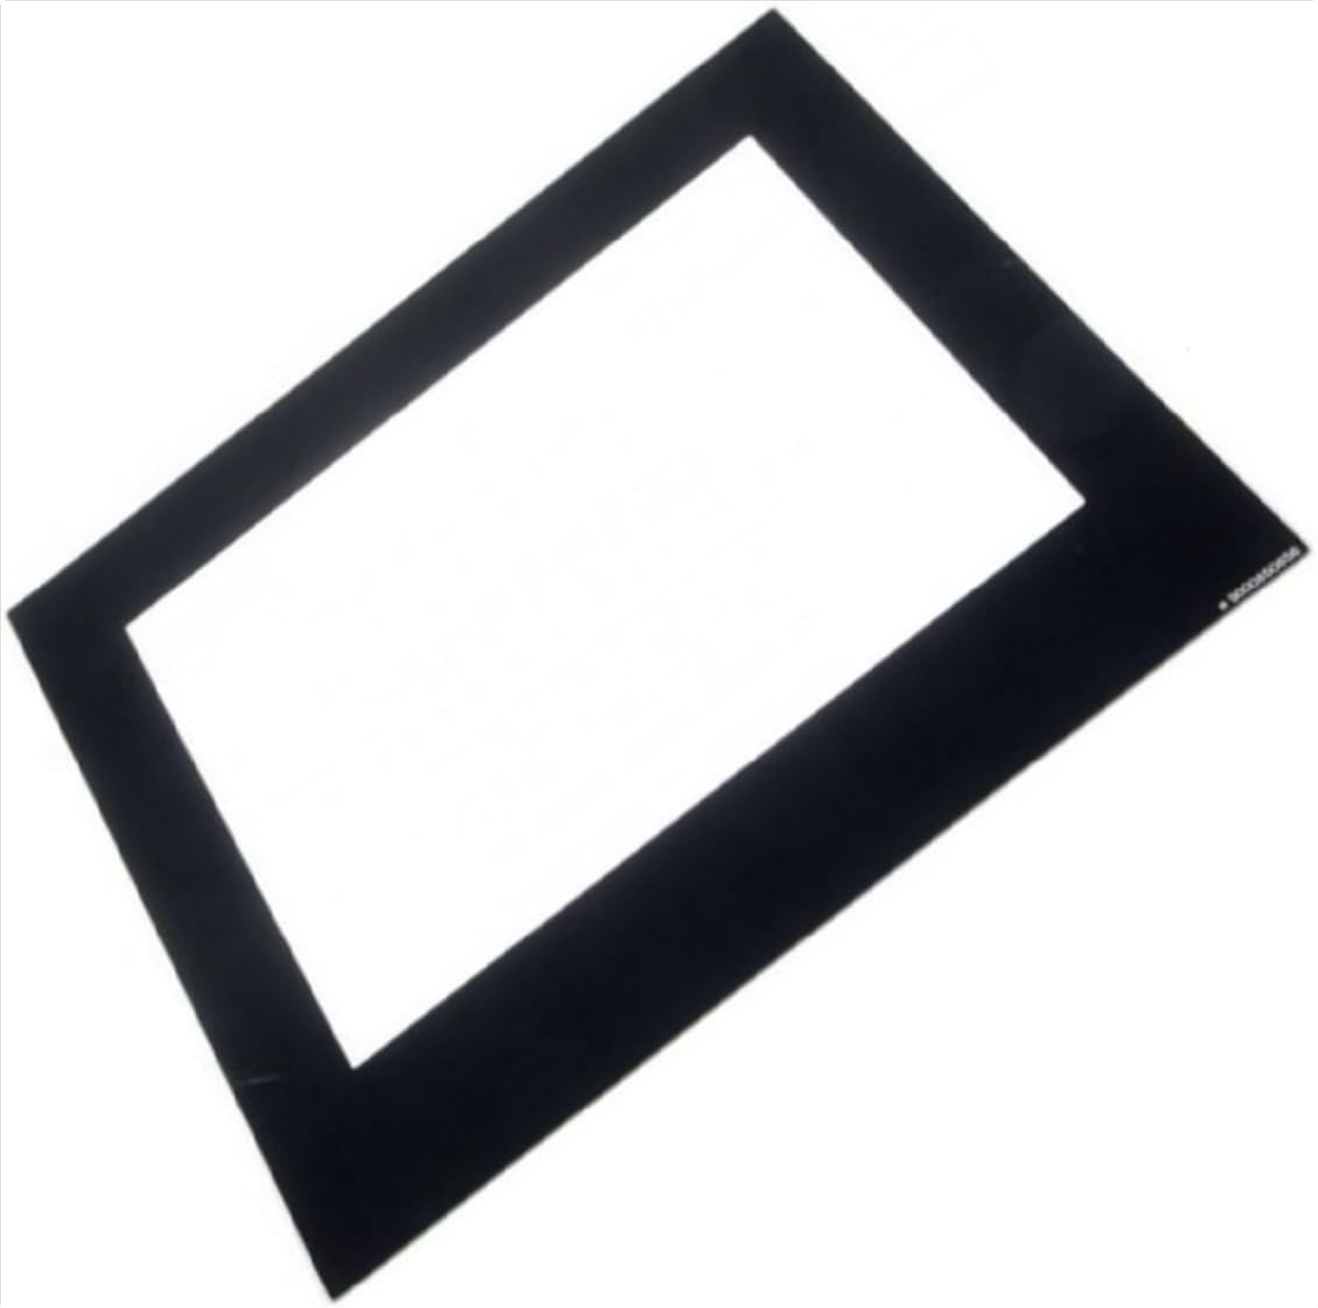

This image displays the rectangular inner oven glass, featuring a black border and a clear central viewing area. The glass is designed as a replacement component for compatible oven models.

3. Compatibility

This inner oven glass is compatible with various Whirlpool and IKEA oven models. It is crucial to verify that your oven's model number matches one of the applicable models listed below or in the comprehensive product documentation. Using an incompatible part may lead to improper fit or safety hazards.

Applicable models include, but are not limited to:

- WHIRLPOOL AKL889/IX
- AKP640/IX/01 (857764029042)
- AKP159/IX
- AKP10202WH (857710204550)
- AKP30902IX (857730901580)
- OBIB00S (857915301531)
- OBUAIN00W (857916201020)

- AKP005WH (857700529010)
- AKP102WH (857710204004)
- AKP102IX01 (857710204061)

For a complete list of compatible models, please refer to the original product specifications or consult your oven's user manual.

4. Safety Information

Always prioritize safety when working with appliances. Failure to follow these safety guidelines may result in injury or damage.

- **Disconnect Power:** Before beginning any installation or maintenance, ensure the oven is completely disconnected from the main power supply.
- **Wear Protective Gear:** Use appropriate personal protective equipment, such as gloves and safety glasses, to prevent cuts or injuries from glass edges.
- **Handle with Care:** Glass is fragile. Handle the inner oven glass carefully to avoid breakage.
- **Professional Assistance:** If you are unsure about any step, consult a qualified technician.
- **Dispose of Broken Glass Safely:** If the old glass is broken, dispose of it according to local regulations for sharp objects.

5. Installation Instructions

Follow these steps carefully to replace the inner oven glass. Specific procedures may vary slightly depending on your oven model. Refer to your oven's service manual for detailed instructions if available.

1. **Prepare the Oven:** Ensure the oven is cool and unplugged from the electrical outlet. Open the oven door fully.
2. **Remove Oven Door (if necessary):** For some models, it may be easier to remove the entire oven door. Consult your oven's manual for instructions on door removal.
3. **Access the Inner Glass:** Locate the retaining clips, screws, or brackets that hold the inner glass in place. These are typically found along the edges of the inner door panel.
4. **Carefully Remove Old Glass:** Loosen or remove the fasteners. Gently lift out the old inner glass. If the glass is broken, use extreme caution and wear thick gloves.
5. **Clean the Door Frame:** Clean any debris, grease, or broken glass fragments from the oven door frame before installing the new glass.
6. **Install New Inner Glass:** Carefully place the new Whirlpool inner oven glass into the designated slot within the oven door frame. Ensure it sits flush and correctly aligned.
7. **Secure the Glass:** Reattach any retaining clips, screws, or brackets to secure the new glass firmly in place. Do not overtighten screws, as this can crack the glass.
8. **Reinstall Oven Door (if removed):** If you removed the oven door, reattach it according to your oven's manual.
9. **Test Functionality:** Plug the oven back into the power supply. Open and close the door a few times to ensure it operates smoothly. Visually inspect the new glass for any gaps or misalignment.

6. Care and Maintenance

Proper care will extend the life and maintain the clarity of your inner oven glass.

- **Regular Cleaning:** Clean the inner glass regularly to prevent buildup of grease and food residue.
- **Use Appropriate Cleaners:** Use non-abrasive glass cleaners or a mixture of warm water and mild dish soap. Avoid harsh chemicals or abrasive pads that can scratch the glass.
- **Wipe Gently:** Apply cleaner to a soft cloth and wipe the glass gently. Dry with a clean, lint-free cloth.
- **Avoid Impact:** Do not strike the glass with hard objects, as this can cause cracks or breakage.

7. Troubleshooting

If you encounter issues after installing the inner oven glass, consider the following:

- **Glass Not Fitting:** Double-check that the model number of the glass matches your oven's model. Ensure all retaining clips or screws are correctly aligned and tightened.
- **Gaps Around Glass:** Verify that the glass is seated properly in its frame and that no debris is preventing a flush fit.
- **Door Not Closing Properly:** Ensure the glass is not obstructing the door mechanism. If the entire door was removed, recheck its reinstallation.
- **Cracked Glass:** If the glass cracks during or after installation, it may have been overtightened, improperly installed, or subjected to impact. Replace immediately for safety.

If problems persist, contact Whirlpool customer support or a qualified appliance technician.

8. Specifications

Feature	Detail
Brand	Whirlpool
Part Number	481245059576
Manufacturer	Whirlpool
Weight	1.93 Kilograms
Batteries Required?	No
First Available Date	15 Nov. 2013

9. Warranty and Support

This Whirlpool inner oven glass is covered by the manufacturer's standard warranty. For specific warranty terms and conditions, please refer to the documentation provided with your purchase or visit the official Whirlpool website. For technical support, replacement parts, or further assistance, please contact Whirlpool customer service. When contacting support, have your product model number (481245059576) and oven model number readily available.

© 2023 Whirlpool. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question