SanDisk SDMX24-008G-G46P

SanDisk Clip Sport MP3 Player User Manual

Model: SDMX24-008G-G46P

1. Introduction

This manual provides comprehensive instructions for the operation and maintenance of your SanDisk Clip Sport MP3 Player. Designed for active lifestyles, this lightweight device allows you to enjoy music, audiobooks, and FM radio on the go.



Image 1: Front view of the SanDisk Clip Sport MP3 Player, showing the screen with "Music" displayed and navigation buttons.

2. Package Contents

Verify that all items are present in your product package:

- SanDisk Clip Sport MP3 Player (Model: SDMX24-008G-G46P)
- Matching color earphones
- Micro-USB 2.0 charging/data cable
- Quick Start Guide (not included in this digital manual)

3. Product Features

The SanDisk Clip Sport MP3 Player offers a range of features designed for convenience and performance:

- **Lightweight Design:** Easily clips to clothing for hands-free use during activities.
- **Color LCD Screen:** 1.44-inch (128x128 pixels) screen for intuitive navigation.
- **FM Tuner:** Listen to local FM radio stations.
- **Internal Storage:** 8 GB capacity for music and audiobooks.
- **Expandable Memory:** microSDHC card slot for additional storage (card sold separately).
- **Audio Format Support:** Compatible with MP3, AAC, Audible (DRM only), FLAC, Ogg Vorbis, WAV, and WMA (no DRM).
- **Long Battery Life:** Up to 25 hours of continuous playback on a single charge.
- **Integrated Stop Watch:** Useful for tracking workout times.



Image 2: Angled view of the SanDisk Clip Sport MP3 Player, highlighting the integrated clip on the rear for attaching to clothing.

4. Setup

4.1 Initial Charging

Before first use, fully charge your SanDisk Clip Sport MP3 Player. Connect the included Micro-USB cable to the player's USB port and the other end to a computer's USB port or a compatible USB wall adapter (not included).

- The battery icon on the screen will indicate charging status.
- A full charge typically takes approximately 2-3 hours.

4.2 Connecting to a Computer

To transfer music and other audio files, connect the player to your computer using the Micro-USB cable. The player will appear as a removable drive on your computer.

- **Windows:** The player will appear under "My Computer" or "This PC".
- **Mac OS:** The player will appear as a drive icon on your desktop.
- **Linux:** The player will be mounted as a removable device.

4.3 Loading Music and Audiobooks

Once connected to your computer, you can drag and drop audio files directly into the player's "Music" or "Audiobooks" folders. The player supports various file formats including MP3, AAC, FLAC, Ogg Vorbis, WAV, and WMA.

- Ensure files are in compatible formats for optimal playback.
- For Audible (DRM) files, use Audible's software to transfer.



Image 3: Front view of the SanDisk Clip Sport MP3 Player with the included pink earphones connected, ready for use.

5. Operating Instructions

5.1 Power On/Off

- **To Power On:** Press and hold the Power button (usually located on the side or top) until the screen illuminates.
- **To Power Off:** Press and hold the Power button until the "Power Off" option appears, then select it.

5.2 Basic Navigation

Use the directional buttons and the center select button to navigate through menus and make selections on the LCD screen.

- **Up/Down Buttons:** Scroll through menu options.
- **Left/Right Buttons:** Navigate between screens or adjust settings.
- **Center Button:** Select an option or play/pause during playback.
- **Back Button:** Return to the previous menu or screen.

5.3 Playing Music

1. From the main menu, select "Music".
2. Browse by Artist, Album, Songs, Genres, Playlists, or Folders.
3. Select a song or album to begin playback.
4. Use the navigation buttons for play/pause, skip track, or fast forward/rewind.
5. Adjust volume using the dedicated volume buttons on the side of the device.

5.4 Using the FM Radio

1. From the main menu, select "FM Radio".
2. Ensure earphones are connected, as they act as the antenna.
3. Use the left/right buttons to tune to different frequencies.
4. You can save favorite stations for quick access.

5.5 Using a microSDHC Card

The player features a microSDHC card slot for expanding storage. Insert a compatible microSDHC card (up to 32GB, sold separately) into the slot. Files on the card will be accessible through the player's menu system, typically under a "Card" or "External Storage" option.

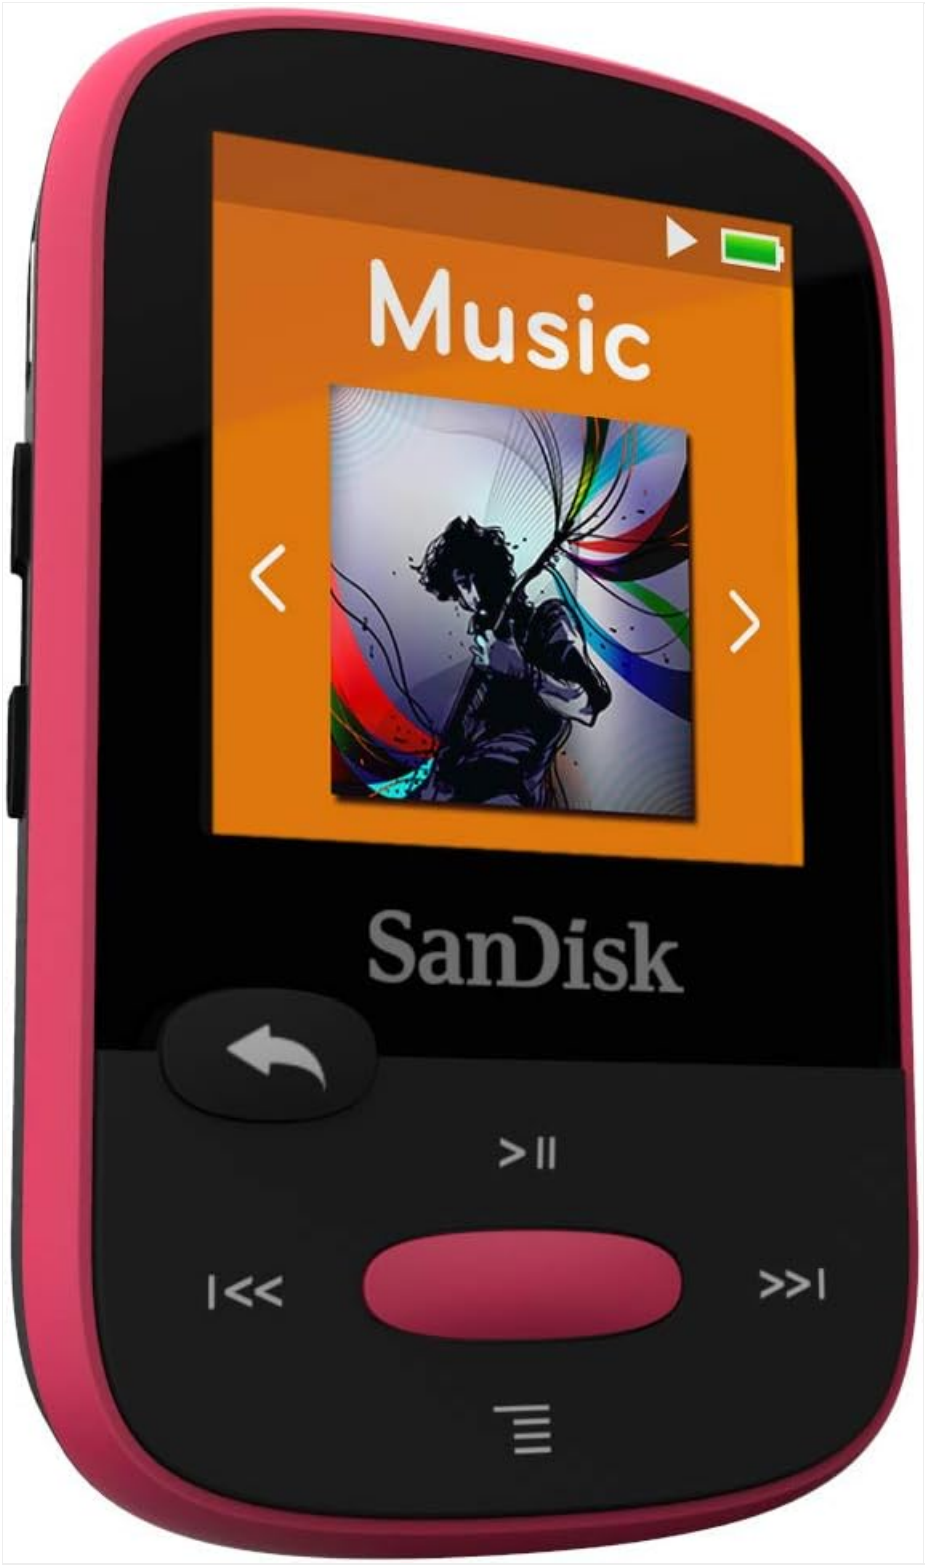


Image 4: Side view of the SanDisk Clip Sport MP3 Player, illustrating the location of the volume buttons, power button, and USB port.

6. Maintenance

6.1 Cleaning Your Device

To clean the player, gently wipe the exterior with a soft, dry, lint-free cloth. Avoid using harsh chemicals, cleaning solvents, or strong detergents, as these may damage the finish or internal components.

- Do not submerge the device in water or expose it to excessive moisture.

6.2 Battery Care

The SanDisk Clip Sport MP3 Player contains a non-replaceable lithium-ion battery. To maximize battery life:

- Avoid extreme temperatures.
- Charge the device regularly, but avoid leaving it fully discharged for extended periods.
- If storing the device for a long time, charge it to about 50% before storage.

7. Troubleshooting

7.1 Device Does Not Turn On

- Ensure the battery is charged. Connect the player to a power source and allow it to charge for at least 30 minutes before attempting to power on again.
- Perform a soft reset by holding down the power button for 10-15 seconds.

7.2 Cannot Transfer Files

- Verify the USB cable is securely connected to both the player and the computer.
- Try a different USB port on your computer.
- Ensure the player is recognized as a removable drive by your computer's operating system.
- Check if the files you are trying to transfer are corrupted or in an unsupported format.

7.3 No Sound During Playback

- Check the volume level on the player.
- Ensure earphones are properly plugged into the headphone jack.
- Test with a different pair of earphones to rule out faulty earphones.
- Verify the audio files are not corrupted and are in a supported format.

7.4 FM Radio Not Working

- Ensure earphones are connected, as they function as the antenna for the FM radio.
- Try tuning to different stations or moving to an area with better reception.

8. Specifications

Feature	Detail
Model Number	SDMX24-008G-G46P
Storage Capacity	8 GB (Actual user storage less)
Expandable Memory	microSDHC card slot (card sold separately)
Screen Size	1.44 inches (128x128 pixels)
Battery Type	1 Lithium Ion battery (included, non-replaceable)
Battery Life	Up to 25 hours (based on 128 kbps MP3 playback)
Connectivity	Micro-USB 2.0, Aux (3.5mm headphone jack)
Supported Audio Formats	MP3, AAC, Audible (DRM only), FLAC, Ogg Vorbis, WAV, WMA (no DRM)
Dimensions (H x W x D)	2.6 x 1.6 x 0.63 inches (6.6 x 4.1 x 1.6 cm)

Feature	Detail
Item Weight	0.96 ounces (27.2 grams)
Operating Systems	Windows, Mac OS X 10.3 Panther and higher, Linux
Special Features	Integrated Card Reader, FM Radio, Stop Watch

9. Warranty and Support

For warranty information and technical support, please refer to the official SanDisk website or contact SanDisk customer service. Keep your proof of purchase for warranty claims.

Online Support: Visit the SanDisk Support Website for FAQs, troubleshooting guides, and contact options.

© 2023 SanDisk. All rights reserved. SanDisk is a trademark of Western Digital Corporation or its affiliates.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question