Travel Blue 831

Travel Blue City Sling Pouch Model 831 User Manual

Your guide to using and maintaining your Travel Blue City Sling Pouch.

Introduction

Thank you for choosing the Travel Blue City Sling Pouch Model 831. This versatile and durable sling pouch is designed for convenience and security, making it ideal for daily use and travel. This manual provides essential information on how to set up, operate, and maintain your pouch to ensure its longevity and optimal performance.
The Travel Blue City Sling Pouch features four zippered compartments and an adjustable shoulder strap, crafted from water-resistant nylon fabric. Its compact yet spacious design allows you to organize your essentials efficiently.

Setup

Before first use, please follow these simple steps to prepare your Travel Blue City Sling Pouch.

1. **Unpack:** Carefully remove the sling pouch from its packaging.
2. **Inspect:** Check the pouch for any visible damage or manufacturing defects. Ensure all zippers and seams are intact.
3. **Adjust Shoulder Strap:** The shoulder strap is fully adjustable. To adjust, locate the buckle on the strap. Slide the buckle to lengthen or shorten the strap until it reaches your desired length for comfortable crossbody or shoulder carrying.

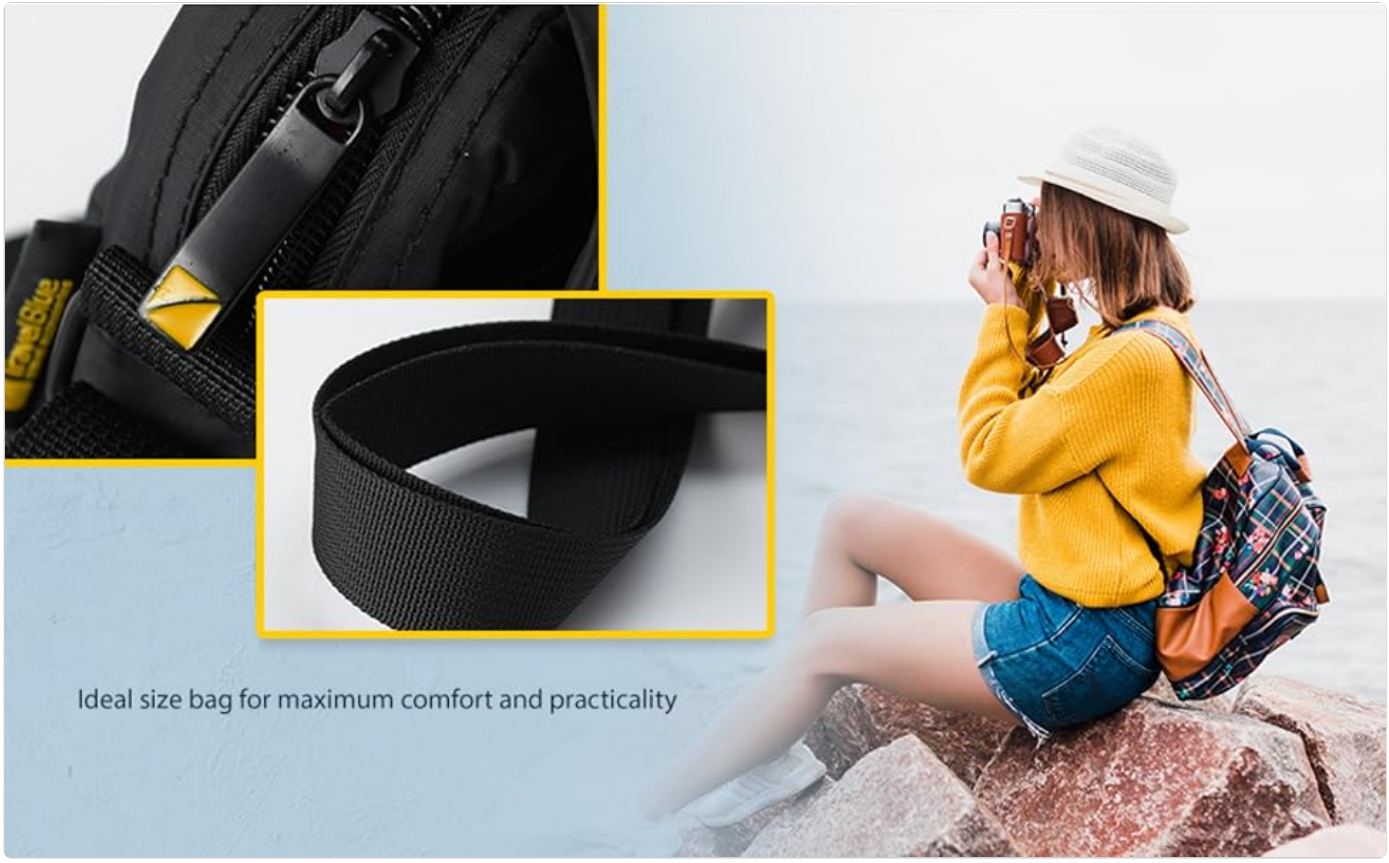


Image: Detail of the adjustable shoulder strap and a main compartment zipper. This shows the quality of the hardware and stitching, highlighting the ergonomic design for user comfort and accessibility.

Operating Instructions

The Travel Blue City Sling Pouch is designed for easy and secure storage of your personal items.

- **Utilizing Compartments:** The pouch features four zippered compartments.
  - Use the main compartment for larger items like a wallet, small notebook, or passport.
  - Smaller front and back zippered pockets are suitable for keys, coins, or travel documents.
  - An additional internal pocket can secure valuables like a phone or cards.
- **Wearing the Pouch:**
  - **Crossbody:** Wear the pouch across your body for enhanced security and hands-free convenience, especially in crowded areas.
  - **Over the Shoulder:** For quick access, wear it over one shoulder.
- **Securing Contents:** Always ensure all zippers are fully closed to prevent items from falling out or being easily accessed by others. The water-resistant nylon fabric provides protection against light rain and splashes.



Image: Front view of the Travel Blue City Sling Pouch, showcasing its compact design and the flap covering the main compartments. This image emphasizes the multiple storage options available.

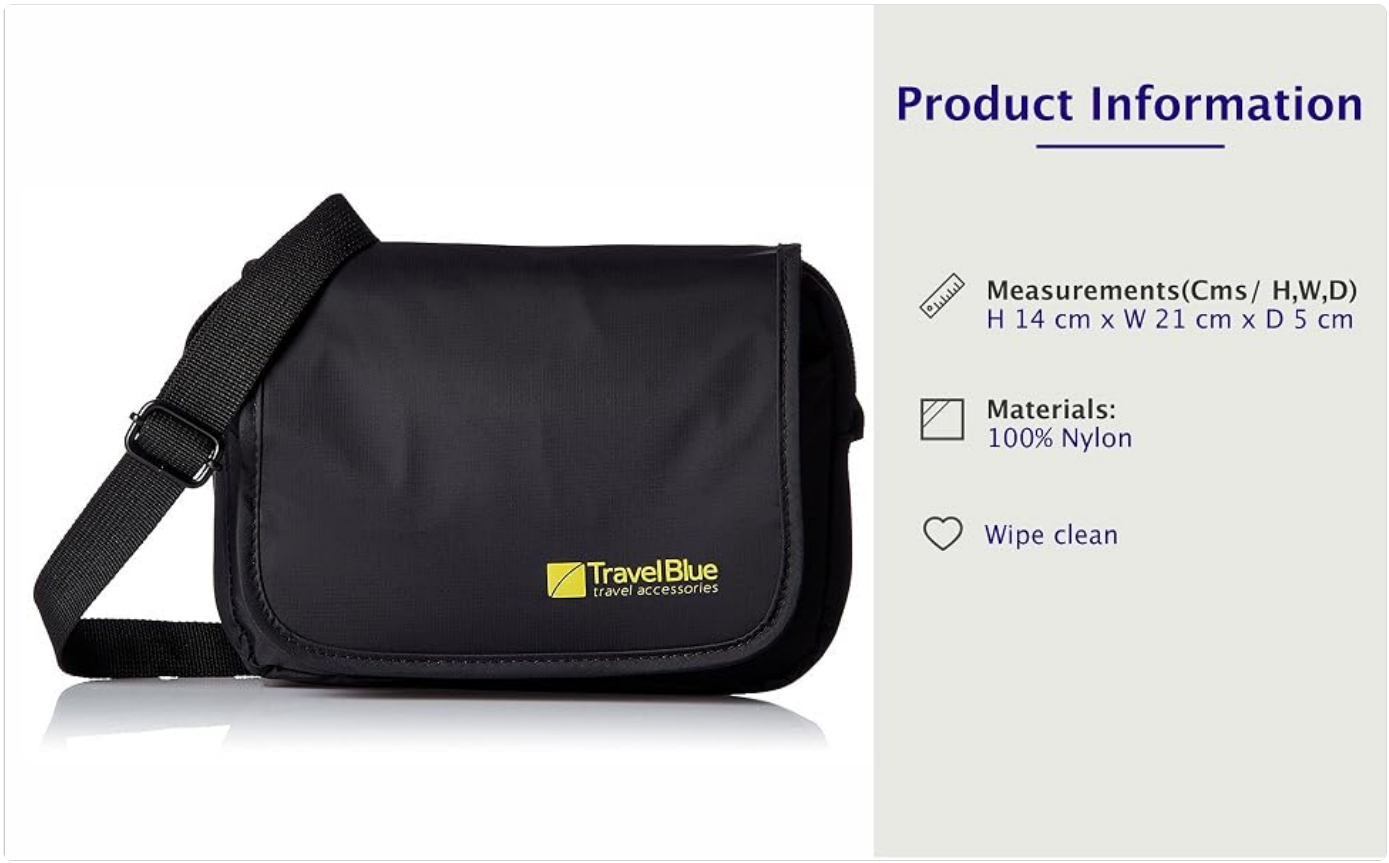


Image: A flat lay arrangement demonstrating the capacity of the Travel Blue City Sling Pouch. It displays common items such as a camera, notebook, pen, sunglasses, belt, and flashlight, illustrating how essentials can be organized.

Maintenance

Proper care will extend the life and appearance of your Travel Blue City Sling Pouch.

- **Cleaning:** Spot clean the pouch with a damp cloth. Use mild soap if necessary.
- **Drying:** Allow the pouch to air dry completely before storing or reusing. Do not expose to direct sunlight or high heat.
- **Avoid Machine Washing:** Do not machine wash, tumble dry, iron, or dry clean the pouch, as this can damage the fabric and structural integrity.
- **Storage:** Store the pouch in a cool, dry place away from direct sunlight when not in use.

Troubleshooting

If you encounter any issues with your Travel Blue City Sling Pouch, refer to the following common solutions.

- **Sticking Zippers:** If a zipper becomes difficult to open or close, apply a small amount of zipper lubricant (e.g., beeswax, graphite from a pencil) to the teeth. Gently work the zipper back and forth.
- **Strap Slipping:** If the adjustable strap frequently slips, ensure the buckle is properly threaded and tightened. Avoid overloading the pouch, which can put excessive strain on the strap mechanism.
- **Minor Stains:** For stubborn spots, try a gentle fabric cleaner designed for nylon, testing on an inconspicuous area first.

Specifications

Detailed technical specifications for the Travel Blue City Sling Pouch Model 831.

Model Name/Number	831
Brand	Travel Blue
Color	Black
Material Type	Nylon
Lining Material	Nylon
Item Dimensions (L x W x H)	25 x 18 x 4 Centimeters
Item Weight	213 g
Capacity	5 Liters
Number of Compartments	2 (main compartments)
Number of Pockets	4 (total zippered pockets)
Closure Type	Zipper
Strap Type	Adjustable Shoulder Strap
Country Of Origin	China

Warranty Information

The Travel Blue City Sling Pouch Model 831 comes with a**36 Months World Wide Guarantee**. This warranty covers manufacturing defects under normal use.
For warranty claims or further details, please retain your proof of purchase and contact Travel Blue customer support. The warranty is provided by the manufacturer.

Support

For any questions, assistance, or to report an issue not covered in this manual, please contact Travel Blue customer support.

- **Manufacturer:** Travel Blue
- **Website:** Visit the official Travel Blue Store on Amazon for more information and contact options.
- **Product ASIN:** B00HVTMFME

© 2024 Travel Blue. All rights reserved. Information in this manual is subject to change without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question