Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Scosche MAGDMB

Scosche MagicMount Magnetic Phone Mount

Model: MAGDMB User Manual

Introduction

The Scosche MagicMount MAGDMB is a versatile magnetic phone mount designed for secure attachment to your car's dashboard or any flat surface. It provides a convenient and safe way to use your mobile device hands-free while driving. Featuring powerful Neodymium magnets and a 360-degree adjustable head, this mount ensures optimal viewing angles and easy access to your phone's controls and ports.
This manual provides detailed instructions for installation, operation, and maintenance of your MagicMount to ensure a safe and effective user experience.

What's in the Box

Verify that all components are present in your package:

- MagicMount Dash Mount
- MagicPlate (Metal Plate)
- Protective Film
- User Manual



Image: Contents of the MagicMount package, showing the dash mount, MagicPlate, and cleaning wipe.

Setup and Installation

Follow these steps for proper installation of your MagicMount:

1. **Choose a Mounting Location:** Select a flat, clean surface on your car's dashboard. Ensure the chosen area does not

obstruct your view or interfere with airbags or vehicle controls. The heat-resistant automotive grade adhesive requires a smooth, non-porous surface for optimal adhesion.

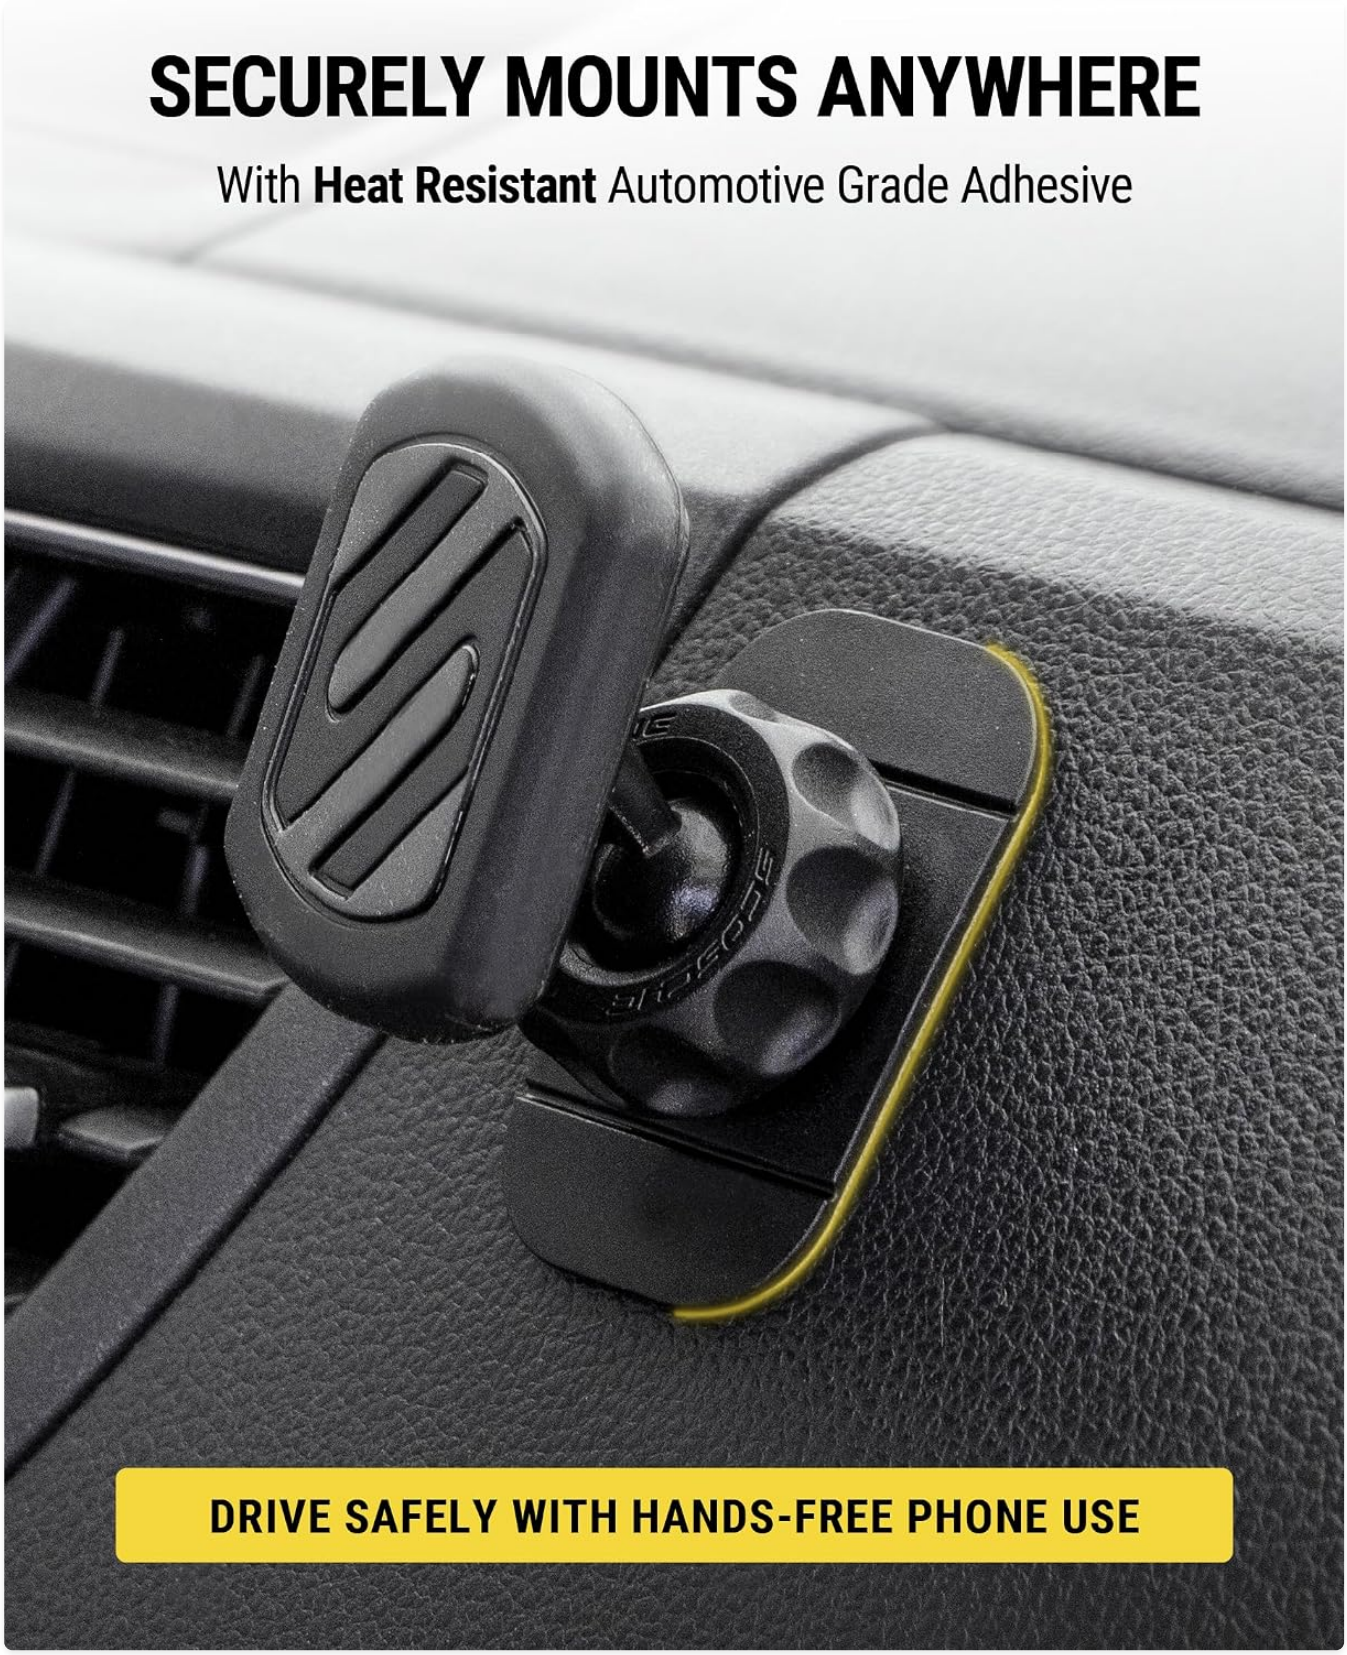


Image: MagicMount securely attached to a car dashboard.

2. **Clean the Surface:** Use the included alcohol cleaning wipe to thoroughly clean the chosen mounting surface. Allow the surface to dry completely before proceeding.
3. **Apply the Dash Mount:** Peel the protective backing from the adhesive base of the MagicMount. Carefully position the mount on the cleaned surface and press firmly for 30 seconds.
   Important: For optimal adhesion, allow the adhesive to cure for at least 24 hours before attaching your device to the mount.

4. **Prepare Your Device with MagicPlate:**
    - **For phones with thin cases:** Apply the protective film to the back of your phone or phone case. Then, attach the MagicPlate directly onto the protective film.
    - **For phones with rugged/thick cases:** The MagicPlate can often be placed directly inside the case, between the phone and the case, without needing to adhere it. Ensure it does not interfere with wireless charging if applicable. For a stronger hold, adhere the MagicPlate to the outside of the case.

The MagicPlate should be placed in a central location on your device or case to ensure a strong magnetic connection. Avoid placing it over wireless charging coils if you intend to use wireless charging.



Image: MagicPlate installation guide for different phone case types.

For a visual guide, you may refer to the official installation manual PDF available here.

Operating Instructions

Using your Scosche MagicMount is simple and intuitive:

1. **Attaching Your Device:** Once the MagicPlate is installed on your device or case, simply bring your device close to the magnetic surface of the MagicMount. The powerful Neodymium magnets will automatically secure your phone in place.



Image: Smartphone attached to the MagicMount.

2. **Adjusting the Viewing Angle:** The MagicMount features a 360-degree adjustable head and a lock-nut. Loosen the lock-nut to adjust your phone to the desired viewing angle (portrait or landscape), then tighten the lock-nut to secure the position.



Image: Phone mounted on the dash, demonstrating adjustable viewing angles.

3. **Detaching Your Device:** To remove your phone, simply pull it away from the magnetic surface. The cradle-free design allows for quick and easy one-handed operation.

4. **Cable Management:** The mount includes an integrated cable clip on the back. Use this clip to neatly route your charging cable, keeping your dashboard organized and reducing clutter.



Image: Integrated cable management clip on the MagicMount.

Phone Compatibility

The Scosche MagicMount is universally compatible with most smartphones and devices, provided they use the included MagicPlate. It is not compatible with MagSafe technology without the MagicPlate.
Compatible devices include, but are not limited to:

- Apple iPhone (all models including iPhone 16, 15, 14, 13, 12, 11, X, 8, 7, 6 series)
- Samsung Galaxy (all models including S25, S24, S23, S22, S21, S20, S10, S9, S8 series, Note series, Z Fold/Flip series)
- Google Pixel (all models including Pixel 9, 8, 7, 6, 5, 4, 3 series)
- LG, OnePlus, Motorola, Nokia, Xiaomi, Huawei, and other Android smartphones.
- Tablets and other portable devices (ensure MagicPlate placement does not interfere with functionality).

Note: All devices must use the included MagicPlate for a secure magnetic connection.



Image: Examples of compatible phone models.

Maintenance

To ensure the longevity and optimal performance of your Scosche MagicMount, follow these simple maintenance guidelines:

- **Cleaning the Mount:** Wipe the surface of the mount with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners, as these can damage the finish or the adhesive.
- **Adhesive Care:** The automotive-grade adhesive is designed for a strong, permanent bond. Avoid repositioning the mount frequently, as this can weaken the adhesive. If the adhesive loses its stickiness due to dust or debris, gently clean it with a lint-free cloth dampened with water, and allow it to air dry.
- **MagicPlate Care:** Ensure the MagicPlate on your device or case remains clean and free of debris to maintain a strong magnetic connection.
- **Temperature Considerations:** While the mount is temperature resistant, extreme prolonged heat or cold can affect the adhesive. If installing in very cold conditions, ensure the dashboard surface is warmed up first.

Troubleshooting

Problem	Possible Cause	Solution
Mount not sticking to dashboard.	Surface not clean or dry; adhesive not fully cured; surface is textured or porous.	Ensure surface is thoroughly cleaned and dry. Allow 24 hours for adhesive to cure after initial application. The mount is designed for flat, smooth surfaces.
Phone not holding securely.	MagicPlate not correctly positioned; MagicPlate is too far from the mount (e.g., very thick case); MagicPlate is dirty.	Ensure MagicPlate is centered on your device/case. For thicker cases, consider adhering the MagicPlate to the outside of the case. Clean the MagicPlate and mount surface.
Mount head is loose or won't stay in position.	Lock-nut is not tightened sufficiently.	Tighten the lock-nut firmly to secure the adjustable head in the desired viewing angle.
Interference with wireless charging.	MagicPlate is placed over the wireless charging coil area of the phone.	Reposition the MagicPlate away from the wireless charging coil. Refer to your phone's manual for the exact location of the charging coil.

Specifications

Feature	Detail
Product Dimensions	1.75 x 2 x 2 inches
Item Weight	1.92 ounces
Model Number	MAGDMB
Mounting Type	Dashboard (Adhesive)
Special Features	Adjustable (360°), Cradle-Free Design, Integrated Cable Clip, Temperature Resistant

Feature	Detail
Magnet Type	Rare-Earth Neodymium Magnets
Color	Black
Country of Origin	China

Warranty and Support

The Scosche MagicMount Dash is backed by Scosche's commitment to quality and customer satisfaction.

- **Warranty:** This product comes with a limited 3-year warranty. Please retain your proof of purchase for warranty claims.
- **Technical Support:** Scosche offers lifetime technical support for this product.

For further assistance, warranty information, or to explore other Scosche products, please visit the official Scosche website or contact their customer service directly.

Visit the Scosche Store

© 2024 Scosche. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B00I608BJ8

More documents and user manuals: **https://manuals.plus/**