BOSCH CECOMINOD008588

Bosch Dishwasher Lower Rack Flip Tynes Plastic Bearing Clips Kit Instruction Manual

Model: CECOMINOD008588

1. Introduction

This manual provides instructions for the installation and maintenance of the Bosch Dishwasher Lower Rack Flip Tynes Plastic Bearing Clips Kit. These genuine Bosch replacement parts are designed to restore the functionality of your dishwasher's lower rack tynes, ensuring they remain securely in place during operation.

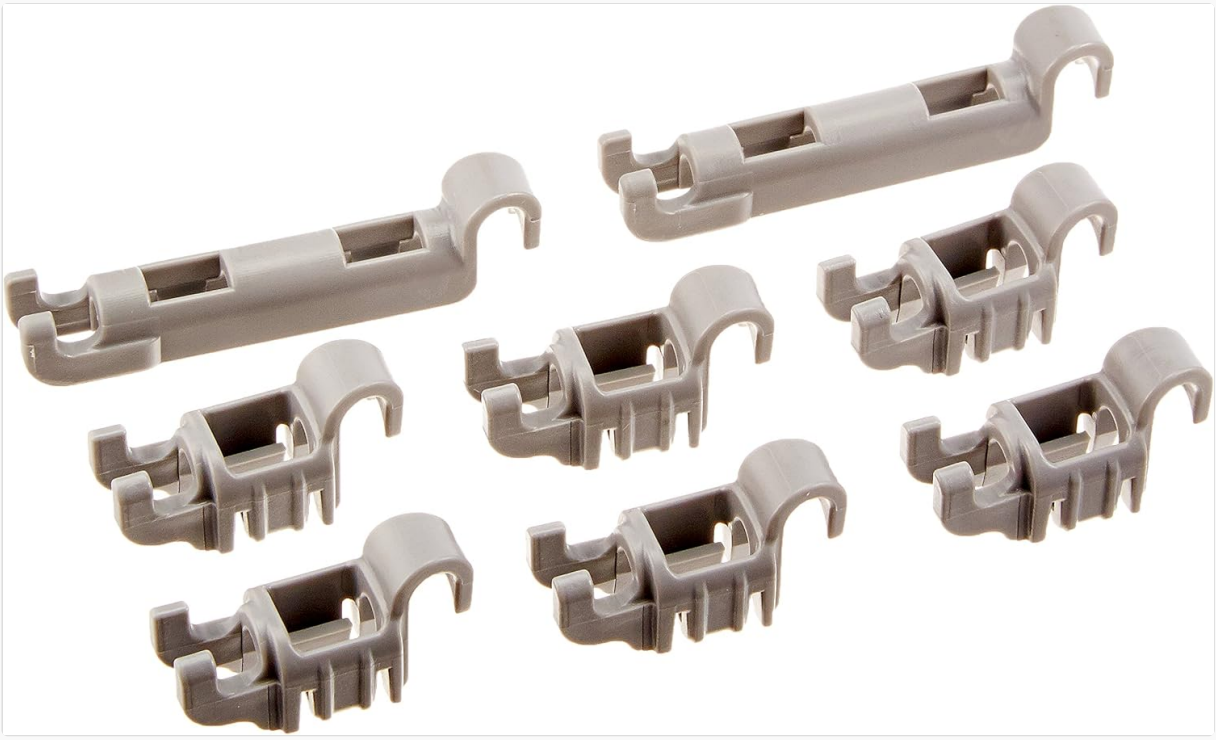


Figure 1: A set of eight grey plastic bearing clips. The kit includes two longer clips and six shorter clips, designed to secure the flip tynes on a Bosch dishwasher's lower rack.

2. Parts Included

The kit contains the following components:

- 8 x Plastic Bearing Clips (various sizes as shown in Figure 1)

3. Compatibility

This kit is compatible with various Bosch dishwasher models. Please verify your dishwasher's model number to ensure compatibility. Known compatible models include, but are not limited to:

- SMS50E02GB/02, SMS50E02GB/04, SMS50E02GB/07
- SMS50E02UK/01
- SMS50E06EP/01
- SMS50E06EU/01, SMS50E06EU/02, SMS50E06EU/04, SMS50E06EU/06, SMS50E06EU/07, SMS50E06EU/09
- SMS50E06GB/01, SMS50E06GB/02, SMS50E06GB/04, SMS50E06GB/07
- SMS50E06UK/01
- And many more models.

If your model is not listed, please consult your dishwasher's original manual or contact Bosch customer support for verification.

4. Installation Instructions

Follow these steps to replace the plastic bearing clips on your Bosch dishwasher's lower rack:

1. **Preparation:** Ensure the dishwasher is empty and cool. Carefully pull out the lower rack from the dishwasher tub.
2. **Identify Damaged Clips:** Locate the flip tynes on the lower rack. These tynes are designed to fold down. The plastic clips secure these tynes in their upright or folded positions. Identify any broken, missing, or worn-out clips.
3. **Remove Old Clips:** Gently pry off any remaining pieces of the old, damaged clips. Be careful not to damage the rack itself.
4. **Select Correct Clip Size:** The kit includes clips of different lengths. Match the new clips to the size of the clips being replaced. The longer clips typically fit the longer tynes, and shorter clips fit shorter tynes.
5. **Install New Clips:** Position the new plastic bearing clip over the base of the flip tyne where it attaches to the rack. The clip should snap securely into place, holding the tyne firmly. Ensure the tyne can still pivot smoothly if it is a flip tyne.
6. **Verify Installation:** After installing all necessary clips, gently test each flip tyne to ensure it moves correctly and is held securely by the new clips.
7. **Reinsert Rack:** Carefully slide the lower rack back into the dishwasher.

If you encounter difficulty, refer to your dishwasher's full service manual or seek professional assistance.

5. Operation

Once correctly installed, the plastic bearing clips function automatically to secure the dishwasher's lower rack flip tynes. No further user interaction is required for their operation. They ensure the tynes remain in their intended position during washing cycles, preventing dishes from shifting.

6. Care and Maintenance

These plastic bearing clips are designed for durability. To ensure their longevity:

- **Regular Inspection:** Periodically inspect the clips for any signs of wear, cracking, or damage.
- **Cleaning:** The clips will be cleaned during normal dishwasher operation. No special cleaning is required.
- **Avoid Force:** Do not apply excessive force when loading or unloading dishes, as this can stress the clips and tynes.

7. Troubleshooting

Issue: Clips do not fit or are difficult to install.

- **Solution:** Ensure you are using the correct size clip for the specific tyne. Verify your dishwasher model number against the compatibility list. If issues persist, the part may not be suitable for your specific rack design.

Issue: Clips break shortly after installation.

- **Solution:** This could indicate excessive stress on the tynes or clips during loading/unloading, or a manufacturing defect. Ensure proper loading practices. If the issue recurs, contact Bosch customer support.

8. Specifications

Manufacturer	Bosch
Part Number	00611472
Model Number	CECOMINOD008588
Material	Plastic
Color	Grey
Item Weight	0.32 ounces
Number of Pieces	8

9. Warranty and Support

As a genuine Bosch replacement part, this product is covered by Bosch's standard warranty for spare parts. For specific warranty details, claims, or technical support, please refer to the official Bosch website or contact Bosch customer service directly. Keep your purchase receipt as proof of purchase.
Bosch Customer Service: Please visit the official Bosch Home Appliances website for contact information and support resources.

© 2024 Bosch Home Appliances. All rights reserved.