Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

NIXON A399897

NIXON Small Time Teller A399 Instruction Manual

Model: A399897 | Brand: NIXON

Introduction

This manual provides essential information for the setup, operation, and maintenance of your NIXON Small Time Teller A399 watch. Designed for durability and style, this timepiece features a 26mm custom stainless steel case, hardened mineral crystal, and a reliable Miyota Japanese quartz 3-hand movement. Its 100m water resistance makes it suitable for various activities. Please read this manual thoroughly to ensure proper use and care of your watch.

Key Features

- **Timeless, Minimalist Design:** A refined 26mm case size offering unpretentious elegance and versatility.
- **Durable, Swim-Ready Build:** Features a hardened mineral crystal, solid stainless steel case and bezel, and 100 meter / 10 ATM water resistance.
- **Jewelry-Style Stainless Steel Bracelet:** Custom tapered 5-link stainless steel bracelet (14–12mm) with a secure double-locking clasp.
- **Precision Japanese Movement:** Equipped with reliable Miyota Japanese quartz 3-hand movement for accurate timekeeping.
- **Premium Finishing Touches:** Includes custom molded hands, printed dial indices, a screw-down caseback, triple gasket crown, and spring pin lugs.

Setup

Setting the Time

1. Locate the crown on the right side of the watch case.
2. Gently pull the crown outwards to the first position. You may feel a slight click.
3. Rotate the crown clockwise or counter-clockwise to adjust the hour and minute hands to the correct time.
4. Once the time is set, push the crown back into its original position firmly to ensure water resistance.

Adjusting the Bracelet

The NIXON Small Time Teller A399 features a double-locking clasp that allows for fine adjustment of the bracelet length. To adjust, open the clasp and locate the small bar that secures the clasp to the bracelet. This bar can typically be moved along a series of small holes to shorten or lengthen the bracelet for a comfortable fit. For significant adjustments or link removal, it is

recommended to visit a professional jeweler.

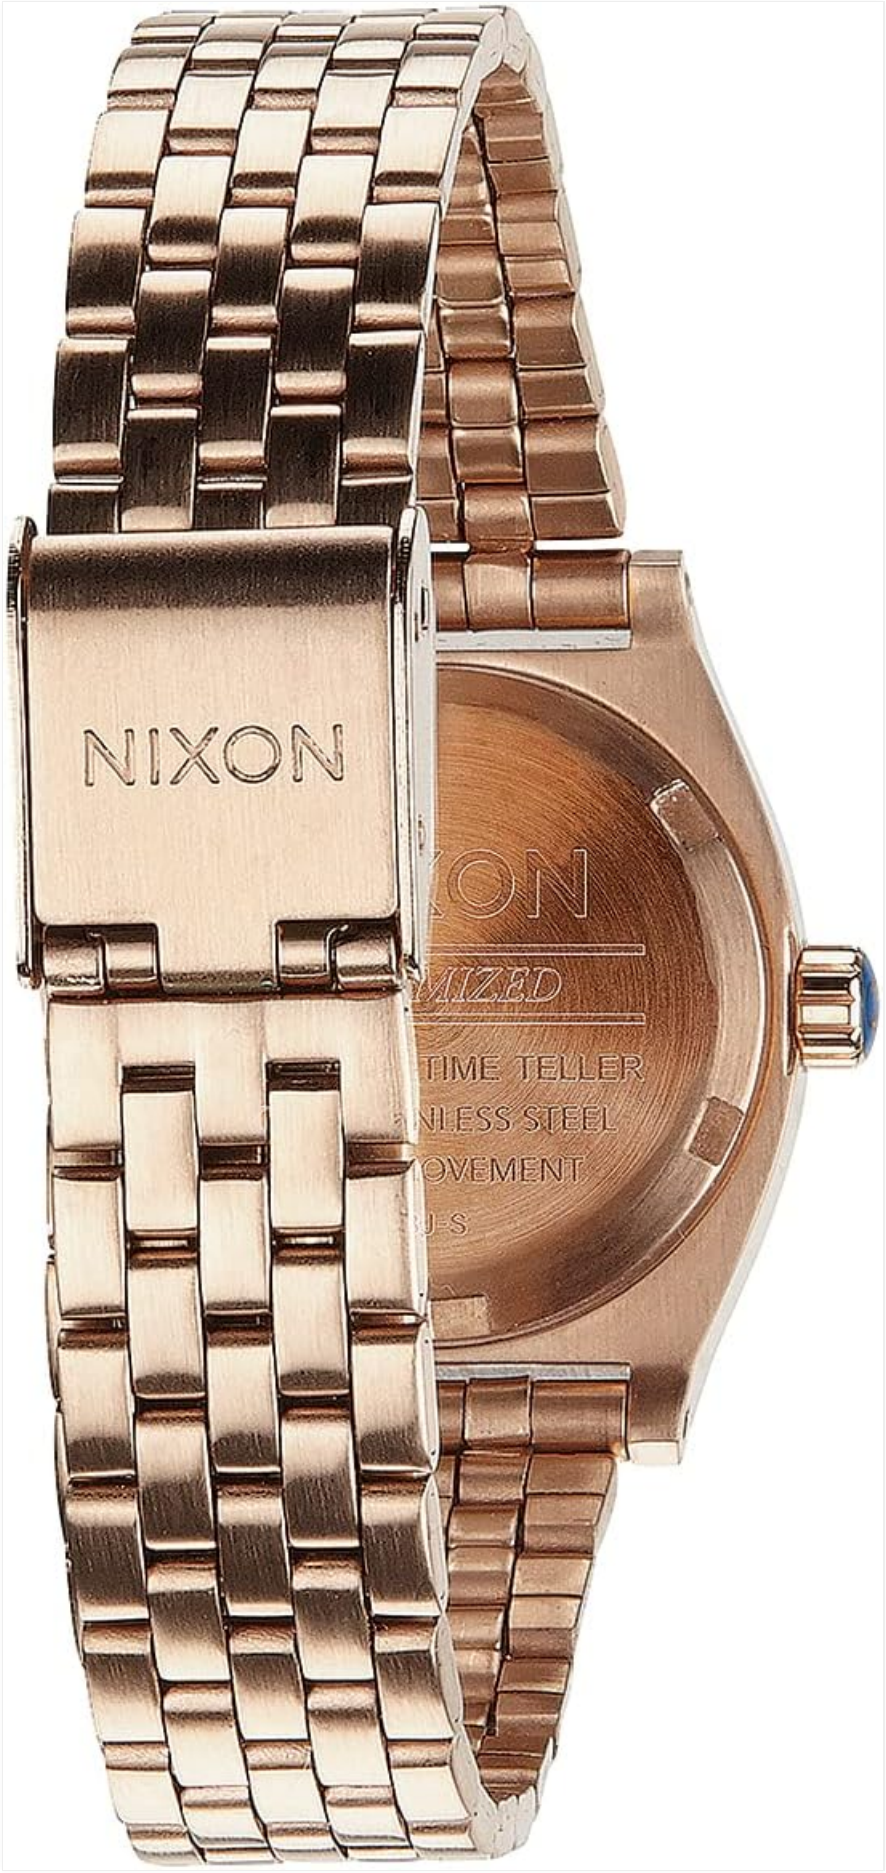


Image: Rear view of the watch, highlighting the stainless steel bracelet and its double-locking clasp mechanism.

Operating Your Watch

Water Resistance

Your NIXON Small Time Teller A399 watch is water resistant to 100 meters (10 ATM). This means it is suitable for showering, swimming, and snorkeling. **Do not operate the crown or pushers while the watch is wet or submerged in water**, as this can compromise the water resistance and lead to internal damage. After exposure to saltwater, rinse the watch with fresh water and dry it thoroughly.

General Use and Care

- Avoid exposing your watch to extreme temperatures (hot or cold) or sudden temperature changes.
- Protect your watch from strong impacts or shocks.
- Keep the watch away from strong magnetic fields, which can affect the accuracy of the quartz movement.



Image: Front view of the NIXON Small Time Teller A399 watch, showcasing its rose gold-tone finish and minimalist dial.



Image: The NIXON Small Time Teller A399 watch displayed on a wrist, illustrating its size and fit.

Maintenance

Battery Replacement

Your NIXON Small Time Teller A399 watch is powered by a Miyota Japanese quartz 3-hand movement, which requires a product-specific battery. When the watch stops running, it indicates that the battery needs replacement. It is highly recommended to have the battery replaced by a qualified watch technician or an authorized NIXON service center to ensure proper sealing and maintain water resistance.

Cleaning Your Watch

To clean your watch, wipe the case and bracelet with a soft, damp cloth. For stubborn dirt, a mild soap solution can be used, followed by rinsing with fresh water and thorough drying. Avoid using harsh chemicals or abrasive materials, which can damage the finish.



Image: Side profile of the NIXON Small Time Teller A399 watch, showing the slim case design and crown.

Troubleshooting

Problem	Possible Cause	Solution
Watch not running	Depleted battery	Replace battery (professional service recommended).
Time is inaccurate	Magnetic interference or low battery	Keep away from strong magnets. If issue persists, replace battery.
Condensation under crystal	Temperature change or water ingress	If condensation persists, seek professional service immediately to prevent corrosion.

Specifications

Model Number: A399897

Case Material: Stainless Steel

Band Material: Stainless Steel

Movement: Miyota Japanese Quartz 3-Hand

Water Resistance: 100 meters / 10 ATM

Watch Face Diameter: 26mm

Band Width: 12mm-14mm (tapered)

Product Dimensions: 5 x 4 x 4 inches; 1.8 ounces

Battery: 1 Product Specific battery (included)

Manufacturer: Nixon Inc.

First Available Date: March 18, 2014

Warranty and Support

For information regarding warranty coverage, service, or technical support for your NIXON Small Time Teller A399 watch, please refer to the official NIXON website or contact NIXON customer service directly. Keep your proof of purchase for any warranty claims.
Manufacturer: Nixon Inc.
For further assistance, visit the NIXON Store on Amazon.

© 2024 NIXON. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B00J2HTSZA

More documents and user manuals: **https://manuals.plus/**