Philips BT100B/37

Philips BT100B/37 Wireless Mini Portable Bluetooth Speaker User Manual

Model: BT100B/37

Introduction What's in the Box Product Overview Setup Operating Maintenance Troubleshooting Specifications Warranty & Support

1. Introduction

This manual provides instructions for the safe and efficient use of your Philips BT100B/37 Wireless Mini Portable Bluetooth Speaker. Please read these instructions carefully before using the product and retain them for future reference.


PHILIPS

Image: The Philips BT100B/37 Wireless Mini Portable Bluetooth Speaker, a compact black device designed for audio playback.

2. What's in the Box

Verify that your package contains the following items:

- Philips BT100B/37 Wireless Mini Portable Bluetooth Speaker
- USB Charging Cable
- Audio Cable (AUX)
- User Manual (this document)

3. Product Overview

Familiarize yourself with the components of your speaker.

3.1 Front View

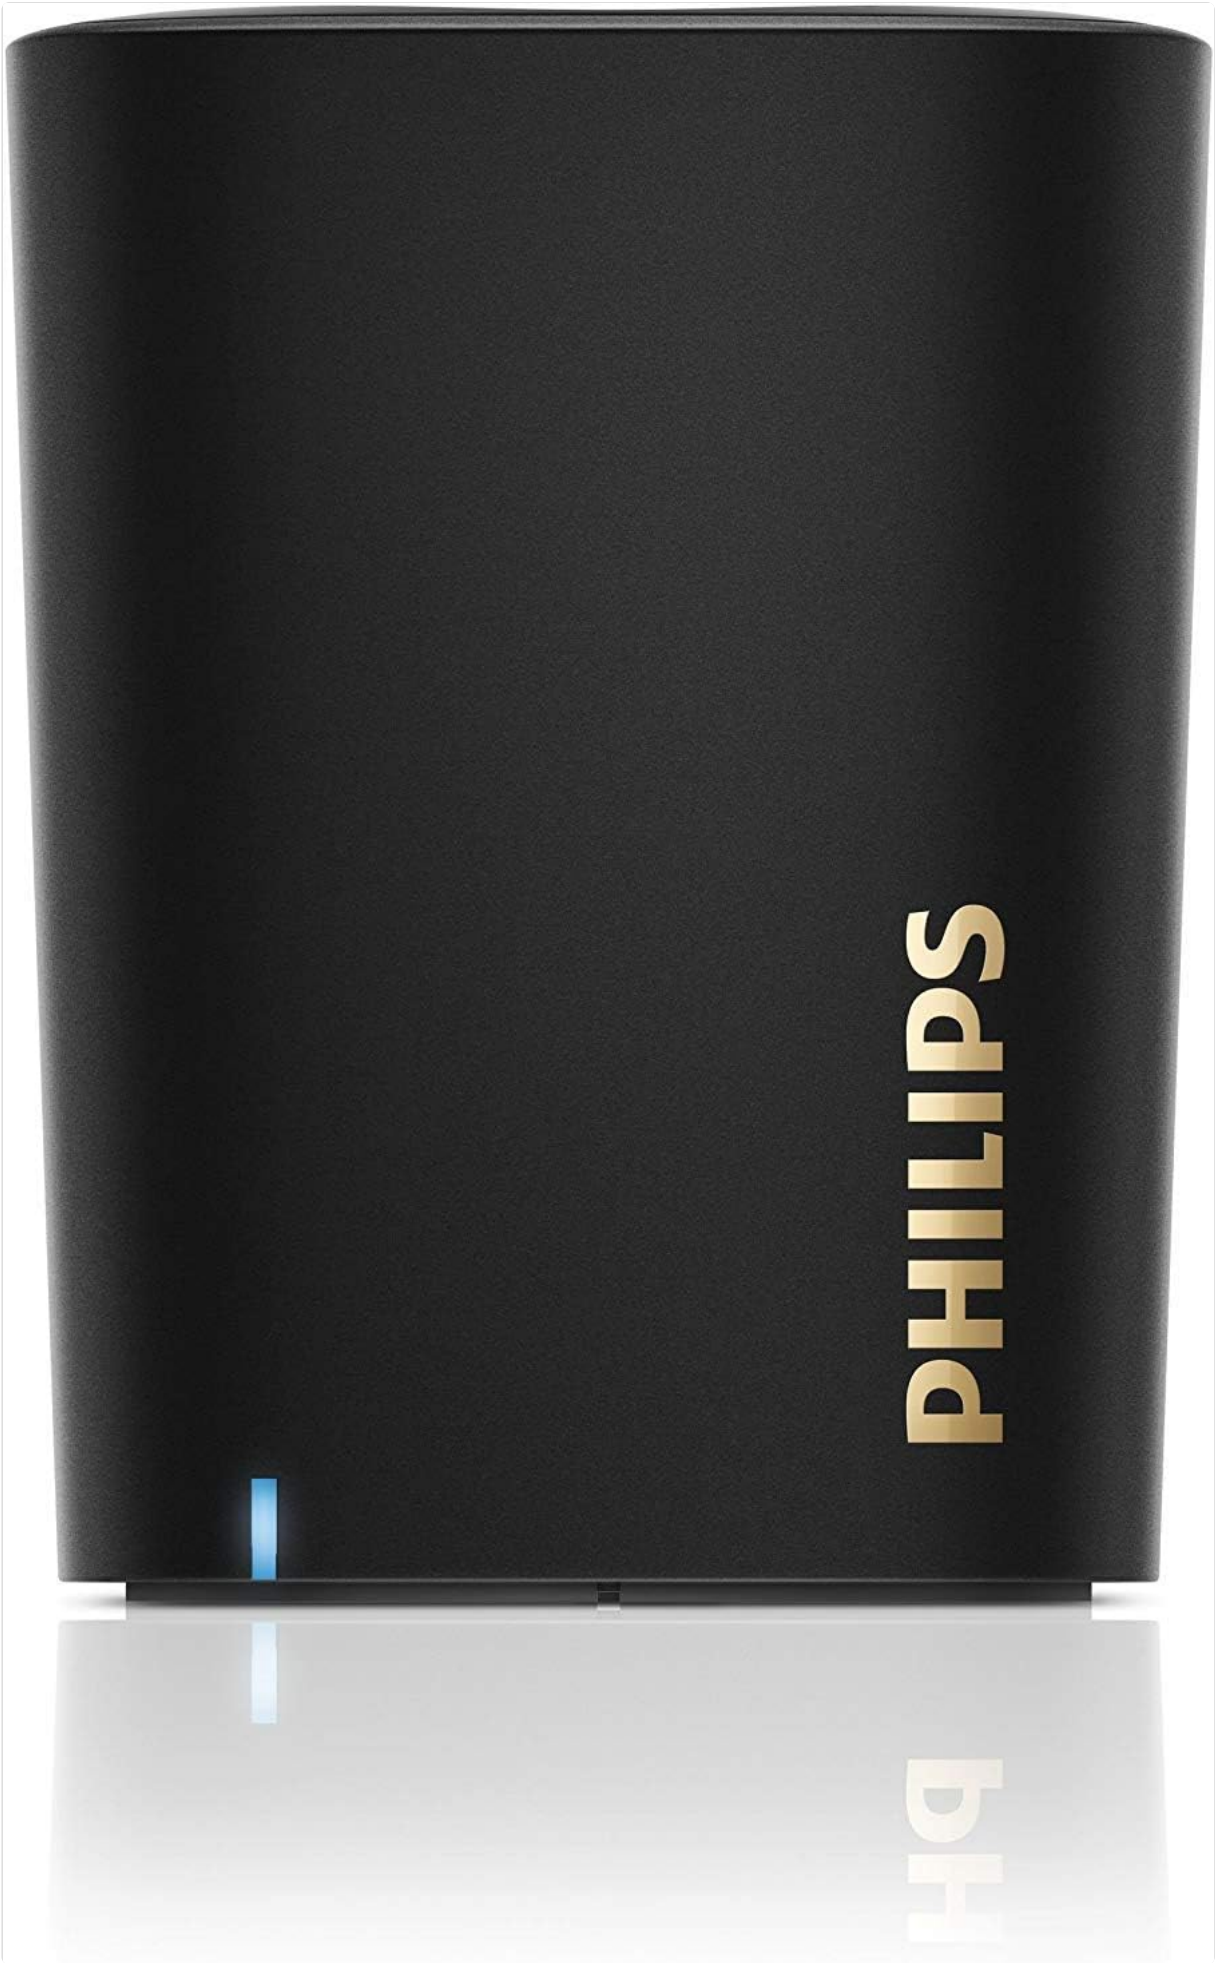


Image: Front view of the Philips BT100B/37 speaker, displaying the Philips logo and a blue LED indicator light.

- **Philips Logo:** Brand identification.

- **LED Indicator:** Shows power status, charging status, and Bluetooth pairing status.

3.2 Rear View and Connections



Image: Rear panel of the Philips BT100B/37 speaker, featuring the DC IN port (5V=0.5A), a slide switch for OFF/AUX mode, and an AUX audio input port.

- **DC IN (5V=0.5A):** Micro USB port for charging the speaker.
- **OFF/AUX Switch:** Slide switch to power off the speaker or select AUX input mode.
- **AUX:** 3.5mm audio input jack for connecting external audio devices.
- **Microphone:** Integrated for hands-free calls.

4. Setup

4.1 Charging the Speaker

1. Connect the small end of the USB charging cable to the **DC IN** port on the back of the speaker.
2. Connect the large end of the USB charging cable to a USB power adapter (not included) or a computer's USB port.
3. The LED indicator will illuminate during charging and turn off when fully charged. A full charge typically takes approximately 2-3 hours.

Note: For optimal battery life, fully charge the speaker before first use.

4.2 Powering On/Off

- To power on, slide the **OFF/AUX** switch to the right (away from OFF). The LED indicator will flash blue.
- To power off, slide the **OFF/AUX** switch to the **OFF** position.

4.3 Bluetooth Pairing

1. Ensure the speaker is powered on and the LED indicator is flashing blue, indicating it is in pairing mode.
2. On your Bluetooth-enabled device (e.g., smartphone, tablet), enable Bluetooth and search for available devices.
3. Select "Philips BT100" from the list of devices.
4. Once paired, the LED indicator will glow solid blue, and you may hear an audible confirmation.

Note: The speaker will automatically attempt to reconnect to the last paired device when powered on.

4.4 Connecting via AUX Input

1. Slide the **OFF/AUX** switch to the **AUX** position.
2. Connect one end of the 3.5mm audio cable to the **AUX** port on the speaker.
3. Connect the other end of the audio cable to the headphone jack or audio output of your external device.
4. Audio will now play through the speaker from your connected device.

5. Operating Instructions

5.1 Playing Audio

- Once connected via Bluetooth or AUX, start playing audio from your source device.
- Control playback (play/pause, skip tracks) directly from your connected device.

5.2 Volume Control

Adjust the volume directly from your connected Bluetooth device or the audio source when using AUX input.

5.3 Hands-Free Calling (Bluetooth Mode)

- When a call comes in while connected via Bluetooth, the music will pause.
- Answer or end calls using your connected phone. The speaker's built-in microphone will be used for communication.



Image: A person relaxing outdoors on grass, using a smartphone while the Philips BT100B/37 speaker plays music nearby, demonstrating portable use.

6. Maintenance

6.1 Cleaning

- Wipe the speaker with a soft, dry cloth.
- Do not use abrasive cleaners, alcohol, benzene, or other chemical solvents, as these may damage the casing.

6.2 Storage

- Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- If storing for an extended period, charge the battery periodically to maintain its health.

7. Troubleshooting

If you encounter issues, refer to the following common problems and solutions:

Problem	Solution
Speaker does not power on.	Ensure the battery is charged. Connect the speaker to a power source using the USB cable.
Cannot pair via Bluetooth.	• Ensure the speaker is in pairing mode (flashing blue LED). • Make sure Bluetooth is enabled on your device. • Move the speaker closer to your device. • If previously paired, try unpairing and re-pairing the device.

Problem	Solution
No sound.	• Check the volume level on both the speaker (via connected device) and the source device. • Ensure the correct input mode (Bluetooth or AUX) is selected. • If using AUX, ensure the cable is fully inserted and functional.
Sound distortion.	Reduce the volume on your source device or the speaker. Ensure the audio source is not overdriven.

8. Specifications

Key technical specifications for the Philips BT100B/37 speaker:

Feature	Detail
Brand	Philips
Model Name	BT100B/37
Connectivity Technology	Bluetooth
Wireless Technology	BluetoothWireless
Connectivity Protocol	Bluetooth
Speaker Maximum Output Power	2 Watts
Speaker Type	Outdoor (*Note: Not waterproof*)
Additional Features	Built-In Microphone
Controller Type	Battery Powered
Color	Black
Battery Average Life	8 Hours
Is Waterproof	FALSE
Speaker Size	2.5 Inches
Item Weight	0.38 Pounds
Power Source	AC (via USB charging)
Number of Batteries	1 Lithium Ion (included)
UPC	609585242548

9. Warranty & Support

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Philips support website. Keep your purchase receipt as proof of purchase.
Online Support: www.philips.com/support

© 2024 Philips. All rights reserved.