George Foreman GRP1060B-TX

George Foreman 4-Serving Removable Plate Electric Grill and Panini Press

Model: GRP1060B-TX | Brand: George Foreman

Product Overview

The George Foreman 4-Serving Removable Plate Electric Grill and Panini Press is designed for fast, healthy, and easy cooking. Featuring advanced George Tough nonstick coating and removable, dishwasher-safe plates, this grill simplifies meal preparation and cleanup. Its sloped grilling surface helps drain excess fat, making it ideal for a variety of foods from meats to sandwiches.

Setup and First Use

1. **Unpack:** Carefully remove all packaging materials and dispose of them properly.
2. **Clean Plates:** Before first use, wash the removable grill plates and drip tray in warm, soapy water or in the dishwasher. Rinse and dry thoroughly.
3. **Assemble:** Ensure the drip tray is correctly positioned beneath the front of the grill. Insert the clean, dry grill plates securely into their slots.
4. **Placement:** Place the grill on a stable, heat-resistant surface away from walls and cabinets.



Figure 1: The George Foreman 4-Serving Electric Grill in its closed position, ready for use.

Operating Instructions

Preheating

- **Plug In:** Plug the grill into a standard 110V electrical outlet. The red indicator light will illuminate, signaling that the grill is preheating.
- **Wait for Green Light:** The grill will preheat 35% faster than previous models. Once the grill reaches its optimal cooking temperature, the green indicator light will illuminate. This indicates the grill is ready for use.



Figure 2: Temperature-Ready Indicator Light. Red indicates heating, green indicates ready.

Grilling Food

1. **Place Food:** Carefully open the grill and place your food directly onto the bottom grill plate. The 60-square inch surface can accommodate up to 4 servings.
2. **Close Grill:** Gently close the top grill plate over the food. The floating hinge design allows the top plate to adjust to the thickness of your food, ensuring even cooking.
3. **Monitor Cooking:** Cooking times will vary depending on the type and thickness of the food. Refer to a reliable cooking chart for specific guidelines.



Figure 3: The grill open, demonstrating its 4-serving capacity.



Figure 4: Example of a grilled sandwich being prepared on the unit.

Fat Drainage

- The sloped grilling surface is designed to drain up to 42% of fat into the removable drip tray located at the front of the unit. This promotes healthier cooking.



Figure 5: The removable drip tray collects excess fat during cooking.

Maintenance and Cleaning

- **Unplug and Cool:** Always unplug the grill from the outlet and allow it to cool completely before cleaning.
- **Remove Plates:** The grill plates are easily removable for cleaning. Simply press the release tabs on the side of each plate and lift them out.
- **Dishwasher Safe:** Both the removable grill plates and the drip tray are dishwasher safe, making cleanup quick and convenient. For stubborn residue, soak the plates in warm, soapy water before washing.
- **Wipe Exterior:** Wipe the exterior of the grill with a damp cloth. Do not immerse the main unit in water or any other liquid.

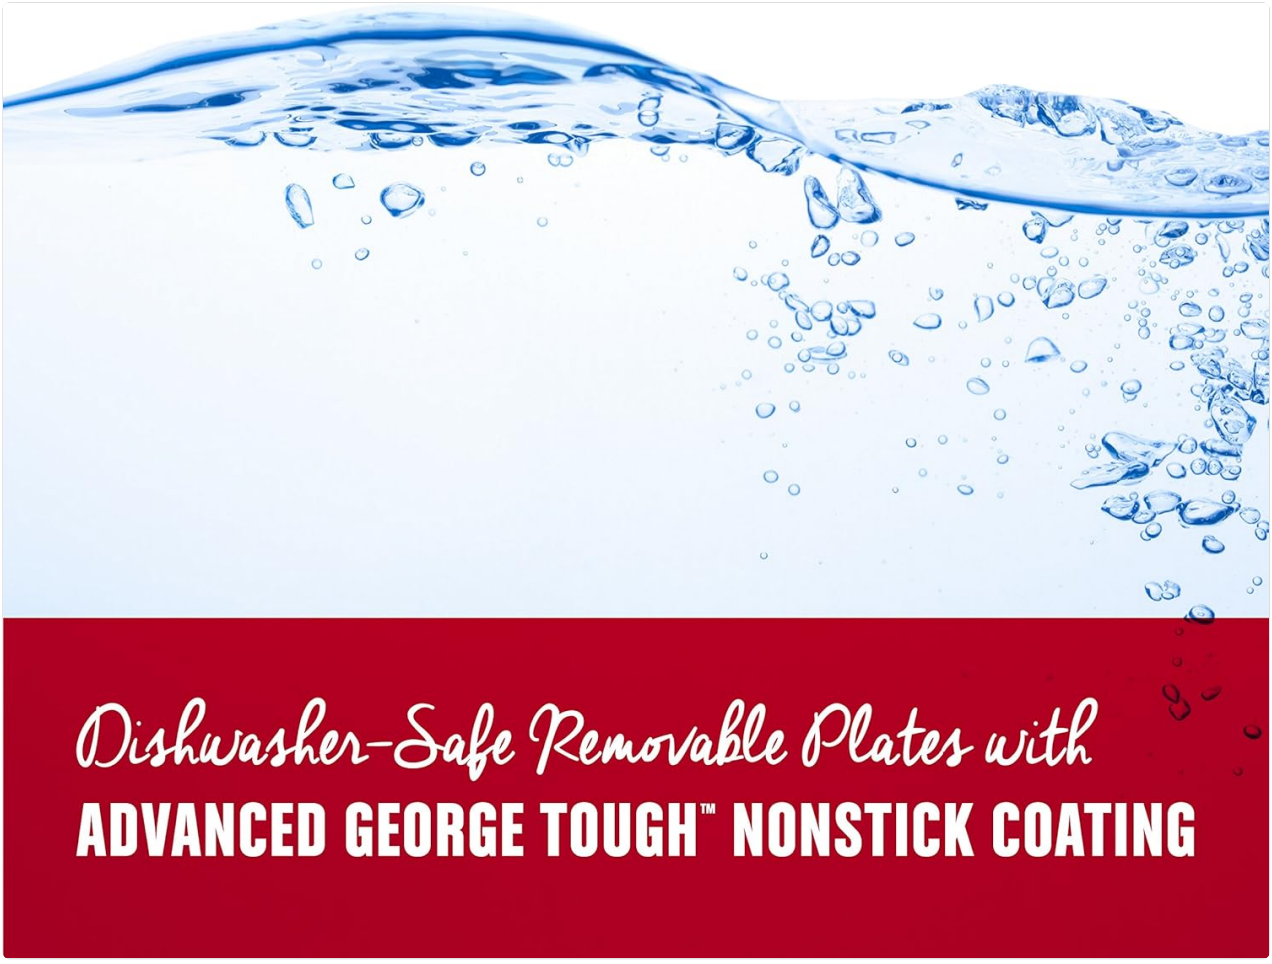


Figure 6: The grill plates feature advanced George Tough nonstick coating and are dishwasher-safe.

Specifications

Model Number	GRP1060B-TX
Brand	George Foreman
Color	Black
Material	Ceramic, PTFE Free
Product Dimensions	12"D x 12"W x 6.5"H
Wattage	1800 watts
Voltage	110V
Item Weight	0.62 Pounds (9.9 ounces)
Special Feature	Non-Stick Surface
Included Components	George Foreman Grp1060B 4 Serving Removable Plate Grill, Dishwasher Safe Removable Plates

Troubleshooting

- **Grill Not Heating:** Ensure the grill is properly plugged into a working electrical outlet. Check if the red indicator light is on. If not, try a different outlet.
- **Food Not Cooking Evenly:** Ensure the grill is fully preheated (green light is on) before placing food. The floating hinge should allow the top plate to rest evenly on the food.
- **Excessive Smoke:** This can occur with very fatty foods. Ensure the drip tray is in place and empty. Trim excess fat from meats before grilling.
- **Difficulty Cleaning:** Ensure the grill has cooled completely. For tough residue, soak removable plates in warm, soapy water before washing or running through the dishwasher.

Warranty and Support

This George Foreman grill comes with a **3-year limited warranty**. For warranty claims or technical support, please refer to the official George Foreman website or contact their customer service.
A detailed User Manual (PDF) is available for download: Download User Manual