FABER 110.0184.794

FABER GEMMA PB X A60 Wall-mounted Extractor Hood

Model: 110.0184.794

Introduction

This manual provides essential information for the safe and efficient use of your FABER GEMMA PB X A60 wall-mounted extractor hood. Please read all instructions carefully before installation and operation, and retain this manual for future reference.



Image: Front view of the FABER GEMMA PB X A60 wall-mounted extractor hood, showcasing its stainless steel finish and control panel.

Safety Information

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Ensure the power supply matches the voltage specified on the appliance rating label.
- Do not operate the hood if the power cord or plug is damaged.
- Installation must be performed by a qualified technician in accordance with local regulations.
- Regularly clean the grease filters to prevent fire hazards.
- Do not flambé under the hood.

- Ensure adequate ventilation in the room when the hood is used simultaneously with appliances burning gas or other fuels.

Setup and Installation

The FABER GEMMA PB X A60 is designed for wall-mounted installation. Proper installation is crucial for optimal performance and safety.

Dimensions and Mounting

The product dimensions are approximately 60 x 47 x 7 cm (width x depth x height for the main body). The total weight is 14.88 kg. Refer to the diagram below for detailed measurements and mounting points.

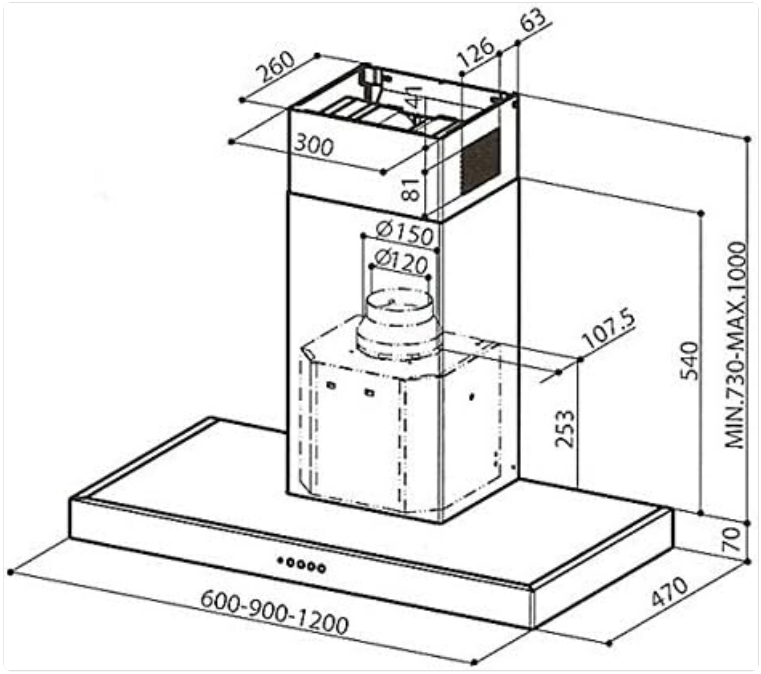


Image: Technical diagram showing the dimensions and installation points for the FABER GEMMA PB X A60 extractor hood, including ducting options.

Installation Steps (General)

1. Unpack the hood and check for any damage.
2. Determine the optimal mounting height above your cooking surface, adhering to local building codes and manufacturer recommendations.
3. Mark the drilling points on the wall according to the provided template or diagram.
4. Drill holes and insert wall plugs suitable for your wall type.
5. Mount the hood securely to the wall.
6. Connect the ducting system for extraction mode or install carbon filters for recirculation mode.
7. Connect the hood to the electrical supply, ensuring proper grounding.
8. Test all functions before final use.

Operating Instructions

The FABER GEMMA PB X A60 features button controls for easy operation.

Control Panel

The control panel is located on the front of the hood and consists of push buttons for various functions:

- **Power Button:** Turns the hood on/off.
- **Fan Speed Buttons:** Adjusts the extraction speed (e.g., Low, Medium, High). The hood has a maximum extraction capacity of 380 m^3/h.
- **Light Button:** Controls the halogen lighting system.

Usage Tips

- Turn on the hood a few minutes before you start cooking to create an airflow.
- Select the appropriate fan speed based on the intensity of cooking fumes.
- Allow the hood to run for a few minutes after cooking to clear any remaining odors and steam.
- The hood operates with a noise level of 61 dB at its highest setting.

Maintenance

Regular maintenance ensures the longevity and efficiency of your extractor hood.

Cleaning the Metallic Grease Filters

The metallic grease filters are removable and washable. They should be cleaned regularly, depending on usage, to maintain optimal performance and prevent grease buildup.

1. Switch off the hood and disconnect it from the power supply.
2. Remove the grease filters by releasing their latches.
3. Wash the filters by hand in hot soapy water or in a dishwasher on a low-temperature cycle.
4. Allow the filters to dry completely before reinserting them.

Replacing Carbon Filters (if applicable for recirculation mode)

If your hood is set up for recirculation, the activated carbon filters (not included with all models) should be replaced every 3-6 months, depending on usage. Refer to the specific instructions provided with the carbon filters for replacement.

Cleaning the Exterior

Clean the stainless steel exterior with a soft cloth and a non-abrasive cleaner specifically designed for stainless steel. Avoid using abrasive pads or harsh chemicals.

Lamp Maintenance

The hood uses halogen lighting. For information on recycling lamps and how to clean up broken or damaged lamps, please refer to general guidelines on lamp disposal and safety. Always disconnect power before attempting to replace a lamp.

Troubleshooting

This section provides solutions to common issues you might encounter with your extractor hood. For problems not listed here, contact qualified service personnel.

Problem	Possible Cause	Solution
Hood does not turn on.	No power supply; tripped circuit breaker; faulty wiring.	Check power plug and wall socket; reset circuit breaker; contact a qualified electrician.
Poor extraction performance.	Clogged grease filters; incorrect fan speed; obstructed ducting.	Clean or replace grease filters; select higher fan speed; check ducting for obstructions.

Problem	Possible Cause	Solution
Excessive noise.	Loose components; fan imbalance; obstructed ducting.	Ensure all components are securely fastened; check for foreign objects in the fan; inspect ducting.
Lights not working.	Burnt-out bulb; loose connection.	Replace the halogen bulb; check connections.

Specifications

Feature	Detail
Brand	FABER
Model Number	110.0184.794
GTIN (Global Trade Item Number)	08015139038147
Mounting Type	Wall-mounted
Material	Steel alloy (Stainless Steel)
Product Dimensions (W x D x H)	60 x 47 x 7 cm (main body)
Weight	14.88 kg
Motor Capacity	380 m^3/h
Noise Level (Max)	61 dB
Controls Type	Button
Lighting Type	Halogen
Power Consumption	28 watts (for lighting, motor power not specified in watts)
Filter Type	Metallic grease filter (removable and washable)
Energy Efficiency Rating	E

Warranty and Support

Warranty Information

For information regarding product warranty and return policies, please refer to the terms and conditions provided at the point of purchase or consult the retailer's specific guidelines. Generally, products can be returned within 30 days of receipt if you change your mind. For defective or damaged products, specific return policies apply. Always retain your proof of purchase.

Customer Support

For further assistance, technical support, or spare parts, please contact FABER customer service or visit the official FABER store online:

Visit FABER Store

© 2024 FABER S.p.A. All rights reserved.
This manual is subject to change without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question