Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Subaru 83071FJ011

Subaru Door Window Switch Panel

Model: 83071FJ011

Genuine Subaru Part

Introduction

This instruction manual provides essential information for the proper installation, operation, and maintenance of your new Subaru 83071FJ011 Door Window Switch Panel. This component is a direct replacement for the front driver door master power window switch in compatible Subaru vehicles. Please read this manual thoroughly before proceeding with installation or use to ensure safe and correct functionality.

Compatibility:

- 2013-2014 Subaru XV Crosstrek
- 2012-2014 Subaru Impreza 2.0L
- Does NOT fit WRX or STI models.

Product Overview



Figure 1: Front view of the Subaru 83071FJ011 Door Window Switch Panel. This image displays the primary control buttons for windows and door locks.



Figure 2: Rear view of the switch panel, showing the electrical connectors and mounting points. Proper connection to these points is crucial for functionality.



Figure 3: Original packaging displaying the genuine Subaru part number 83071FJ011, confirming authenticity.

Setup (Installation)

Installation of the door window switch panel requires basic automotive knowledge and tools. If you are unsure about any step, it is recommended to seek professional assistance.

Safety Precautions:

- Always disconnect the vehicle's negative battery terminal before beginning any electrical work to prevent accidental short circuits or injury.
- Wear appropriate personal protective equipment, such as gloves and eye protection.
- Ensure the vehicle is parked on a level surface with the parking brake engaged.

Tools Required:

- Phillips head screwdriver

- Flathead screwdriver or plastic trim removal tool
- Socket wrench set (if applicable for door panel removal)

Installation Steps:

1. **Prepare the Vehicle:** Disconnect the negative battery terminal.
2. **Remove Door Panel:** Carefully remove the interior door panel to access the existing window switch. This typically involves removing screws hidden under trim caps or in door handles, then prying the panel away from the door frame using a trim removal tool. Refer to your vehicle's service manual for specific door panel removal instructions.
3. **Disconnect Old Switch:** Once the door panel is loose, locate the existing window switch panel. Disconnect the electrical connectors by pressing the release tabs and gently pulling them apart. If the switch is secured by screws or clips, remove them.
4. **Remove Old Switch:** Carefully detach the old switch panel from the door panel assembly.
5. **Install New Switch:** Position the new Subaru 83071FJ011 switch panel into the opening on the door panel. Ensure it seats correctly and secure it with any screws or clips that were removed.
6. **Connect Electrical:** Reconnect all electrical connectors to the new switch panel. Ensure they click securely into place.
7. **Test Functionality:** Before fully reassembling the door panel, reconnect the negative battery terminal. Test all functions of the new switch: all windows (up/down), window lock, and door lock/unlock. If all functions work correctly, proceed to the next step. If not, disconnect the battery and re-check all connections.
8. **Reassemble Door Panel:** Carefully reattach the door panel to the door frame, ensuring all clips align and secure properly. Reinstall any screws removed earlier.
9. **Final Check:** Confirm all functions are still working after full reassembly.

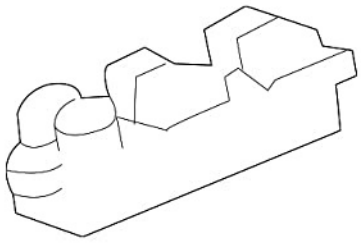


Figure 4: Exploded diagram showing the location of the switch panel (item 14) within the door assembly. This diagram aids in identifying the component's position.

Operating Instructions

The Subaru 83071FJ011 Door Window Switch Panel provides intuitive control over your vehicle's windows and door locks.

Window Control:

- **Driver's Window:** Pull the driver's window switch up to raise the window, and press it down to lower the window. Some models may feature an auto up/down function, allowing a single full press or pull to fully open or close the window.
- **Passenger Windows:** Use the corresponding switches for each passenger window. Pull up to raise and press down to lower.

Window Lock:

- Press the window lock button (often marked with a window icon and a diagonal line through it) to disable the

operation of all passenger window switches. The driver's window switch will remain functional.
- Press the button again to unlock the passenger window controls.

Door Lock/Unlock:

- Press the door lock button (often marked with a lock icon) to lock all vehicle doors.
- Press the door unlock button (often marked with an unlocked lock icon) to unlock all vehicle doors.

Maintenance

Proper maintenance ensures the longevity and reliable operation of your window switch panel.

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the switch panel. For stubborn dirt, a slightly damp cloth with mild interior cleaner can be used, but ensure no liquid enters the switch mechanism.
- **Avoid Liquid Exposure:** Do not spill liquids directly onto the switch panel, as this can cause electrical damage.
- **Regular Inspection:** Periodically check the switch for any signs of wear, damage, or loose connections.

Troubleshooting

If you experience issues with your window switch panel, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Window does not move when switch is pressed.	Loose electrical connection, blown fuse, faulty window motor, or faulty switch.	Check all electrical connections to the switch. Inspect the vehicle's fuse box for a blown fuse related to power windows and replace if necessary. If the issue persists, the window motor or the switch itself may be faulty. Professional diagnosis is recommended.
Only driver's window works, passenger windows do not.	Window lock feature is engaged.	Press the window lock button on the driver's switch panel to disengage the lock.
Door locks do not respond to switch.	Loose electrical connection, blown fuse, or faulty door lock actuator.	Check electrical connections. Inspect relevant fuses. If the issue persists, the door lock actuator may need replacement.

If troubleshooting steps do not resolve the issue, it is advisable to consult a certified Subaru technician or an authorized service center.

Specifications

Feature	Specification
Model Number	83071FJ011

Feature	Specification
Item Weight	1 Pound
Material	Metal (internal components)
Operation Mode	Power
Connector Type	Crimp
Actuator Type	Rocker
Control Method	Touch
Number of Positions	1 (for each switch function)
Circuit Type	2-way
First Available Date	June 17, 2014

Warranty

This Subaru 83071FJ011 Door Window Switch Panel comes with a**1-Year Manufacturer Warranty**. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims. For specific terms and conditions, refer to the warranty information provided by your Subaru dealer or the official Subaru website.

Support

For further assistance, technical support, or inquiries regarding your Subaru 83071FJ011 Door Window Switch Panel, please contact:

- Your authorized Subaru dealership or service center.
- Subaru Customer Service (refer to the official Subaru website for contact details).

When contacting support, please have your vehicle's VIN (Vehicle Identification Number) and the part number (83071FJ011) readily available.

© 2024 Subaru Corporation. All rights reserved.
This manual is for informational purposes only. Specifications are subject to change without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B00L2OJURW

More documents and user manuals: **https://manuals.plus/**