Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Quik Shade 160717

Quik Shade Expedition Instant Canopy Instruction Manual

Model: 160717

1. Important Safety Information

Read and understand all safety warnings and instructions before setting up or using the canopy. Failure to follow these instructions may result in injury or product damage.

- **Anchoring:** Always ensure the canopy is properly anchored to the ground using the provided stakes or additional weights to withstand winds. Never leave the canopy unattended in windy conditions.
- **UV Exposure:** While the canopy provides UV protection, prolonged exposure to the sun can still be harmful. Use additional sun protection as needed.
- **Weather Conditions:** Exercise caution in wet weather. Do not use the canopy during heavy rain, strong winds, lightning, or other severe weather conditions. Disassemble and store the canopy immediately if severe weather is anticipated.
- **Assembly:** Assembly should ideally be performed by two people for ease and safety, although one person can manage. Keep children and pets away from the assembly area.
- **Fire Safety:** Keep all flame and heat sources away from the canopy fabric. The fabric is not fireproof.

2. Package Contents

Verify that all components are present before beginning assembly:

- Steel Frame (1)
- Fitted Canopy Cover (1)
- Stabilizing Ground Stakes (4)
- Carry Bag (1)

3. Setup Instructions

Follow these steps for quick and easy assembly of your Quik Shade Expedition Instant Canopy.

3.1 Unpacking and Initial Frame Expansion

1. Remove the canopy frame and cover from the carry bag.
2. Place the frame in the desired setup location. With a partner, grasp two opposing outer legs and slowly pull the frame outwards, partially expanding it.

3.2 Attaching the Canopy Cover

3. Unfold the canopy cover and drape it over the partially expanded frame. Ensure the Quik Shade logo is facing the desired direction.
4. Secure the corners of the canopy cover to the frame's corner brackets using the integrated hook-and-loop fasteners.

3.3 Fully Expanding the Frame

5. Continue to pull the opposing outer legs until the frame is almost fully expanded.
6. Locate the push/pull latch sliders on each leg's upper section. Push the slider upwards until it clicks into place, locking the frame in its fully open position.

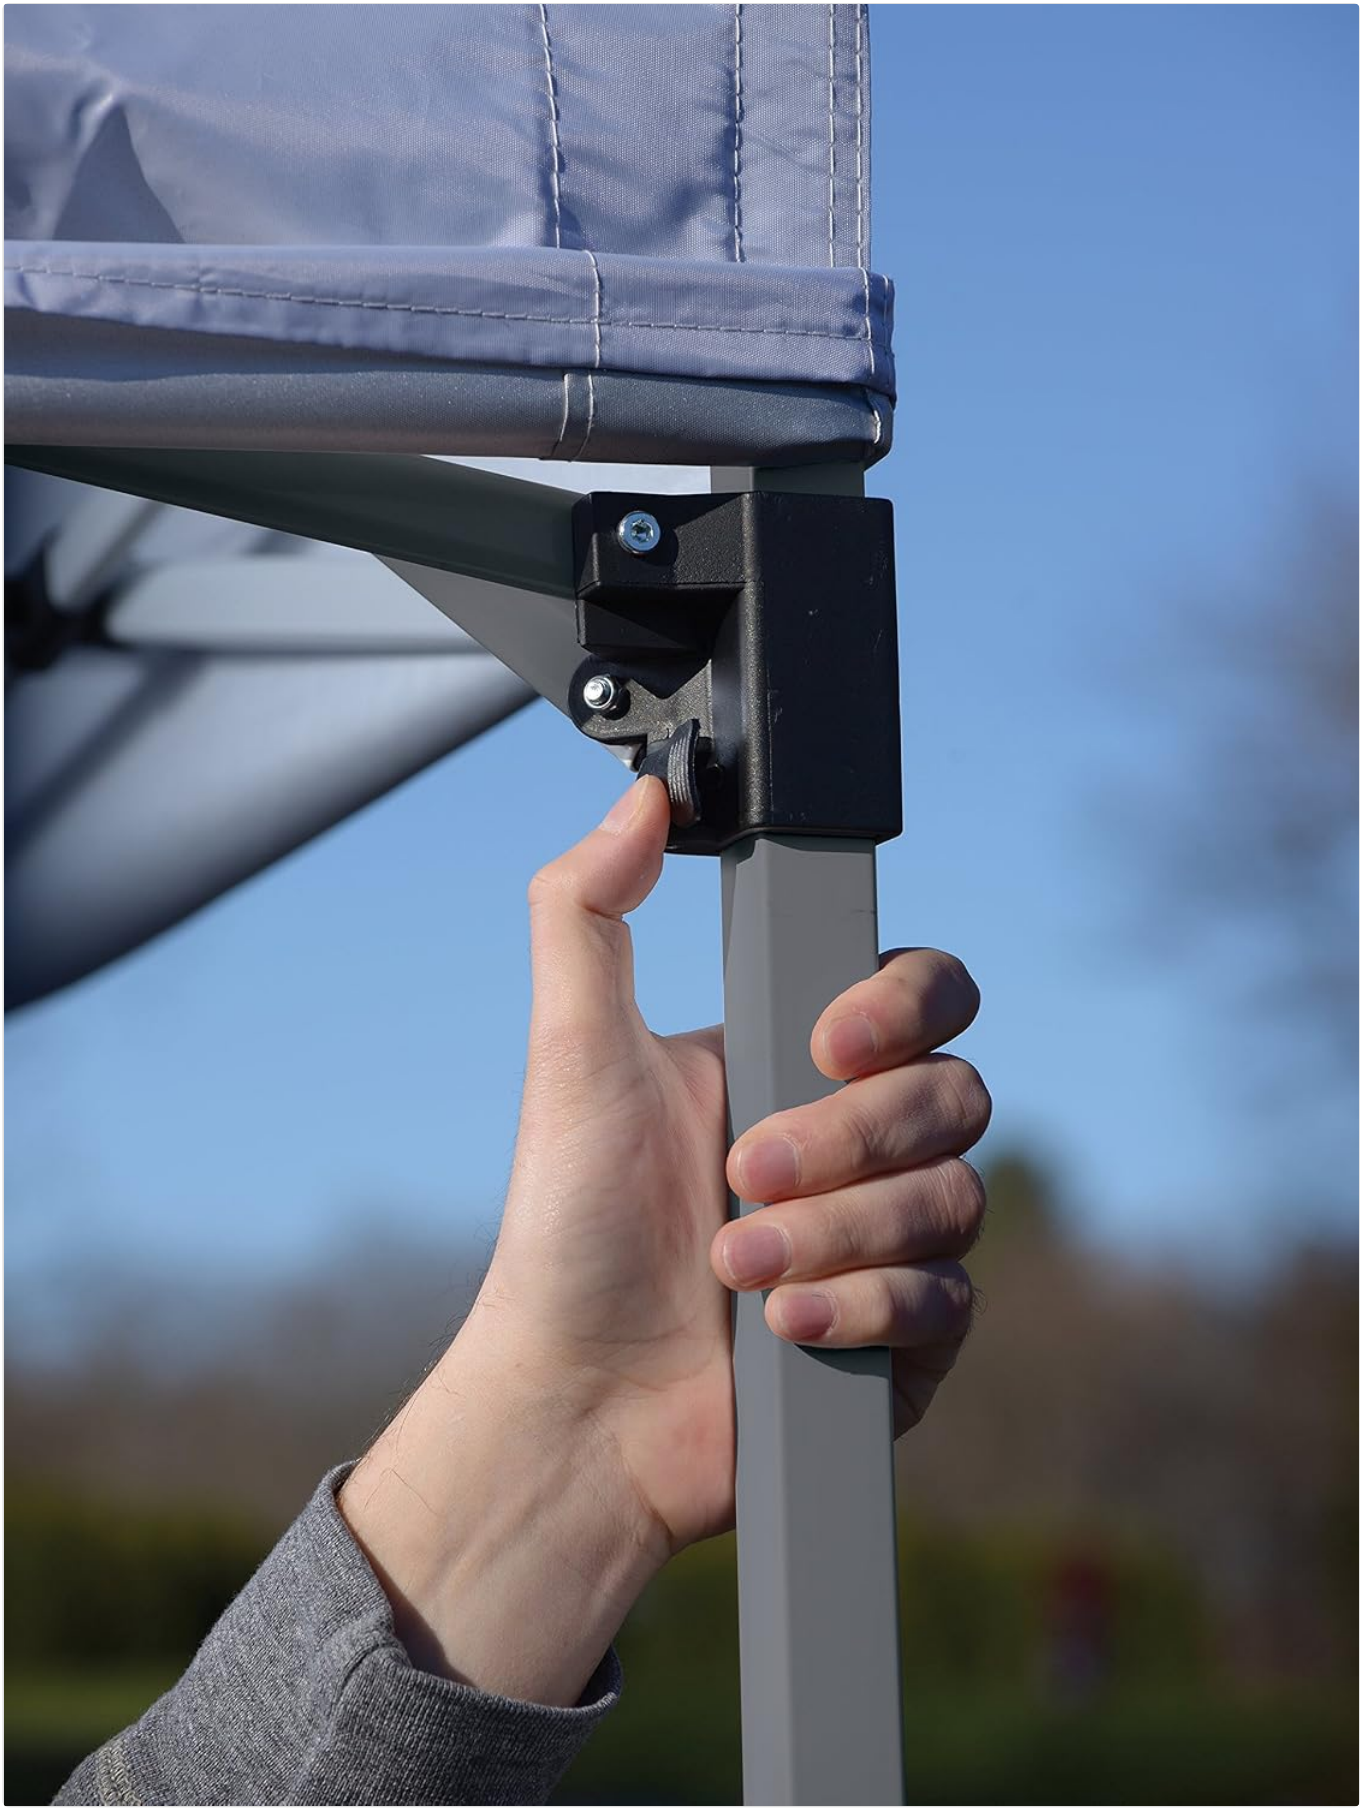


Image: Hand operating the push/pull latch slider to lock the frame.

3.4 Adjusting Leg Height

7. Press the push-button leg extender on each leg.
8. Slide the inner leg section downwards to extend the leg to one of the three available height adjustments. Ensure the button securely locks into the desired hole. Repeat for all four legs.



Image: Hand pressing the push-button to adjust leg height.

3.5 Securing the Canopy

9. Use the provided ground stakes to secure each leg base to the ground. Insert the stakes through the holes in the

footpads and drive them firmly into the soil at an angle.

10. For additional stability, especially in moderate wind, consider using guy ropes (not included) attached to the canopy's upper corners and anchored further out.

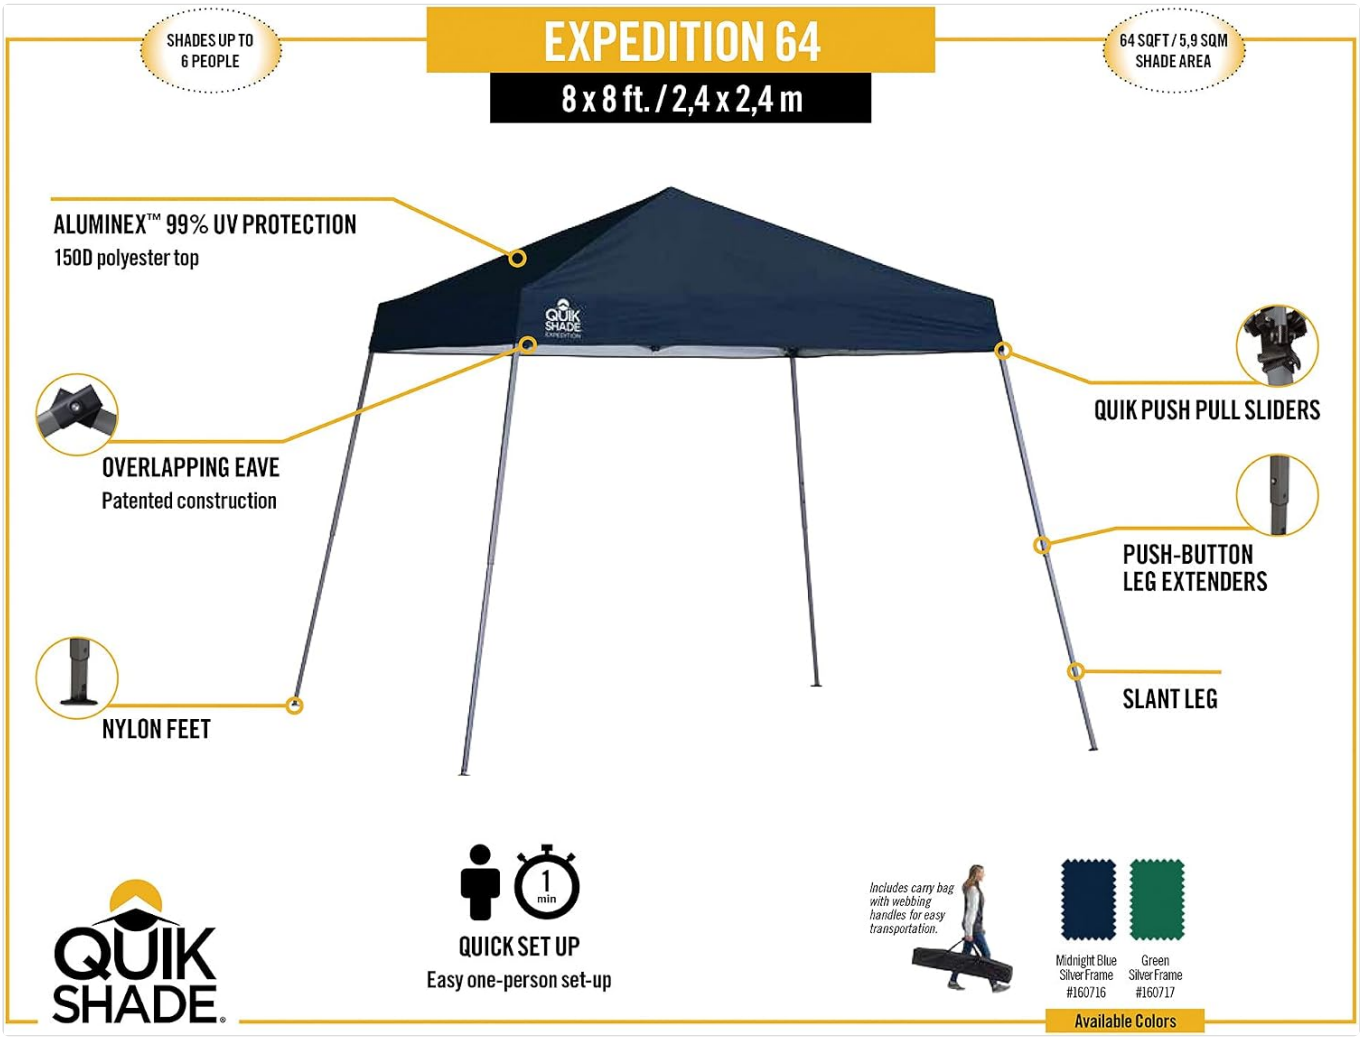


Image: Diagram showing key features and components for setup.

4. Operating Instructions

The Quik Shade Expedition Instant Canopy is designed to provide temporary shade and protection from light weather conditions.

- **Shade Provision:** The 150 denier polyester fabric top offers 99% UV protection and creates a cool shade area.
- **Height Adjustment:** The canopy features three height adjustments. To change the height, press the push-button leg extender on each leg and slide the inner leg section to the desired position. Ensure all buttons are securely locked.
- **Disassembly:** To disassemble, reverse the setup steps. Lower the legs, unlock the frame sliders, and gently collapse the frame. Remove the canopy cover and store all components in the carry bag.



Image: The Quik Shade Expedition Instant Canopy providing shade on a beach.

5. Maintenance

Proper maintenance will extend the life of your canopy.

- **Cleaning:** Clean the canopy fabric with mild soap and water. Do not use harsh detergents or abrasive cleaners. Allow the fabric to air dry completely before storage.
- **Frame Care:** Inspect the steel frame periodically for any signs of rust or damage. The powder-coated finish helps prevent corrosion, but minor scratches can be touched up.
- **Storage:** Always ensure the canopy cover and frame are completely dry before storing them in the carry bag. Store in a cool, dry place away from direct sunlight and extreme temperatures.
- **Inspection:** Before each use, inspect all parts for wear, damage, or loose connections. Do not use if any components are damaged.

6. Troubleshooting

Common issues and their solutions.

- **Canopy is unstable:** Ensure all legs are fully extended and locked into place. Verify that all ground stakes are securely driven into the ground. In windy conditions, use additional anchoring methods.
- **Frame difficult to expand/collapse:** Ensure no fabric is caught in the frame joints. Apply a silicone-based lubricant to moving parts if necessary.
- **Water pooling on canopy:** Ensure the canopy cover is taut and properly secured to the frame. Adjust leg heights if necessary to create proper tension.
- **Damaged fabric:** Small tears can often be repaired with a fabric repair kit. For larger damage, contact customer

support for replacement options.

7. Specifications

Detailed product specifications for the Quik Shade Expedition Instant Canopy.

Feature	Specification
Brand	Quik Shade
Model Number	160717
Assembled Dimensions	10' x 10' (3m x 3m)
Total Shade Area	64 sq. feet (5.9 sq. meters)
Canopy Material	150 Denier Polyester with Aluminex-backed top
Frame Material	Alloy Steel / Steel, Powder-Coated
Color	Green
Item Weight	26 pounds (11.8 kg)
UV Protection	99%
Water Resistance	Water Resistant
Frame Type	Slant Leg
Included Components	Frame, Cover, Carry Bag, 4 Stake Anchors



Image: Canopy dimensions diagram.

8. Warranty Information

The Quik Shade Expedition Instant Canopy comes with a**1-year limited warranty** from the date of purchase. This warranty covers manufacturing defects in materials and workmanship under normal use. It does not cover damage resulting from misuse, improper assembly, neglect, accidents, or severe weather conditions.

Please retain your proof of purchase for warranty claims.

9. Customer Support

For further assistance, replacement parts, or warranty inquiries, please contact Quik Shade customer service. Refer to the official Quik Shade website or your purchase documentation for the most current contact information.

When contacting support, please have your model number (160717) and proof of purchase readily available.

© 2024 Quik Shade. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B00L5ZUL7Q

More documents and user manuals: **https://manuals.plus/**