NIXON H012-349

Nixon Mini Blaster Portable Bluetooth Speaker User Manual


Model: H012-349

Introduction

This manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your Nixon Mini Blaster Portable Bluetooth Speaker. Please read this manual thoroughly before using the device to ensure optimal performance and longevity.

Product Overview

The Nixon Mini Blaster is a compact portable speaker designed for robust performance in various environments. It features Bluetooth connectivity for wireless audio streaming and calls, and its durable exterior is built to withstand water, sand, and shock.

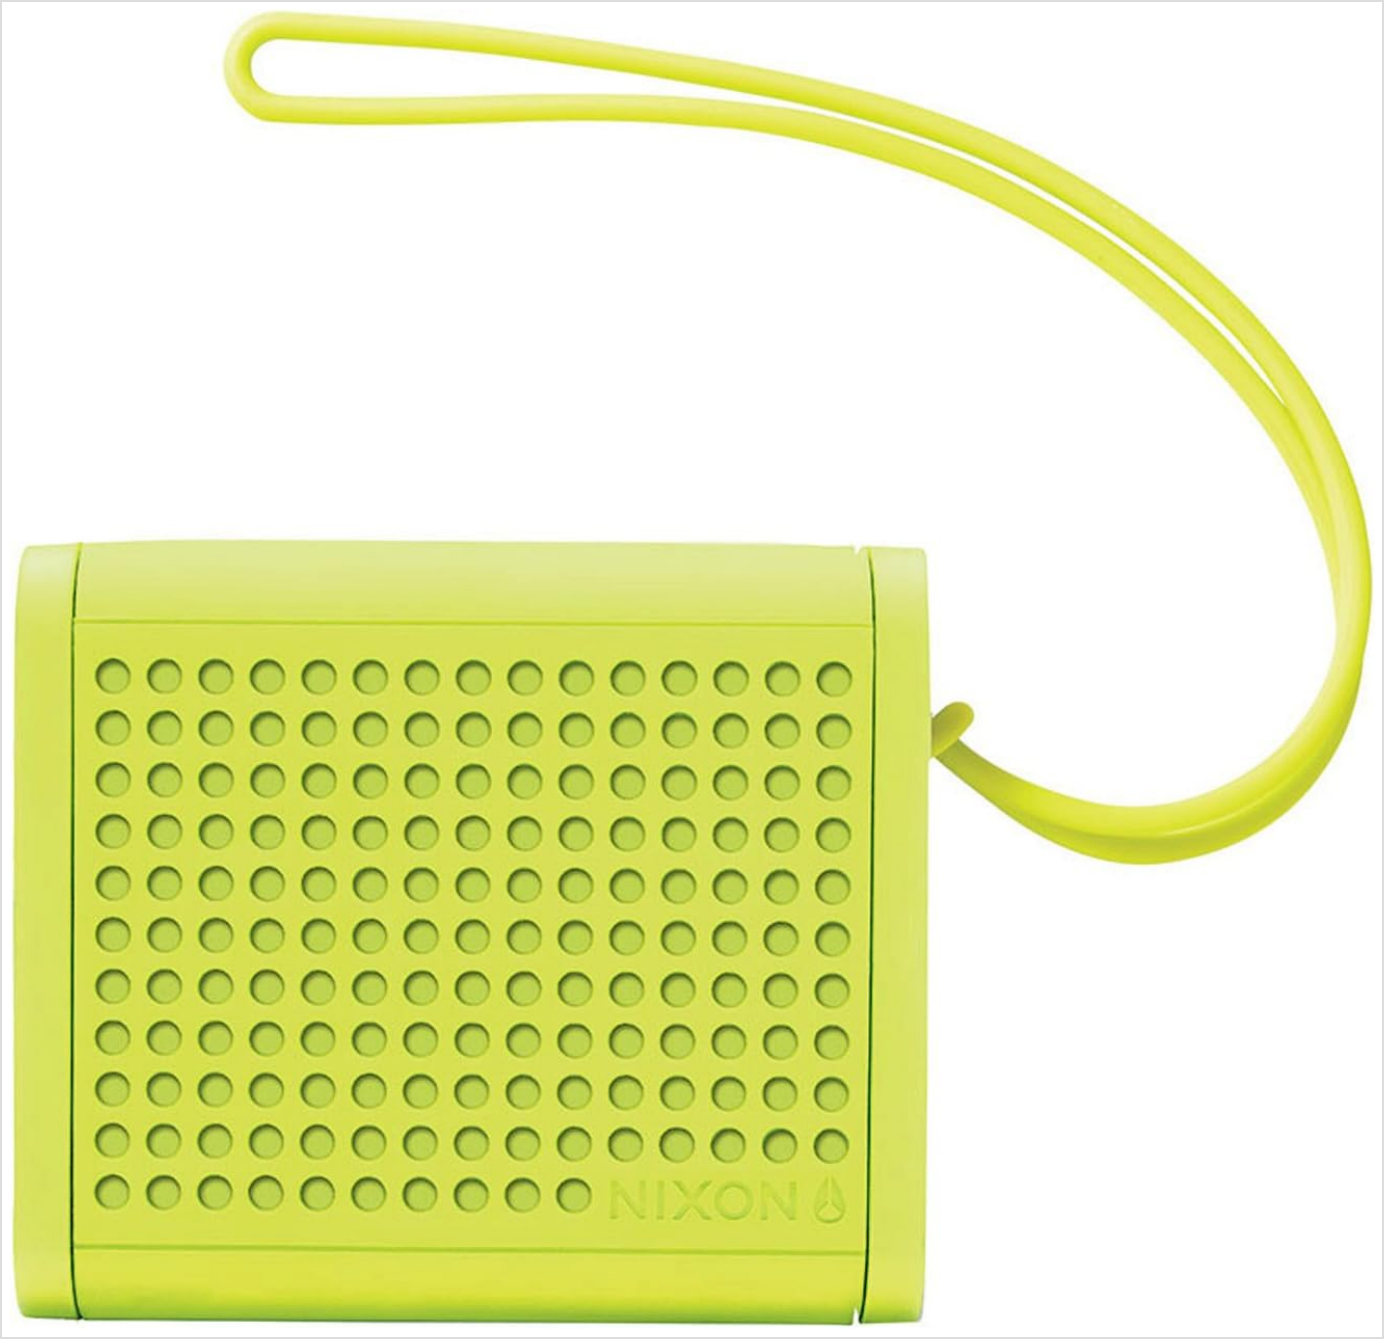

This image displays the Nixon Mini Blaster portable Bluetooth speaker. It is a compact, rectangular device with a neon green finish. The front grille features a pattern of small circular perforations, and the 'NIXON' logo is visible at the bottom right. A matching neon green silicone strap is attached to one side, indicating its portability.

Setup

1. Unpacking

Carefully remove all components from the packaging. The package should contain the Nixon Mini Blaster speaker and a charging cable (not pictured).

2. Charging the Speaker

1. Connect the charging cable to the speaker's charging port.
2. Plug the other end of the charging cable into a compatible USB power source.
3. Allow the speaker to charge fully before initial use. A full charge provides approximately 6-8 hours of battery life.

3. Power On/Off

- To power on: Press and hold the power button until the indicator light illuminates.
- To power off: Press and hold the power button until the indicator light turns off.

Operating Instructions

1. Bluetooth Pairing

1. Ensure the speaker is powered on and in pairing mode (indicator light may flash).
2. On your audio device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select 'Nixon Mini Blaster' from the list of found devices.
4. Once paired, the speaker will indicate a successful connection (e.g., a solid indicator light or an audible tone).

2. Stereo Pairing (Two Mini Blasters)

To achieve stereo sound, you can pair two Nixon Mini Blaster speakers together:

1. Ensure both Mini Blaster speakers are powered on and not connected to any other Bluetooth device.
2. Follow the specific instructions provided with your speakers for initiating stereo pairing mode. This typically involves pressing a designated button on both speakers simultaneously or in sequence.
3. Once the speakers are paired with each other, connect your audio device to one of the speakers via Bluetooth as described above.

3. Audio Playback and Calls

- After successful Bluetooth pairing, you can play audio from your connected device through the Mini Blaster.
- Use the controls on your audio device to manage playback (play, pause, skip tracks) and adjust volume.
- The speaker also supports hands-free calling. When a call comes in, audio will route through the speaker, allowing you to speak and listen wirelessly.

Maintenance

1. Cleaning

- Wipe the exterior of the speaker with a soft, damp cloth.
- Avoid using harsh chemicals or abrasive cleaners, as these can damage the finish.
- Ensure all ports are dry before charging or connecting cables.

2. Durability Features

The Mini Blaster is designed to be resistant to water, sand, and shock. While durable, proper care is recommended:

- Avoid prolonged submersion in water.
- Rinse off sand or dirt gently with clean water and dry thoroughly.
- Protect from extreme impacts, despite its shock-resistant design.

3. Storage

Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures when not in use for extended periods.

Troubleshooting

Problem	Possible Cause	Solution
Speaker does not power on	Low or depleted battery	Charge the speaker fully using the provided cable.
Unable to pair via Bluetooth	Speaker not in pairing mode; device Bluetooth off; too far from speaker	Ensure speaker is in pairing mode. Turn Bluetooth on your device. Move device closer to speaker. Try unpairing and re-pairing.
Poor sound quality or no sound	Volume too low; speaker too far from device; interference	Increase volume on both speaker and device. Reduce distance between devices. Avoid obstacles or other wireless devices causing interference.
Speaker turns off unexpectedly	Low battery; internal issue	Ensure the speaker is fully charged. If the issue persists, contact customer support.

Specifications

Brand: NIXON

Model: H012-349

Product Dimensions: 17.78 x 15.24 x 7.62 cm

Item Weight: 90.72 g

Connectivity: Bluetooth

Audio Output Mode: Stereo

Power Source: Battery Powered

Battery Average Life: 8 Hours

Special Features: Shockproof, Water Resistant, Sand Resistant

Manufacturer: Nixon Men's Apparel

Warranty and Support

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official Nixon website. Keep your proof of purchase for any warranty claims.

For further assistance, you may contact Nixon customer service directly.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question