Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Fossil ES3716

Fossil Women's Virginia Quartz Stainless Steel Watch

Model: ES3716

Introduction Features Setup Operation Maintenance Troubleshooting Specifications Warranty & Support

1. Introduction

This manual provides detailed instructions for the Fossil Women's Virginia Quartz Stainless Steel and Acetate Three-Hand Watch, Model ES3716. This timepiece features a quartz movement, a durable stainless steel case, and a bracelet with white horn acetate accents. Please read this manual thoroughly to ensure proper use and care of your watch.





Figure 1: Front view of the Fossil Women's Virginia Quartz Watch, Model ES3716, showcasing the rose gold-tone case and white horn acetate bracelet.

2. Features

- **Movement:** Accurate Quartz three-hand movement.
- **Case Material:** Durable Stainless Steel in a rose gold tone.
- **Band Material:** Combination of Stainless Steel and White Horn Acetate.
- **Dial:** Rose Gold dial with crystal embellishments and Roman numeral markers.
- **Crystal:** Mineral crystal for enhanced durability.
- **Water Resistance:** Water resistant up to 165 feet (5 ATM), suitable for short periods of recreational swimming, but not diving or snorkeling.
- **Closure:** Adjust-O-Matic deployant clasp with push-button release for easy self-adjustment.
- **Dimensions:** Case diameter of 30mm, band width of 14mm, case thickness of 9mm.








Figure 2: Side view of the watch, highlighting the crown and crystal-embellished bezel.

3. Setup

3.1 Adjusting the Band

The Fossil Virginia watch features an Adjust-O-Matic closure, allowing for easy self-adjustment of the bracelet length. To adjust, locate the removable links on the underside of the bracelet. These links can be removed or added to achieve a comfortable fit. For detailed instructions on link removal, refer to the video below or consult a professional jeweler.



Video 1: Official Fossil video showcasing the Fossil Women's Virginia Quartz Stainless Steel Horn Acetate Dress Watch, Model ES3716.

3.2 Setting the Time

1. Pull the crown (the small knob on the side of the watch case) out to the first position.
2. Turn the crown clockwise or counter-clockwise to set the hour and minute hands to the correct time.
3. Once the time is set, push the crown back into its original position to start the watch movement.

4. Operating Instructions

To wear the watch, open the deployant clasp by pressing the push-buttons on the sides. Place the watch on your wrist and close the clasp until it clicks securely. Ensure the watch is not too tight or too loose for optimal comfort and to prevent skin irritation.



Figure 3: The Fossil Virginia watch displayed on a wrist, showing its fit and appearance.

5. Maintenance

5.1 Cleaning Your Watch

To maintain the appearance of your Fossil watch, regularly wipe the case and bracelet with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials, as these can damage the finish. For the best care, ensure the crown is pushed in before cleaning to maintain water resistance.

5.2 Battery Replacement

This watch is powered by one Lithium Metal battery. When the watch stops running, it indicates that the battery needs to be replaced. It is recommended to have the battery replaced by a qualified watch technician to ensure the water resistance seal is properly maintained.

5.3 Water Resistance Guidelines

Your watch has a water resistance rating of 165 feet (5 ATM). This means it is suitable for short periods of recreational swimming. It is **not** suitable for diving, snorkeling, or high-impact water sports. Avoid operating the crown or pushers while the watch is wet to prevent water intrusion.

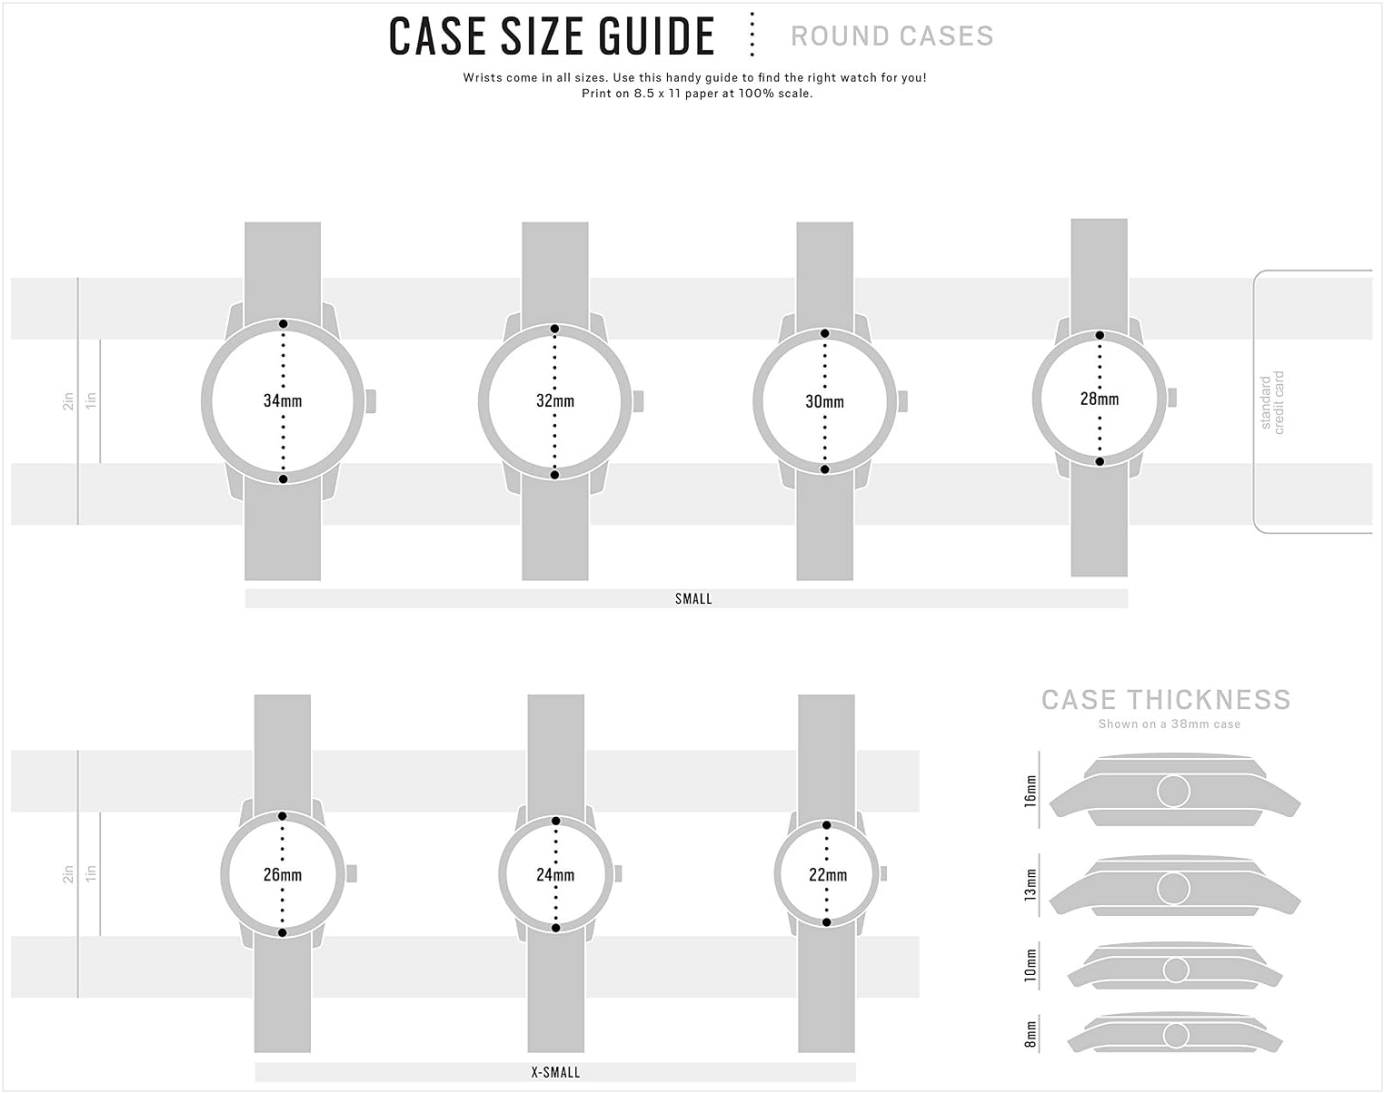


Figure 4: Rear view of the watch, showing the case back and Fossil branding.

6. Troubleshooting

- **Watch Not Running:** If the watch hands are not moving, the battery may need replacement. Refer to section 5.2 for battery replacement information.
- **Time Not Keeping Accurately:** Ensure the crown is fully pushed in after setting the time. If the issue persists after battery replacement, the movement may require inspection by a professional.

- **Difficulty Reading Dial:** The watch features a polished finish and crystal accents which can sometimes cause glare. Adjust the viewing angle to improve readability.
- **Bracelet Discomfort:** If the bracelet feels too tight or too loose, adjust the links as described in section 3.1.

7. Specifications

Feature	Detail
Model Number	ES3716
Brand	Fossil
Movement Type	Quartz
Display Type	Analog
Case Material	Stainless Steel
Case Diameter	30 Millimeters
Case Thickness	9 Millimeters
Band Material	Horn Acetate, Stainless Steel
Band Width	14 Millimeters
Band Length	185 Millimeters
Crystal Material	Mineral
Water Resistance Depth	165 Feet (5 ATM)
Power Source	Battery Powered (1 Lithium Metal battery included)
Clasp Type	Deployant Clasp with Push Button
Item Weight	0.06 Kilograms (2.12 ounces)



Figure 5: An image showcasing the Fossil watch collection, emphasizing design and style.

8. Warranty and Support

This Fossil watch is covered by a Manufacturer's Warranty. For specific details regarding warranty coverage, terms, and conditions, please refer to the warranty card included with your product or visit the official Fossil website. For technical support, service, or inquiries, please contact Fossil customer service directly.
Official Fossil Website: www.fossil.com



Video 2: Official product video showcasing the Fossil Women's Virginia Quartz Stainless Steel Dress Watch.

© 2026 Fossil. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B00M7NEN1U

More documents and user manuals: **https://manuals.plus/**