Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

SanDisk FBA_32G_TF_Ultr_San_1A_R4

SanDisk Ultra microSDHC UHS-I 32GB Memory Card and Everything But Stromboli USB Reader User Manual

1. Introduction

This manual provides comprehensive instructions for the SanDisk Ultra microSDHC UHS-I 32GB memory card and the accompanying Everything But Stromboli USB card reader. It covers installation, operation, maintenance, and technical specifications to ensure optimal performance and longevity of your products.

The SanDisk Ultra microSDHC UHS-I card is designed for use with Android-powered smartphones, tablets, and other compatible devices. It offers enhanced speed and capacity for capturing and storing high-quality photos and Full HD video. The included USB card reader facilitates easy data transfer between the memory card and a computer.

2. Product Overview

The product package includes the following components:

- **SanDisk Ultra microSDHC UHS-I 32GB Memory Card:** A high-speed memory card for data storage.
- **Everything But Stromboli USB Card Reader:** A device for connecting the microSD card to a computer via a USB port.



Figure 2.1: SanDisk Ultra microSDHC 32GB Memory Card and Everything But Stromboli USB Reader. This image displays both the red and grey SanDisk Ultra microSDHC card and the black USB card reader with the blue 'ebs' logo.

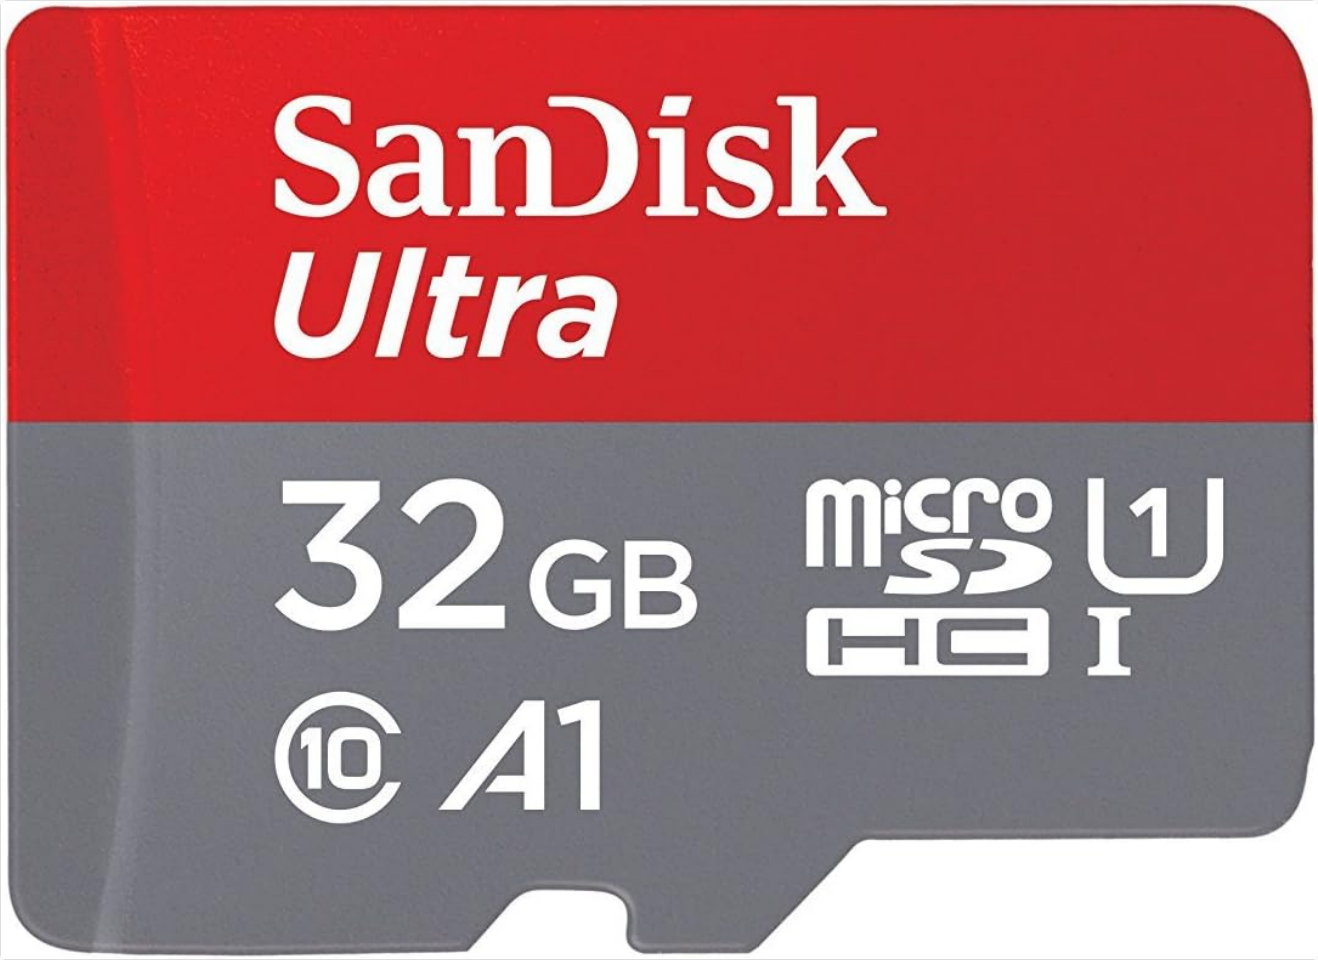


Figure 2.2: SanDisk Ultra microSDHC 32GB Memory Card. This image shows a close-up of the SanDisk Ultra microSDHC card, highlighting its 32GB capacity, Class 10 speed rating, and A1 app performance rating.



Figure 2.3: Everything But Stromboli USB Card Reader. This image displays the black USB card reader with a transparent cap, showing the USB-A connector and the 'ebs' logo.

3. Setup

3.1. Inserting the microSD Card into a Device

1. Locate the microSD card slot on your compatible device (e.g., smartphone, tablet, camera). Refer to your device's manual for the exact location.
2. Orient the SanDisk Ultra microSD card with the gold contacts facing down or as indicated by your device's slot.

3. Gently push the card into the slot until it clicks into place. Do not force the card.
4. Your device should recognize the card automatically. You may need to format the card if it's the first time using it with the device. Follow your device's on-screen prompts for formatting.

3.2. Using the Everything But Stromboli USB Card Reader

1. Insert the SanDisk Ultra microSD card into the designated slot on the Everything But Stromboli USB card reader. Ensure the card is fully seated.
2. Plug the USB card reader into an available USB port on your computer.
3. Your computer should detect the card reader as a removable storage device. It will appear as a new drive letter (e.g., E:, F:).
4. You can now access the contents of the microSD card through your computer's file explorer.

4. Operating Instructions

4.1. Data Storage and Transfer

- **Saving Files to the Card:** When the microSD card is inserted into a compatible device or the USB reader, you can save photos, videos, documents, and other files directly to it.
- **Transferring Files from Card to Computer:**
    a. Connect the microSD card to your computer using the USB card reader (as described in Section 3.2).
    b. Open the drive representing the microSD card in your computer's file explorer.
    c. Drag and drop or copy and paste the desired files from the card to a folder on your computer.
- **Transferring Files from Computer to Card:**
    a. Connect the microSD card to your computer using the USB card reader.
    b. Open the drive representing the microSD card.
    c. Drag and drop or copy and paste the desired files from your computer to the card.

The SanDisk Ultra microSDHC card supports UHS Speed Class U1 and Speed Class 10, enabling Full HD video recording (1080p) and playback. It is also rated A1 for faster app performance on compatible Android devices.

4.2. Ejecting the Card/Reader Safely

Always safely eject the microSD card or USB card reader from your device or computer to prevent data corruption. For computers, use the "Safely Remove Hardware" option in the system tray (Windows) or drag the drive icon to the Trash (macOS) before physically removing the reader.

5. Maintenance

The SanDisk Ultra microSDHC card is designed for durability. It is:

- **Waterproof:** Can withstand immersion in water for specified periods.
- **Temperature-proof:** Operates in extreme temperatures.
- **X-ray proof:** Protected from airport X-ray scanners.
- **Shockproof:** Resistant to impacts and vibrations.

To maintain optimal performance:

- Keep the card's gold contacts clean and free from dust or debris.
- Avoid bending or applying excessive force to the card.

- Store the card in a protective case when not in use.
- The USB card reader should be handled with care. Avoid dropping it or exposing it to excessive moisture.

6. Troubleshooting

6.1. Memory Card Not Recognized

- **Check Insertion:** Ensure the microSD card is fully and correctly inserted into the device or card reader.
- **Restart Device:** Try restarting your smartphone, tablet, or computer.
- **Test in Another Device/Reader:** If possible, test the card in another compatible device or use a different card reader to determine if the issue is with the card or the device/reader.
- **Check for Damage:** Inspect the card for any visible physical damage or bent contacts.
- **Format Card (Data Loss Warning):** If the card is new or has been used in multiple devices, it might need formatting. **Note: Formatting will erase all data on the card. Back up any important files before proceeding.**

6.2. Slow Data Transfer Speeds

- **USB Port:** Ensure the USB card reader is plugged into a high-speed USB port (e.g., USB 3.0 if available on your computer and reader).
- **File Size:** Transferring many small files can be slower than transferring a few large files of the same total size.
- **Computer Performance:** Other processes running on your computer can affect transfer speeds.

6.3. Card Reader Disassembly

In rare cases, the plastic casing of the USB card reader may separate. If this occurs:

- Carefully reassemble the plastic casing around the internal components.
- Ensure all parts are aligned correctly before gently pressing them back together.
- If the casing does not stay together, consider using a small amount of adhesive to secure it, ensuring no adhesive interferes with the USB connector or card slot.
- If the reader becomes unusable or damages a USB port, discontinue use and consider replacement.

7. Specifications

Feature	Detail
Brand	SanDisk
Model Name	FBA_32G_TF_Ultr_San_1A_R4
Flash Memory Type	Micro SDHC
Memory Storage Capacity	32 GB
Secure Digital Association Speed Class	Class 10, UHS Speed Class U1, A1
Read Speed	Up to 98 MB/s
Compatible Devices	Smartphones, Tablets, other microSDHC compatible devices (e.g., LG G3)

Feature	Detail
Special Features	Waterproof, Temperature-proof, X-ray proof, Shockproof
Hardware Interface	microSDHC
Item Weight (Card)	Approximately 0.32 ounces (9.07 g)
Product Dimensions (Card)	Approximately 2.5 x 1.4 x 0.6 inches
UPC	721405602858

8. Warranty and Support

For specific warranty information regarding your SanDisk Ultra microSDHC card, please refer to the official SanDisk website or the warranty documentation included with your purchase. SanDisk products typically come with a limited warranty.

For support related to the Everything But Stromboli USB card reader, please contact the vendor or refer to any documentation provided with the reader.

For technical assistance or further inquiries, please visit the SanDisk support website:

- SanDisk Support

© 2025 SanDisk / Everything But Stromboli. All rights reserved.
This manual is for informational purposes only. Specifications are subject to change without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B00MDS60S8

More documents and user manuals: **https://manuals.plus/**