Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Bosch BCH6ZOOO

Bosch Athlete Zoo'o BCH6ZOOO Cordless Vacuum Cleaner User Manual

Model: BCH6ZOOO

Introduction

This manual provides essential instructions for the safe and efficient operation, maintenance, and troubleshooting of your Bosch Athlete Zoo'o BCH6ZOOO Cordless Vacuum Cleaner. Designed for high cleaning performance on all floor types, this bagless vacuum is particularly effective for pet hair removal with its ProAnimal nozzle. Please read this manual thoroughly before first use and keep it for future reference.

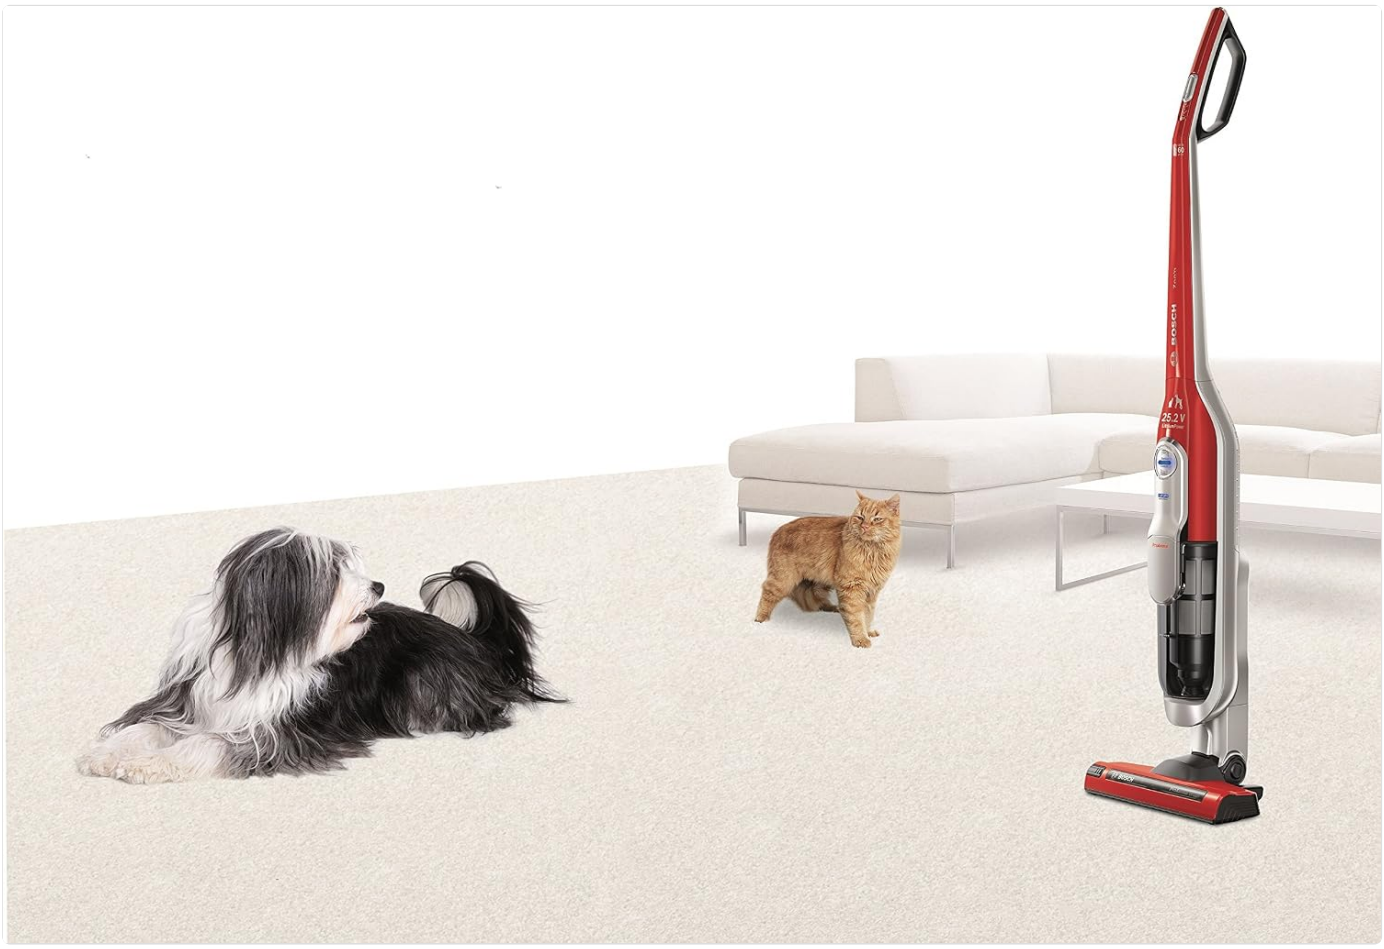


Figure 0: Bosch Athlete Zoo'o BCH6ZOOO for Pet Owners. This image shows the Bosch Athlete Zoo'o BCH6ZOOO cordless vacuum cleaner positioned on a carpet, with a dog and a cat nearby, emphasizing its suitability for households with pets and its ProAnimal features.

Important Safety Instructions

- Read all instructions before using the appliance.
- Do not expose the appliance to temperatures below 0°C (32°F) or above 40°C (104°F).
- This appliance is for household use only. Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without dust bin and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.

Package Contents

Please check that all items are present in your package:

- Bosch Athlete Zoo'o BCH6ZOOO Cordless Vacuum Cleaner
- ProAnimal Nozzle with extra brush roll
- Crevice Nozzle
- Upholstery Nozzle
- Flexible Hose
- Shoulder Strap
- Charging Adapter
- User Manual (this document)



Figure 1: Included Accessories. This image displays the various attachments that come with the Bosch Athlete Zoo'o BCH6ZOOO, including the flexible hose, crevice tool, upholstery nozzle, and shoulder strap, designed for versatile cleaning.

Setup

1. Assembly

1. **Unpack:** Carefully remove all components from the packaging.
2. **Attach Main Body:** Connect the main vacuum body to the floor nozzle. Ensure it clicks securely into place.
3. **Install Dust Bin:** Ensure the dust bin is correctly installed and locked into position.

2. Initial Charging

Before first use, fully charge the vacuum cleaner. The Bosch Lithium-Ion Technology provides durable and powerful batteries.

- Connect the charging adapter to the vacuum cleaner and plug it into a power outlet.
- The charging indicator light will illuminate. A full charge typically takes approximately 5 hours.
- Once fully charged, the indicator light will change (e.g., stop blinking or turn solid). Disconnect the charger.



Figure 2: Assembled Vacuum Cleaner. This image shows the Bosch Athlete Zoo'o BCH6ZOOO cordless vacuum cleaner fully assembled and ready for use, highlighting its sleek red design.

Operating Instructions

1. Power On/Off and Suction Levels

The vacuum cleaner features a sliding switch for power control and suction level selection.

- **Position 0:** Off.
- **Position 1:** Low suction power. The brush roll is not active. Suitable for light dust and debris on hard floors.
- **Position 2:** Increased suction power with active brush roll. Ideal for carpets and effective pet hair removal.
- **Position 3 (Turbo):** Maximum suction power with active brush roll. Use for heavily soiled areas or stubborn dirt. Note that battery life will be shorter in this mode.



Figure 3: Power and Suction Level Selector. This image shows the sliding switch on the vacuum cleaner, indicating the different power settings from 0 (off) to 3 (Turbo), allowing users to adjust suction as needed.

2. Using Attachments

For versatile cleaning, detach the main floor nozzle and connect the desired accessory.

- **Crevice Nozzle:** For narrow gaps, corners, and edges.
- **Upholstery Nozzle:** For cleaning furniture, cushions, and curtains.
- **Flexible Hose & Shoulder Strap:** For cleaning hard-to-reach areas, car interiors, or when using the vacuum as a handheld unit. Attach the hose to the main unit and connect the desired nozzle to the hose. Use the shoulder strap for comfortable carrying.



Figure 4: Handheld Operation with Accessories. This image demonstrates the vacuum cleaner being used in handheld mode with the flexible hose and shoulder strap attached, illustrating its adaptability for cleaning various surfaces and tight spaces.

3. SensorBagless Technology

The unique SensorBagless technology ensures powerful performance with minimal maintenance. A sensor monitors the airflow and indicates when the filter needs cleaning to maintain optimal suction.



Figure 5: Sensor Control Indicator. This close-up shows the "Sensor Control" light, which is part of the SensorBagless™ Technology, indicating optimal performance or signaling when maintenance is required.

Maintenance

1. Emptying the Dust Bin

It is recommended to empty the dust bin after each use to maintain optimal suction power.

1. Switch off the vacuum cleaner.
2. Press the release button to detach the dust bin from the main unit.
3. Hold the dust bin over a waste bin and open the bottom flap to empty the contents.
4. Close the flap and reattach the dust bin to the vacuum cleaner until it clicks into place.

2. Cleaning the Filter

The internal filter should be cleaned regularly, approximately once a month, or when the Sensor Control light indicates reduced airflow.

1. Remove the dust bin as described above.
2. Carefully pull out the filter unit.
3. Open the filter unit and tap out any loose dust. For a more thorough clean, rinse the filter under running water. Ensure it is completely dry before reinserting.
4. Reassemble the filter unit and place it back into the dust bin.

3. Cleaning the Brush Roll

The ProAnimal brush roll can accumulate hair and fibers. Regular cleaning ensures effective performance.

1. Switch off the vacuum cleaner.
2. Pull the brush roll out from the side of the floor nozzle.
3. Use scissors to cut through any tangled hair or threads along the designated groove.
4. Remove the cut hair and debris.
5. Reinsert the brush roll until it clicks into place.

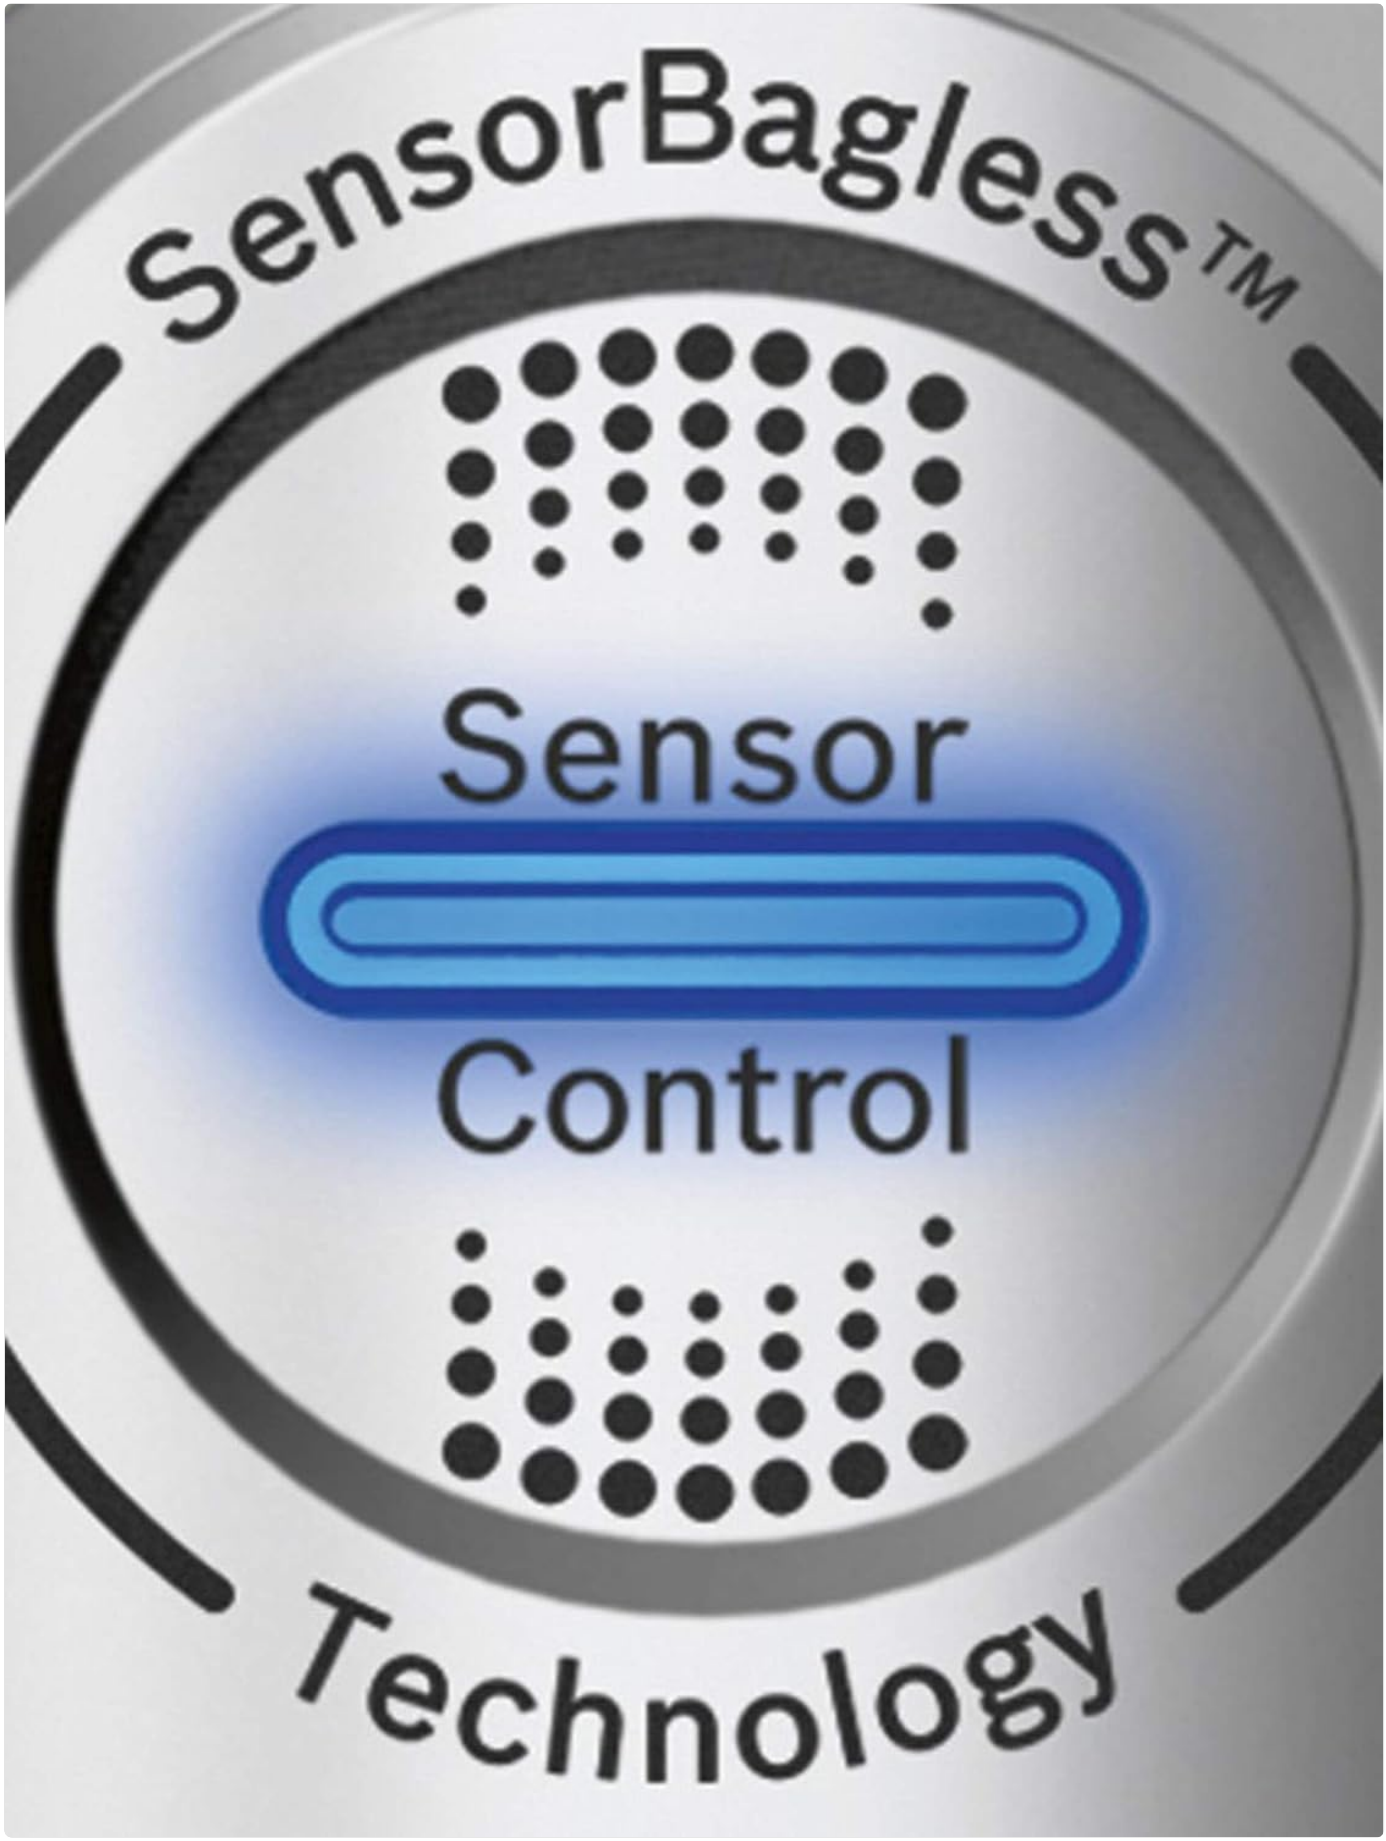


Figure 6: Brush Roll Cleaning. This image illustrates the process of removing and cleaning the brush roll from the vacuum cleaner's floor nozzle, showing how accumulated hair can be easily removed.

Troubleshooting

Problem	Possible Cause	Solution
Vacuum cleaner does not turn on.	Battery is discharged.	Charge the battery fully.
Reduced suction power.	Dust bin is full; Filter is clogged; Brush roll is tangled.	Empty the dust bin. Clean or wash the filter. Clean the brush roll.
Unusual noise during operation.	Obstruction in the nozzle or hose; Brush roll is blocked; Loose component.	Check for and remove any obstructions. Clean the brush roll. Ensure all parts are securely assembled. If noise persists, contact customer support.
Short battery runtime.	Vacuum used on high power settings (e.g., Turbo mode); Battery degradation over time.	Use lower power settings when possible. Ensure battery is fully charged before use. If battery life significantly decreases, contact service.
Vacuum turns off unexpectedly.	Battery is depleted; Overheating due to blockage.	Recharge the battery. Check for and clear any blockages in the nozzle, hose, or dust bin. Allow the unit to cool down.

Specifications

Feature	Detail
Brand	Bosch
Model Number	BCH6ZOOO
Color	Tornado Red
Product Dimensions	24 x 24 x 73 cm
Item Weight	3.3 kg (7.28 Pounds)
Voltage	25.2 Volts
Wattage	400W
Run Time	Up to 60 minutes
Noise Level	79 Decibels
Filter Type	Cloth (Hygiene Filter)

Feature	Detail
Special Features	Bagless, Electric Nozzle, Car Seat Nozzle, Upholstery Nozzle, Crevice Nozzle, Handle Control, Cordless, Hygiene Filter
Recommended Surface	Upholstery, Carpet, All Floor Types

Warranty and Support

Your Bosch Athlete Zoo'o BCH6ZOOO Cordless Vacuum Cleaner comes with a manufacturer's warranty. Please refer to the warranty card included in your original packaging for specific terms and conditions, including warranty duration and coverage.

For technical support, service, or to order replacement parts, please contact Bosch Customer Service. Contact information can typically be found on the Bosch official website or on your warranty documentation.

When contacting support, please have your model number (BCH6ZOOO) and purchase date ready.



Figure 7: Bosch Brand Logo. The official Bosch logo, representing the manufacturer of the vacuum cleaner.

© 2023 Bosch. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B00MN0XUJI

More documents and user manuals: **https://manuals.plus/**