Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

GoPro Hero4 Silver (CHDHY-401)

GoPro Hero4 Silver (CHDHY-401) Instruction Manual

Your guide to setting up, operating, and maintaining your GoPro Hero4 Silver camera.

Introduction

The GoPro Hero4 Silver is a high-performance action camera designed to capture your world with exceptional clarity. Featuring a built-in touch display, it offers convenient control, shot framing, and content playback. This manual provides essential information to help you get started and make the most of your camera's capabilities.

What's in the Box

- HERO4 Silver Camera With Built-In Touch Display
- Standard Housing 131'(40m)
- Skeleton + Touch Backdoors
- Rechargeable Battery
- Curved Adhesive Mount
- Flat Adhesive Mount
- Quick Release Buckles
- 3-Way Pivot Arm
- USB Cable

Key Features

- Built-in touch display for easy camera control, shot framing, and playback.
- Professional 1080p60 and 720p120 video with 12MP photos at up to 30 frames per second.
- Built-in Wi-Fi and Bluetooth support the GoPro app, Smart Remote, and more.
- Improved camera control and built-in video trimming lets you create and save short video clips right on your camera.
- ProTune with SuperView: Delivers cinema-quality capture and advanced manual control for photos and video with the world's most immersive wide-angle field of view.

Setup

1. Unboxing and Initial Inspection

Carefully remove all components from the packaging. Inspect the camera and accessories for any visible damage.




GoPro
HERO4
SILVER
WATERPROOF
131' (40m)
BUILT-IN TOUCH DISPLAY



Figure 1: GoPro Hero4 Silver in its retail packaging, showing the front view.

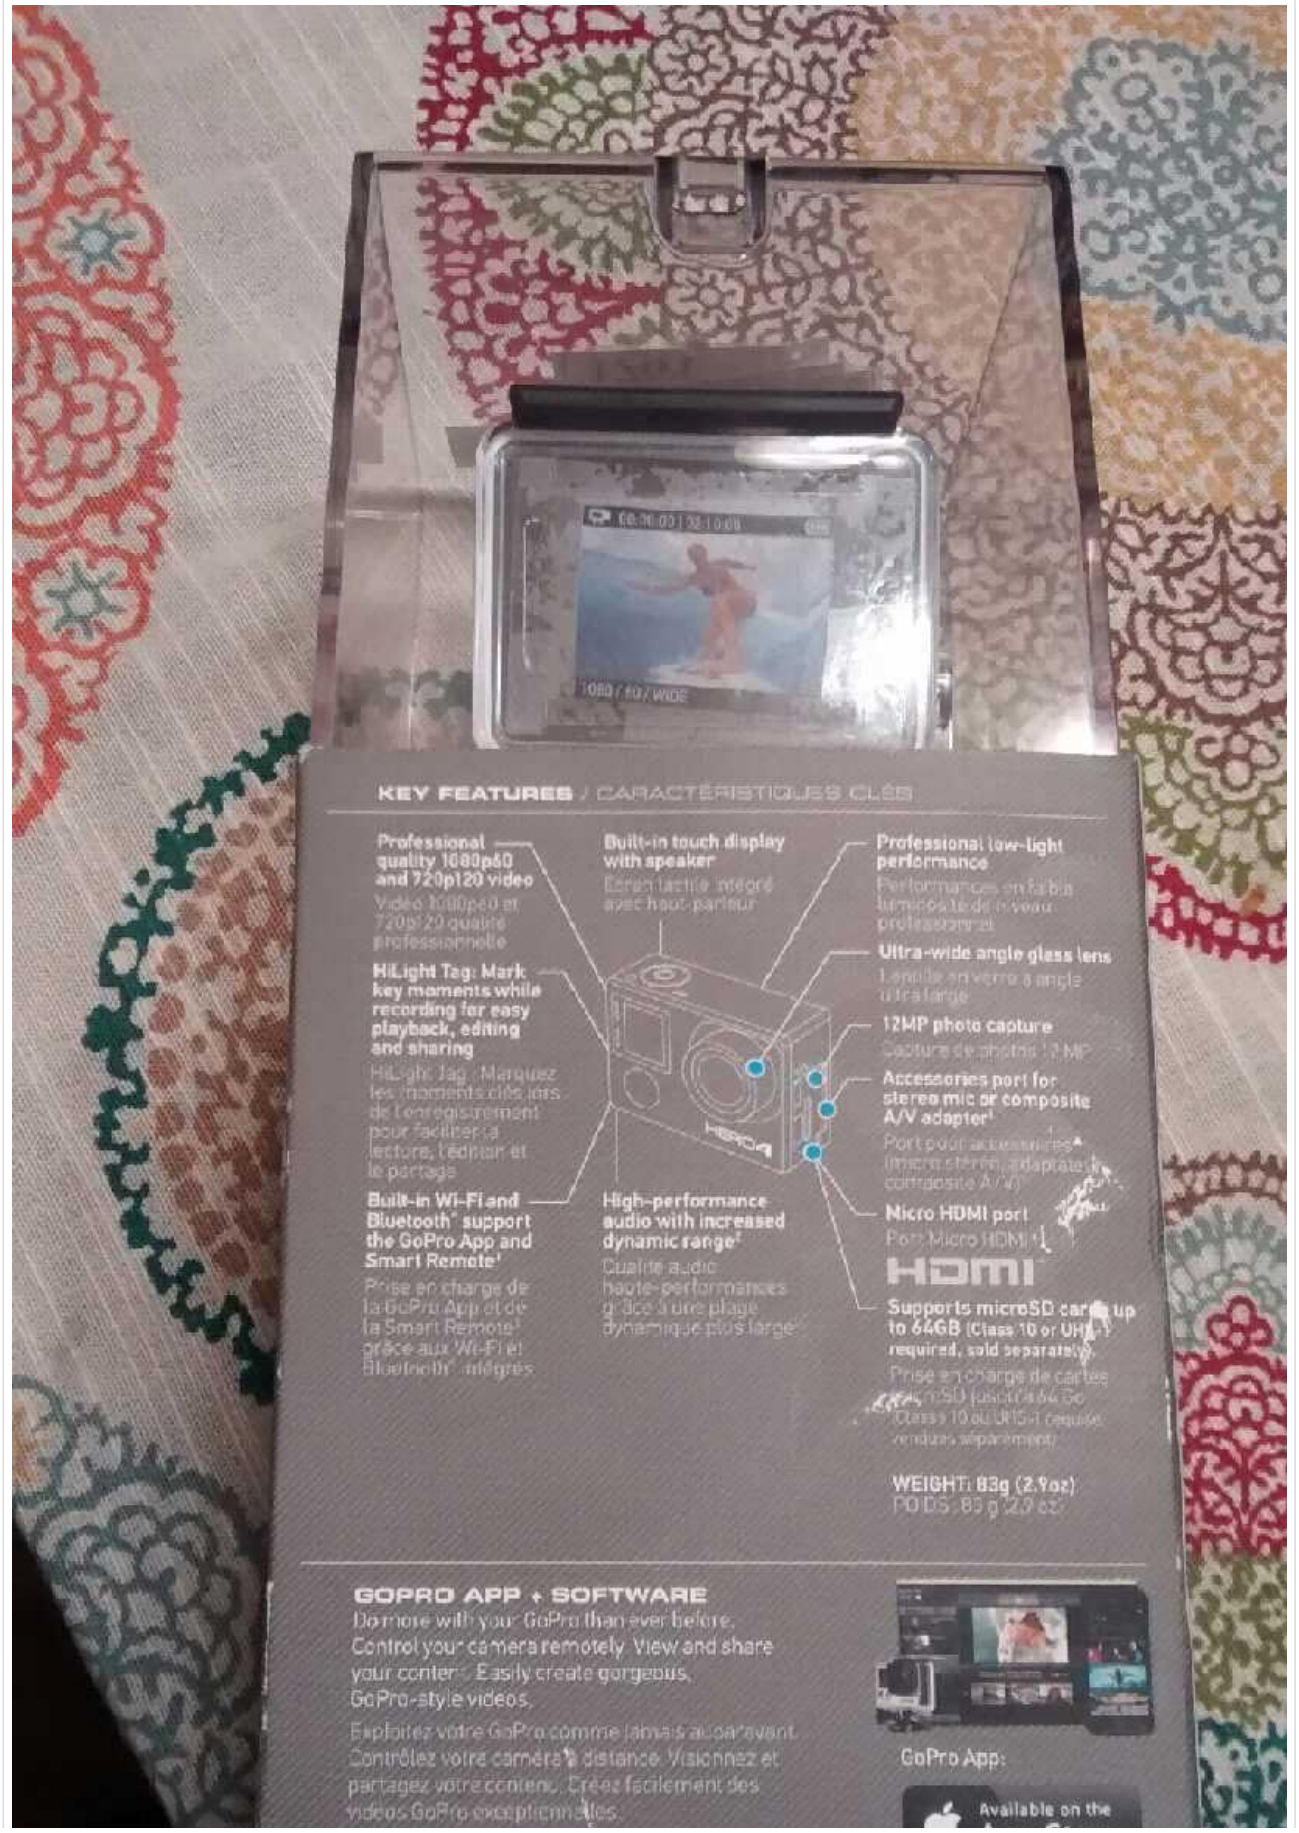




Figure 2: Back of the GoPro Hero4 Silver packaging, detailing key features and specifications.

2. Charging the Battery

Before first use, fully charge the included rechargeable battery using the USB cable. Connect the USB cable to the camera and a USB power source (e.g., computer, wall adapter).

3. Inserting the Battery and microSD Card

Open the battery compartment on the bottom of the camera. Insert the charged battery and a compatible microSD card (sold separately) into their respective slots. Ensure the microSD card is properly seated.

4. Attaching the Housing

The Hero4 Silver comes with a standard waterproof housing. Place the camera inside the housing and ensure it is securely latched. For touch display access, use the included Touch Backdoor.



Figure 3: GoPro Hero4 Silver securely placed within its waterproof housing, displaying the touch screen interface.

Operating the Camera

1. Powering On/Off

Press the Mode button (front of the camera) to power on the camera. Press and hold the Mode button to power off.

2. Navigating the Touch Display

The built-in touch display allows for intuitive navigation. Swipe left/right to switch between video, photo, and other modes. Tap on screen options to adjust settings.

3. Recording Video and Taking Photos

In your desired mode (Video or Photo), press the Shutter/Select button (top of the camera) to start/stop recording or take a photo.

4. Using Voice Control

The Hero4 Silver supports voice commands for hands-free operation. Common commands include "GoPro, take a photo" or "GoPro, start recording." Ensure voice control is enabled in the camera settings.

5. Connecting to the GoPro App

Download the GoPro App on your smartphone or tablet. Enable Wi-Fi on your Hero4 Silver and connect to the camera's Wi-Fi network. The app allows for remote control, live preview, and content management.

Video 1: GoPro HERO4 Silver unboxing and initial setup. This video demonstrates the physical components and basic handling of the camera.

Video 2: GoPro HERO4 - The adventure of life in 4K. This video showcases the camera's capabilities in various action scenarios, highlighting its video quality.

Maintenance

1. Cleaning the Camera and Housing

After use, especially in saltwater or dusty environments, rinse the camera (in its housing) with fresh water and dry thoroughly. Clean the lens with a soft, lint-free cloth. Avoid abrasive materials.

2. Battery Care

Store batteries in a cool, dry place. Avoid fully discharging batteries for extended periods. For optimal performance, charge batteries regularly.

3. Firmware Updates

Periodically check the GoPro website for firmware updates. Updates can improve performance, add new features, and fix bugs. Follow the instructions provided on the GoPro website for updating your camera's firmware.

Troubleshooting

1. Static with Wireless Connectivity

If experiencing static when using a Polar Pro Mic with wireless connectivity, try turning off the camera's wireless features (Wi-Fi/Bluetooth) if not actively needed.

2. General Issues

For other issues, try restarting the camera or performing a factory reset (refer to the GoPro website for specific instructions). Ensure your camera's firmware is up to date.

Specifications

Feature	Specification
Product Dimensions	2.8 x 2.79 x 1.53 inches
Item Weight	5.1 ounces
Item Model Number	CHDHY-401
Batteries	1 A batteries required (included)
Photo Sensor Technology	CMOS

Video Capture Resolution	2.7K
Maximum Aperture	2 f
Flash Memory Type	Micro SD
Video Capture Format	MP4
Supported Audio Format	MP3
Connectivity Technology	Bluetooth, Wi-Fi
Color	Silver
Special Feature	Waterproof

Warranty and Support

Legal Disclaimer: Seller does not provide warranty; manufacturer may. For warranty claims or technical support, please refer to the official GoPro support channels or website. You can find additional resources, FAQs, and contact information on the GoPro Support Page.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B00NIYJF6U

More documents and user manuals: **https://manuals.plus/**