Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

respekta KB150EYGMI

respekta KB150EYGMI Kitchenette Single Kitchen User Manual

Model: KB150EYGMI | Brand: respekta

Introduction

This manual provides detailed instructions for the assembly, operation, and maintenance of your respekta KB150EYGMI Kitchenette Single Kitchen. Please read all instructions carefully before installation and use to ensure safe and efficient operation. Keep this manual for future reference.
The respekta KB150EYGMI is a compact 150 cm kitchen unit designed for efficiency and functionality, featuring integrated appliances and storage solutions.

Safety Information

Always follow basic safety precautions when using electrical appliances and assembling furniture. Ensure the unit is installed on a stable, level surface. Disconnect power before performing any maintenance or cleaning on electrical components. Keep children away from the assembly area and operating appliances.

- Read all instructions before use.
- Ensure proper ventilation for integrated appliances.
- Do not overload electrical outlets.
- Keep flammable materials away from the hob.
- Seek professional assistance if you are unsure about any installation steps.

Setup and Assembly

Your respekta kitchenette is delivered disassembled and requires assembly. All necessary mounting materials are included. The kitchen block can be mounted on either side to suit your space requirements.

Package Contents:

- Built-in sink (860 x 435 stainless steel with drain and overflow unit)
- Countertop (150 cm, 28 mm thickness, without cutouts)
- 3 Overhead cabinets (50 cm each)
- Base cabinet

- Kitchen wall cabinet
- Refrigerator
- Hob
- Microwave (integrated)
- Assembly hardware

Assembly Steps:

1. Unpack all components and verify against the packing list.
2. Identify all panels and hardware. Refer to the detailed assembly instructions provided in the product packaging.
3. Assemble the base cabinets first, ensuring all connections are secure.
4. Install the countertop onto the base cabinets.
5. Integrate the sink and hob into the countertop, following their specific installation guides.
6. Mount the overhead cabinets securely to the wall at the desired height.
7. Install the refrigerator and microwave into their designated compartments.
8. Connect all plumbing and electrical components according to local regulations and manufacturer guidelines. It is recommended to have a qualified professional perform electrical and plumbing connections.

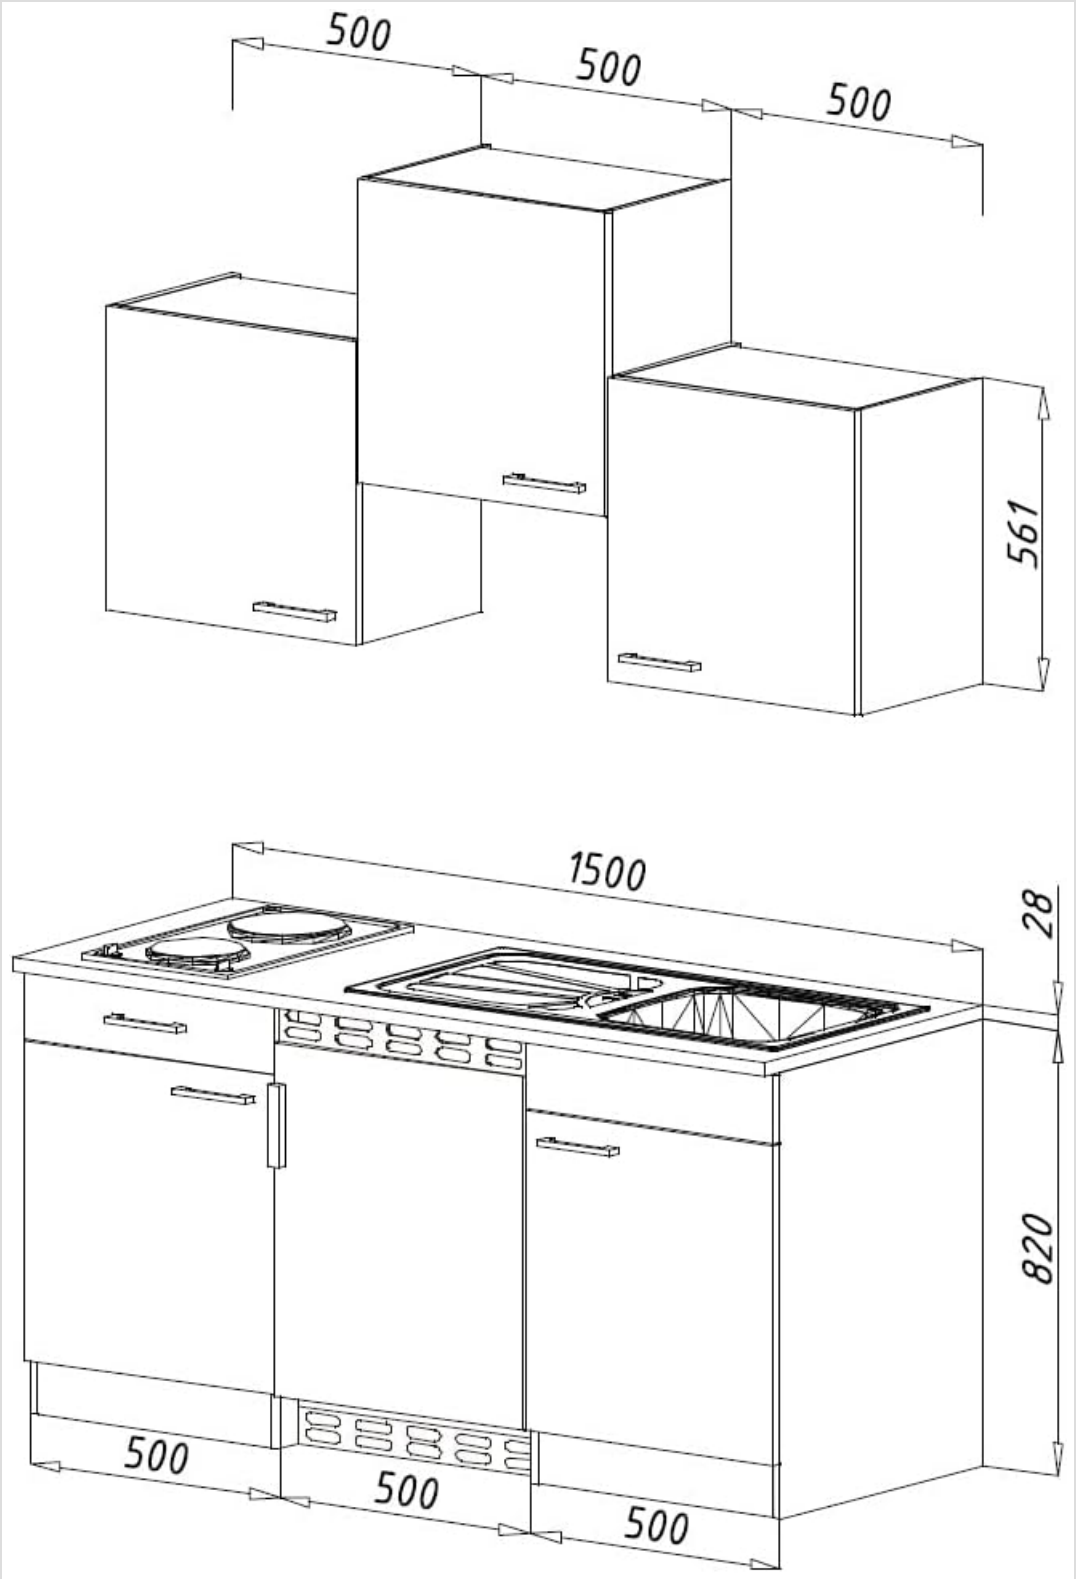


Figure 1: Assembly diagram illustrating the dimensions and layout of the respekta kitchenette components, including upper cabinets, lower cabinets, hob, and sink area. Dimensions are shown in millimeters.



Figure 2: An overview of the fully assembled respekta kitchenette, showcasing its compact design with integrated appliances and overhead storage in a contemporary kitchen environment.

Operating Instructions

This section provides general guidance for operating the integrated components of your kitchenette. For detailed instructions on specific appliances, please refer to their individual manuals.

Refrigerator:

- Plug the refrigerator into a grounded electrical outlet.
- Allow the refrigerator to stand upright for at least 4 hours before plugging it in to allow the refrigerant to settle.
- Adjust the thermostat control inside the refrigerator to your desired cooling level.
- Do not block the air vents inside the refrigerator.



Figure 3: The interior of the integrated refrigerator, showing its shelving, crisper drawer, and door storage compartments, designed for efficient food storage.

Hob:

- Ensure appropriate cookware is used for the electric hob plates.
- Turn the control knobs to the desired heat setting (typically 1-6).
- The indicator light will illuminate when a hob plate is active.
- Allow hob plates to cool completely after use before cleaning.





Figure 4: A close-up of the respekta electric hob, featuring two cooking plates and corresponding control knobs for adjusting heat levels.

Sink:

- The stainless steel sink is equipped with a drain and overflow unit.

- Ensure the drain plug is properly seated to hold water.
- Avoid pouring harsh chemicals or abrasive materials down the drain.



Figure 5: The stainless steel sink component, featuring a single basin and an adjacent ribbed draining board, designed for durability and ease of use.

Microwave:

- Place food in microwave-safe containers.
- Set cooking time and power level using the control knobs.
- Do not operate the microwave when empty.
- Ensure the door is closed securely before starting.



Figure 6: The integrated microwave oven, shown from the front, with its door and two rotary control knobs for setting time and power levels.

Maintenance and Care

Regular cleaning and maintenance will extend the life of your kitchenette and ensure optimal performance.

- **General Cleaning:** Wipe down all surfaces with a soft, damp cloth and mild detergent. Avoid abrasive cleaners or scouring pads, especially on stainless steel and lacquered surfaces.
- **Stainless Steel Sink:** Clean with a non-abrasive stainless steel cleaner. Rinse thoroughly and dry to prevent water spots.
- **Hob:** Clean hob plates after they have cooled. Use a damp cloth to wipe away spills. For stubborn stains, use a ceramic hob cleaner.
- **Refrigerator:** Defrost the freezer compartment regularly if it's not frost-free. Clean the interior with a mild soap solution and wipe dry. Clean the condenser coils at the back or bottom of the refrigerator periodically to maintain efficiency.
- **Microwave:** Wipe the interior and exterior with a damp cloth. For food splatters, use a microwave-safe cleaner.
- **Cabinets and Countertop:** Wipe with a damp cloth. Avoid excessive moisture on wood surfaces.
- **Inspections:** Periodically check all plumbing and electrical connections for leaks or damage. Tighten any loose screws on cabinet hinges or handles.

Troubleshooting

This section addresses common issues you might encounter. For problems with specific appliances, consult their individual manuals or contact customer support.

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Appliance (refrigerator, hob, microwave) not working.	No power supply; appliance unplugged; circuit breaker tripped.	Check if the appliance is properly plugged in. Verify the power outlet is functional. Check your household circuit breaker and reset if necessary.
Water leak from sink.	Loose plumbing connection; damaged seal.	Check and tighten all plumbing connections under the sink. Inspect seals for damage and replace if needed. If the leak persists, contact a plumber.
Refrigerator not cooling effectively.	Thermostat set too high; door not sealed properly; condenser coils dirty; overloaded with food.	Adjust thermostat to a lower setting. Ensure the door closes completely. Clean condenser coils. Avoid overfilling the refrigerator.
Hob not heating.	Incorrect setting; power issue.	Ensure the control knob is set to a heat level. Check power supply to the hob.

Specifications

Detailed technical specifications for the respekta KB150EYGMI Kitchenette Single Kitchen.

Feature	Detail
Brand	respekta
Model	KB150EYGMI
Model Name	Oliver
Color	Grey
Material	Wood (Engineered wood, Oak wood frame, Oak back material)
Product Dimensions (D x W x H)	60D x 150W x 200H centimeters
Item Weight	134.1 Kilograms
Special Features	Integrated microwave oven
Mounting Type	Floor mounting
Installation Type	Under countertop
Assembly Required	Yes
Included Components	Refrigerator, hob, sink, countertop, base cabinet, kitchen wall cabinet
Number of Drawers	1
Number of Shelves	5
Number of Doors	6
Number of Compartments	3

Feature	Detail
Handle Material	Stainless steel
Finish Type	Lacquered

Energy Efficiency:

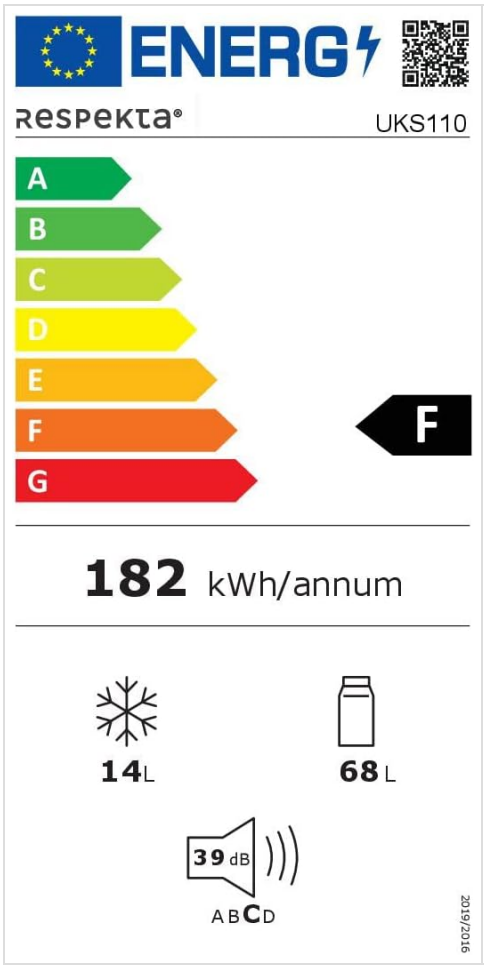


Figure 7: EU Energy Label for the Respekta UKS110 refrigerator component, indicating an energy efficiency class F, annual energy consumption of 182 kWh, 14 liters freezer capacity, 68 liters refrigerator capacity, and a noise level of 39 dB. More details can be found at eprel.ec.europa.eu/qr/734681.



Figure 8: "Made in Germany" logo, indicating the country of origin for the product.

Warranty Information

Specific warranty terms and conditions for your respekta kitchenette may vary. Please refer to the warranty card included with your product, your purchase receipt, or the official respekta website for detailed information regarding warranty coverage and duration.

Customer Support

If you encounter any issues not covered in this manual or require further assistance, please contact your retailer or the respekta customer service department. Have your model number (KB150EYGMI) and purchase date ready when contacting support.
For the most up-to-date contact information, please visit the official respekta website.

© 2023 respekta. All rights reserved. Information in this manual is subject to change without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B00NNITULG

More documents and user manuals: **https://manuals.plus/**