Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

AMERICAN PHOENIX Pavilion

AMERICAN PHOENIX 16x26 ft Heavy Duty Party Tent Instruction Manual

Model: Pavilion

1. Safety Information

Important Safety Warning: Do not leave the canopy up overnight or under bad weather conditions. Weather damage is not covered by the manufacturer. Always ensure the tent is properly anchored to prevent movement or collapse due to wind or other environmental factors. Regularly inspect all components for wear and tear, especially before and after each use.

2. Product Overview

The AMERICAN PHOENIX 16x26 ft Party Tent is designed for various outdoor events, offering a spacious and protected area. This heavy-duty canopy shelter features a robust galvanized steel frame and durable PE/PVC fabric for the roof and sidewalls.

Key Features:

- **Dimensions:** 16x26 Feet (5x8 meters) Party Tent Pavilion.
- **Frame:** Galvanized Steel tubes, rust and corrosion resistant. Features thicker pipes, heavy-duty framework, durable metal connectors, and metal bases with triangle roof support.
- **Cover Material:** PE/PVC Fabric, waterproof and UV-resistant for effective shading.
- **Sidewalls:** Includes 8 removable sidewalls and 2 door/end walls with plastic windows for light inflow and zippered curtains for easy access.
- **Anchoring:** Heavy-duty Velcro and bungee cord straps, corner ropes, and pegs are included for secure installation.



Image: The AMERICAN PHOENIX 16x26 ft Party Tent, fully assembled with white and blue accents, showcasing its size and design.

3. Setup Instructions

Assembly of the AMERICAN PHOENIX Party Tent requires careful attention to detail and typically involves multiple people due to its size. Ensure all parts are present before beginning assembly. It is recommended to lay out all components and identify them according to the parts list (not provided in this document, refer to your packaging).

3.1. Prepare the Site

- Choose a flat, level area free from overhead obstructions and sharp objects on the ground.
- Ensure adequate space for the tent's dimensions (16x26 ft) plus additional clearance for anchoring.
- Clear the area of any debris or potential hazards.

3.2. Assemble the Frame

Begin by connecting the galvanized steel tubes to form the base and roof structure. Pay close attention to the different lengths and types of poles and connectors. It is advisable to have at least 2-3 people for this stage to manage the larger sections.

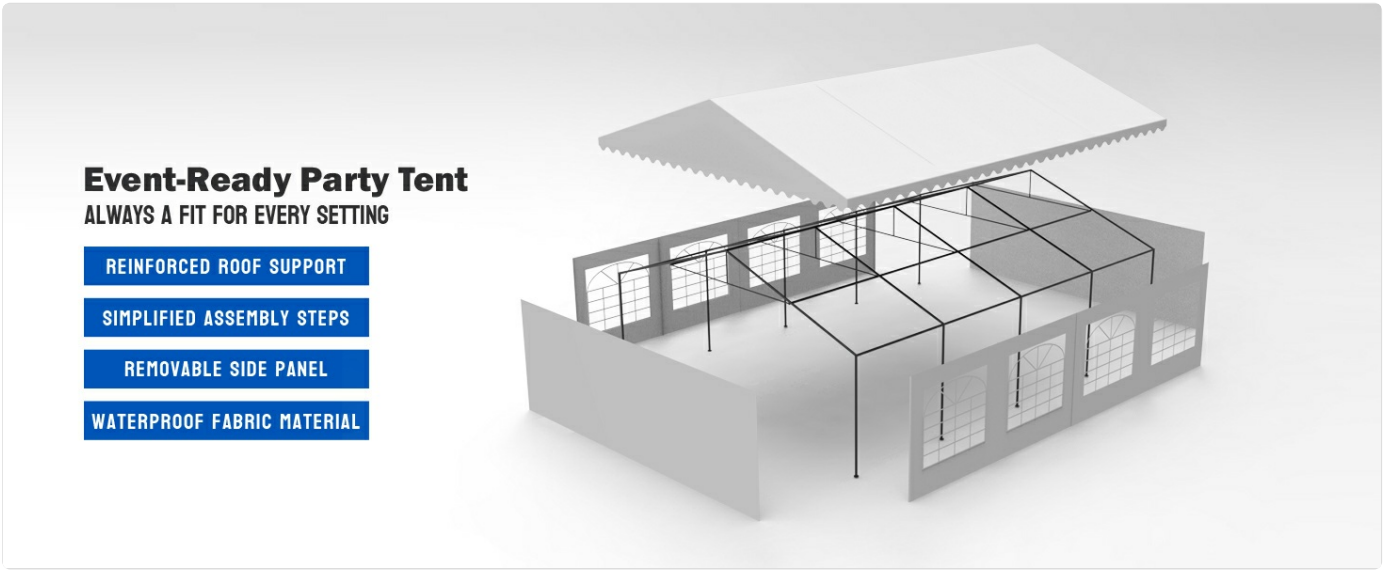


Image: An exploded diagram showing the individual components of the tent frame, roof cover, and sidewalls, illustrating how they fit together.

1. Connect the base poles using the appropriate connectors to form the rectangular footprint of the tent.
2. Attach the vertical support poles to the base frame.
3. Construct the roof truss sections on the ground, then carefully lift and attach them to the vertical support poles.
4. Secure all connections with the provided hardware (e.g., wing nuts, bolts). Ensure all joints are tight but do not overtighten to avoid bending the thin gauge steel.

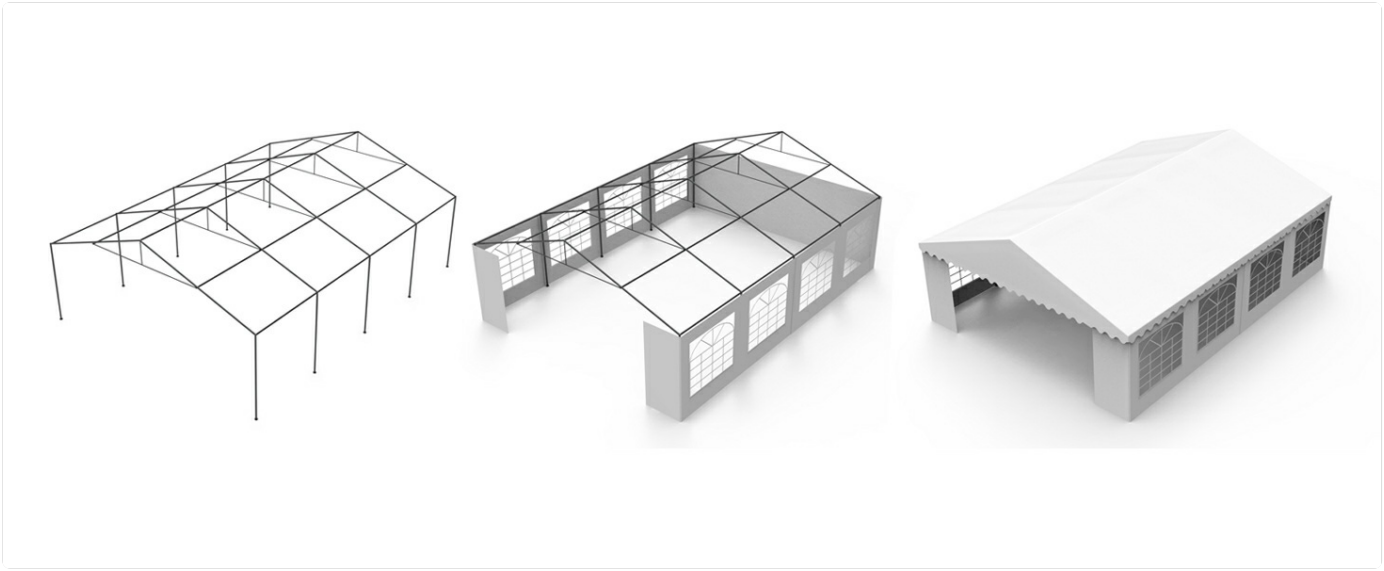


Image: A visual representation of the tent assembly process, showing the bare frame, the frame with the roof cover, and the fully assembled tent with sidewalls.

3.3. Install the Roof Cover

- Carefully drape the main roof cover over the assembled frame.
- Align the roof cover with the frame, ensuring it is centered and taut.
- Secure the roof cover to the frame using the integrated bungee cord straps and Velcro fasteners.

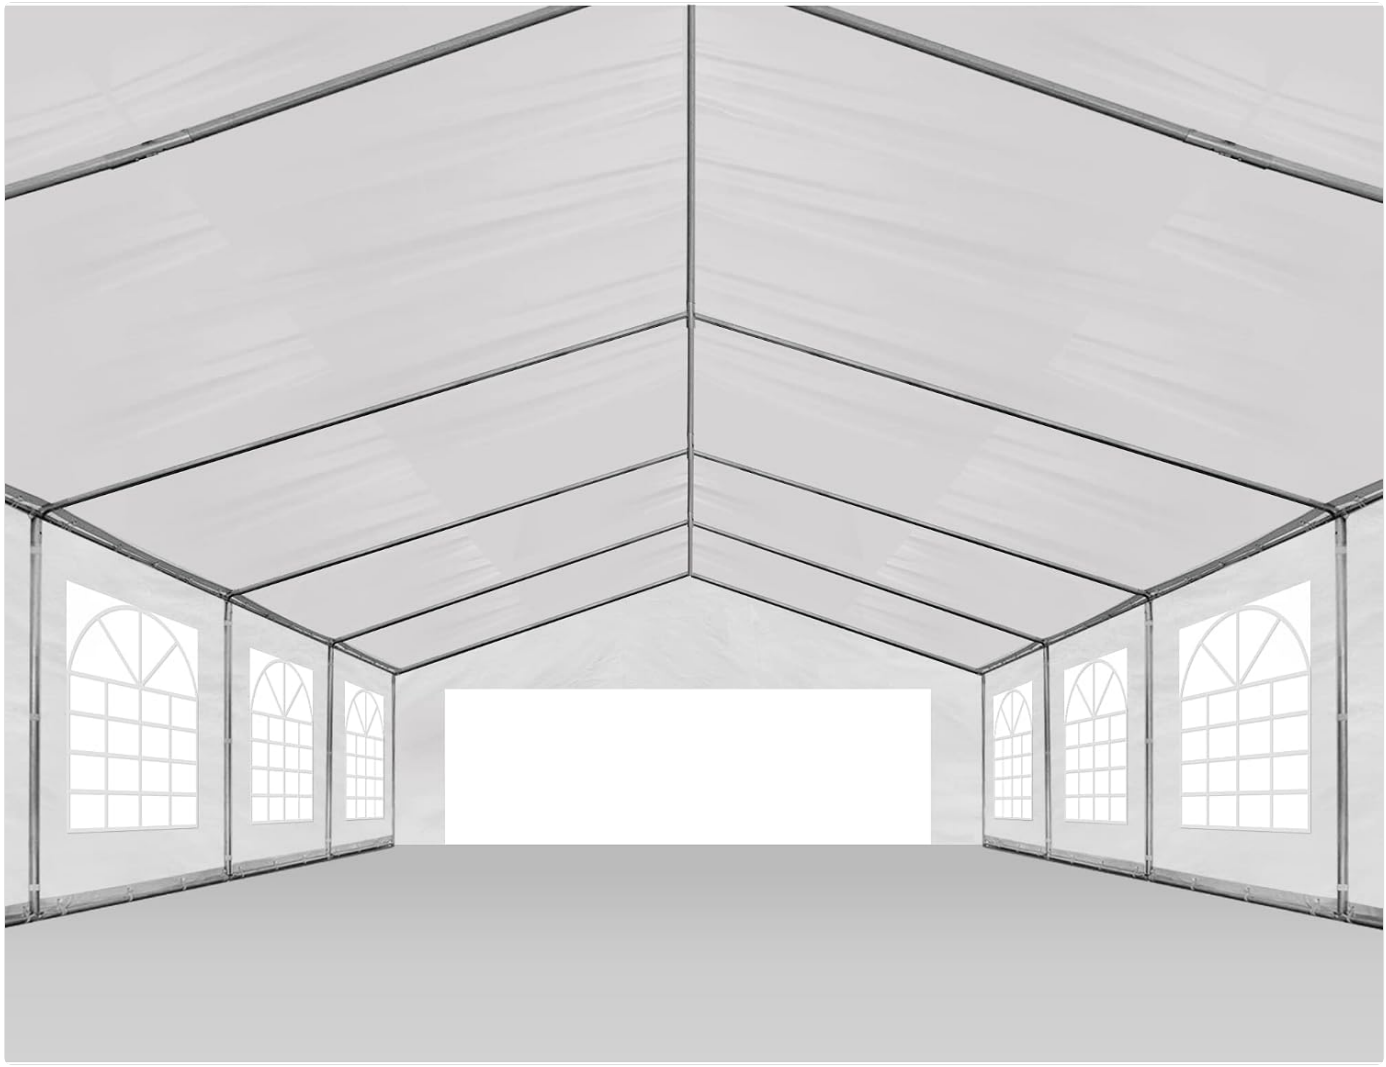


Image: An interior view of the party tent, showing the metal frame structure and the white roof cover installed, with light filtering through.

3.4. Attach Sidewalls and End Walls

- Attach the sidewalls and end walls to the frame using the Velcro and bungee cord straps.
- Ensure the zippered curtains on the end walls are properly aligned for entry and exit.
- The plastic windows should face outwards.



Image: An exterior view of the assembled party tent with all sidewalls and end walls attached, featuring arched windows and blue trim.

3.5. Secure the Tent

- Use the provided corner ropes and pegs to anchor the tent securely to the ground.
- For additional stability, especially in areas prone to wind, consider using heavy-duty stakes or weights on each leg.
- Regularly check the tension of the ropes and the security of the anchors.

4. Operating Instructions

The AMERICAN PHOENIX Party Tent is designed for temporary outdoor use.

- **Ventilation:** Utilize the zippered curtains on the end walls to control airflow and temperature inside the tent.
- **Weather Conditions:** This tent provides protection from sun and light rain. It is not designed for use in strong

winds, heavy rain, snow, or other severe weather conditions. Refer to the safety information regarding weather damage.

- **Entry/Exit:** Use the zippered door panels for convenient entry and exit. Ensure zippers are operated smoothly to prevent damage.

5. Maintenance

- **Cleaning:** Clean the PE/PVC fabric with mild soap and water. Avoid harsh chemicals or abrasive cleaners that could damage the material. Rinse thoroughly and allow to air dry completely before storage.
- **Frame Care:** Inspect the galvanized steel frame for any signs of rust or damage. Clean any dirt or debris from the poles and connectors.
- **Storage:** When not in use, disassemble the tent and store all components in a dry, cool place, away from direct sunlight and extreme temperatures. Ensure the fabric is completely dry to prevent mold and mildew.
- **Inspection:** Before each use, inspect all poles, connectors, fabric, ropes, and pegs for damage, wear, or missing parts. Replace any damaged components immediately.

6. Troubleshooting

- **Tent Instability:** Ensure all frame connections are secure and tightened. Verify that the tent is properly anchored with all ropes and pegs. Consider additional weights or heavy-duty stakes in windy conditions.
- **Water Leakage:** Check that the roof cover is correctly installed and taut, preventing water pooling. Inspect the fabric for any tears or punctures.
- **Missing Parts:** If you discover missing components during assembly, contact customer support immediately.
- **Difficulty with Assembly:** Refer to the assembly diagrams and ensure all poles and connectors are correctly identified and matched. Assembly often requires multiple individuals.

7. Specifications

Feature	Detail
Brand	AMERICAN PHOENIX
Model Number	Pavilion
Dimensions (L x W x H)	236"L x 236"W x 120"H (16x26 ft, 5x8 meters)
Floor Area	388 Square Feet
Max Ceiling Height	120 Inches (10 ft)
Item Weight	215 Pounds

Frame Material	Galvanized Steel
Cover Material	PE/PVC Fabric
Color	White with Blue accents
Water Resistance Level	Waterproof
Ultraviolet Light Protection	True
Closure Type	Zipper (for door panels)
Required Assembly	Yes
Recommended Uses	Outdoor, Event, Party, Wedding

8. Warranty Information

The manufacturer's warranty does not cover damage resulting from adverse weather conditions. It is crucial to follow all safety guidelines regarding tent usage in various weather scenarios. For specific warranty details and coverage, please refer to the documentation included with your purchase or contact AMERICAN PHOENIX customer service.

9. Customer Support

For any questions regarding assembly, missing parts, or general product inquiries, please contact AMERICAN PHOENIX customer service. If you have lost your assembly directions, the manufacturer can often provide them via email. Contact information can typically be found on the product packaging or the official AMERICAN PHOENIX website.

© 2024 AMERICAN PHOENIX. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B00NY3MBXO

More documents and user manuals: **https://manuals.plus/**