Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

AMERICAN PHOENIX Pavilion

AMERICAN PHOENIX Party Tent 16x26 ft Instruction Manual

Model: Pavilion

1. Product Overview

The AMERICAN PHOENIX 16x26 ft Party Tent is a heavy-duty canopy shelter designed for various outdoor events such as weddings, parties, and fairs. It features a robust galvanized steel frame, a waterproof and UV-resistant PE/PVC fabric roof, and removable sidewalls with plastic windows for light inflow and zippered curtains for easy access. This manual provides essential information for the safe and proper assembly, use, and maintenance of your party tent.



Figure 1.1: Fully assembled AMERICAN PHOENIX 16x26 ft Party Tent, showcasing its white roof and blue and white striped sidewalls with arched windows.

2. Safety Information

Please read and understand all safety warnings before assembly and use. Failure to follow these instructions may result in injury or damage to the product.

- **Weather Conditions:** Do not leave the canopy up overnight or under bad weather conditions, including strong winds, heavy rain, snow, or hail. Weather damage is not covered by the manufacturer's warranty.
- **Anchoring:** Always ensure the tent is properly anchored to the ground using all provided ropes and pegs to prevent it from lifting or collapsing in windy conditions.
- **Fire Safety:** Keep all flame and heat sources away from the tent fabric. The fabric is not fireproof.
- **Assembly Safety:** Assembly requires multiple people. Ensure all connectors are securely fastened and poles are

properly seated before applying tension to the fabric. Wear appropriate safety gear, such as gloves, during assembly.

- **Site Selection:** Choose a level, clear area free from overhead obstructions (e.g., power lines, tree branches) and sharp objects on the ground.
- **Supervision:** Do not allow children to play unsupervised around or inside the tent, especially during assembly or disassembly.

3. Package Contents

Verify that all components listed below are present and undamaged before beginning assembly. If any parts are missing or damaged, contact customer support.

- Galvanized Steel Tubes (various lengths for roof, legs, and support)
- Durable Metal Connectors
- Metal Base Plates
- PE/PVC Fabric Roof Cover (1x)
- Removable Sidewalls (8x)
- Door/End Walls (2x)
- Heavy-duty Velcro straps
- Bungee Cord Straps
- Corner Ropes
- Ground Pegs
- Instruction Manual (this document)

4. Assembly Instructions (Setup)

Assembly of the AMERICAN PHOENIX Party Tent requires at least 3-4 people. Follow these steps carefully for proper setup.

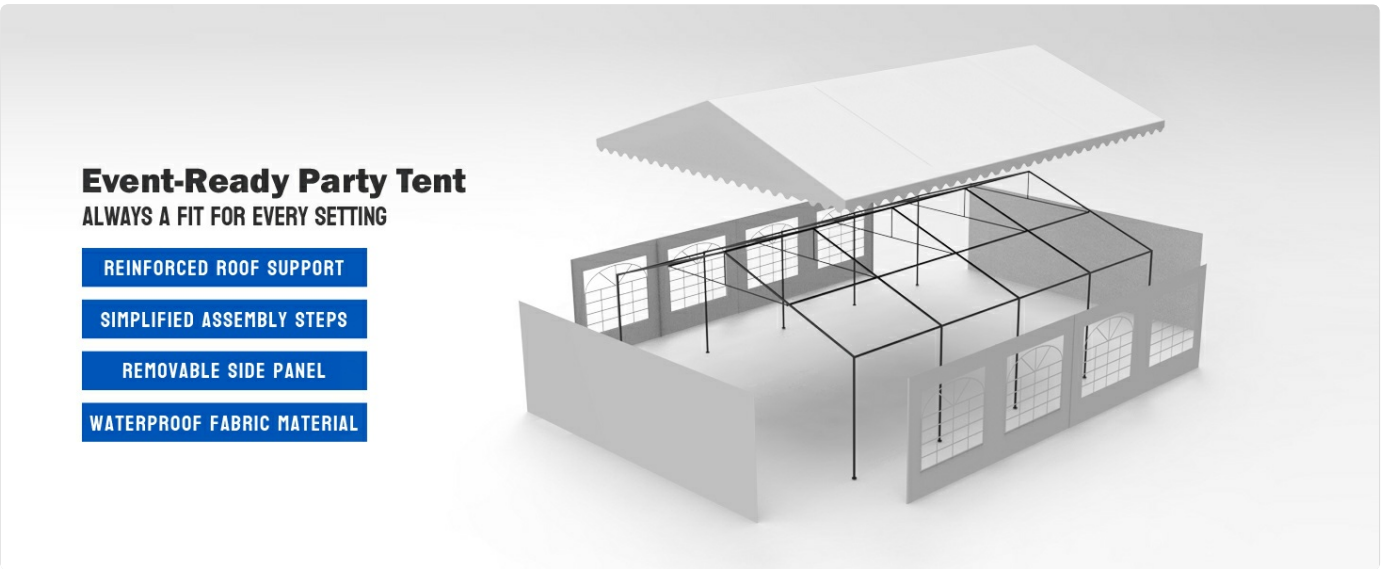


Figure 4.1: Exploded view illustrating the main components and their assembly sequence: frame, roof cover, and sidewalls.

1. **Prepare the Site:** Select a flat, clear area for the tent. Lay out all components and organize them by type (poles, connectors, fabric).

2. **Assemble the Roof Frame:** Begin by connecting the shorter roof poles and ridge poles using the appropriate metal connectors to form the top rectangular structure. Ensure all connections are secure.
3. **Attach Leg Poles:** Connect the vertical leg poles to the corners and intermediate points of the assembled roof frame. Ensure the base plates are attached to the bottom of each leg pole.
4. **Raise the Frame:** With the help of multiple people, carefully lift the entire frame structure into its upright position.
5. **Secure the Frame:** Once upright, ensure all connections are tight. Use the provided ground pegs to anchor the base plates of the leg poles to the ground.
6. **Install the Roof Cover:** Carefully drape the PE/PVC fabric roof cover over the assembled frame. Ensure it is centered and evenly distributed. Secure the roof cover to the frame using the integrated bungee cord straps or ties.
7. **Attach Sidewalls and End Walls:** Begin attaching the sidewalls and end walls to the frame. The sidewalls typically attach to the roof cover and leg poles using heavy-duty Velcro and bungee cords. Ensure the zippered curtains on the end walls are positioned correctly for entry and exit.
8. **Final Anchoring:** Use the corner ropes and additional pegs to further secure the tent, especially in areas prone to wind. Ensure all ropes are taut and properly anchored.

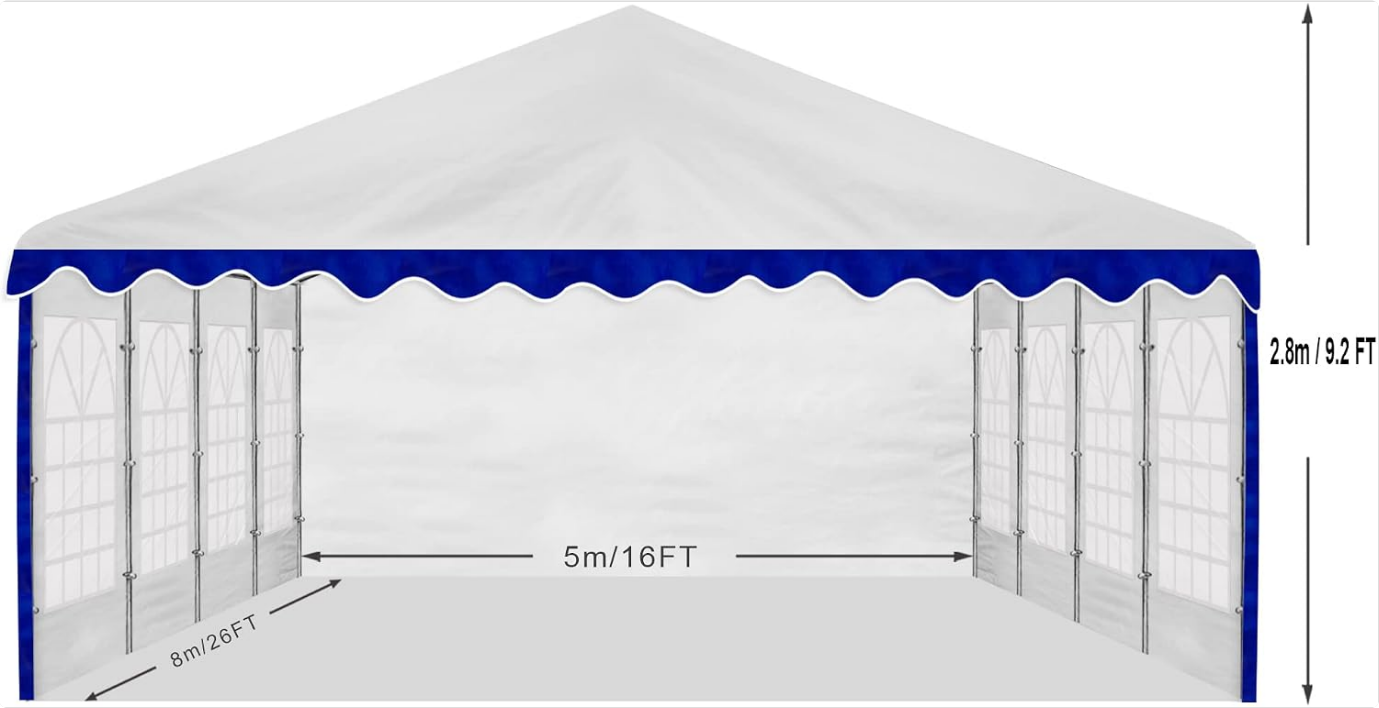


Figure 4.2: Illustration of the tent's galvanized steel frame structure, highlighting its robust design.

5. Usage Guidelines (Operating)

Proper operation ensures the longevity and safety of your party tent.

- **Entry and Exit:** Utilize the zippered curtains on the end walls for easy entry and exit. Ensure zippers are operated smoothly to prevent damage.
- **Ventilation:** The plastic windows provide natural light. If ventilation is needed, the sidewalls are removable, allowing for open-air use.
- **Securing Sidewalls:** When sidewalls are in place, ensure they are securely fastened to the frame using all available Velcro and bungee straps to prevent flapping in the wind.
- **Event Use:** This tent is recommended for outdoor events, parties, and weddings. It is designed to provide shelter from sun and light rain.



Figure 5.1: Interior perspective of the party tent, demonstrating the spacious area and the light inflow from the plastic windows.

6. Care and Maintenance

Regular care and maintenance will extend the life of your AMERICAN PHOENIX Party Tent.

- **Cleaning:** Clean the PE/PVC fabric with mild soap and water. Do not use harsh chemicals or abrasive cleaners, as these can damage the material. Rinse thoroughly and allow to air dry completely before storage.
- **Frame Inspection:** Periodically inspect the galvanized steel tubes and metal connectors for any signs of rust, bending, or damage. Replace damaged parts immediately.
- **Storage:** When not in use, disassemble the tent and store all components in a dry, cool place away from direct sunlight and extreme temperatures. Ensure the fabric is completely dry to prevent mold and mildew.
- **Weather Preparedness:** As mentioned in safety, always take down the tent during adverse weather conditions to prevent damage.

7. Troubleshooting

This section addresses common issues you might encounter.

- **Tent Instability:**
  Possible Cause: Insufficient anchoring or loose frame connections.
  Solution: Ensure all ground pegs are fully inserted and ropes are taut. Double-check that all metal connectors are securely fastened and poles are properly seated.
- **Water Leaks:**
  Possible Cause: Improperly installed roof cover or damaged fabric.
  Solution: Verify the roof cover is centered and fully covers the frame. Check the fabric for tears or punctures. Small tears can sometimes be repaired with a waterproof patch kit.
- **Difficulty Assembling Frame:**
  Possible Cause: Poles or connectors are not aligned, or assembly is attempted by too few people.
  Solution: Ensure poles are inserted straight into connectors. Do not force connections. Confirm you have enough people (at least 3-4) to manage the size and weight of the frame components.
- **Sidewalls Not Fitting Properly:**
  Possible Cause: Sidewalls are not aligned correctly or frame is not square.
  Solution: Re-align the sidewalls, ensuring the Velcro and bungee attachments match the frame. Check the overall squareness of the tent frame.

8. Product Specifications

Feature	Specification
Dimensions (L x W x H)	236"L x 236"W x 120"H (16x26 ft)
Material	PE/PVC Fabric (Roof), Galvanized Steel (Frame)
Color	White/Blue
Item Weight	215 Pounds
Water Resistance Level	Waterproof
UV Protection	Yes
Assembly Required	Yes
Recommended Uses	Outdoor, Event, Party, Wedding

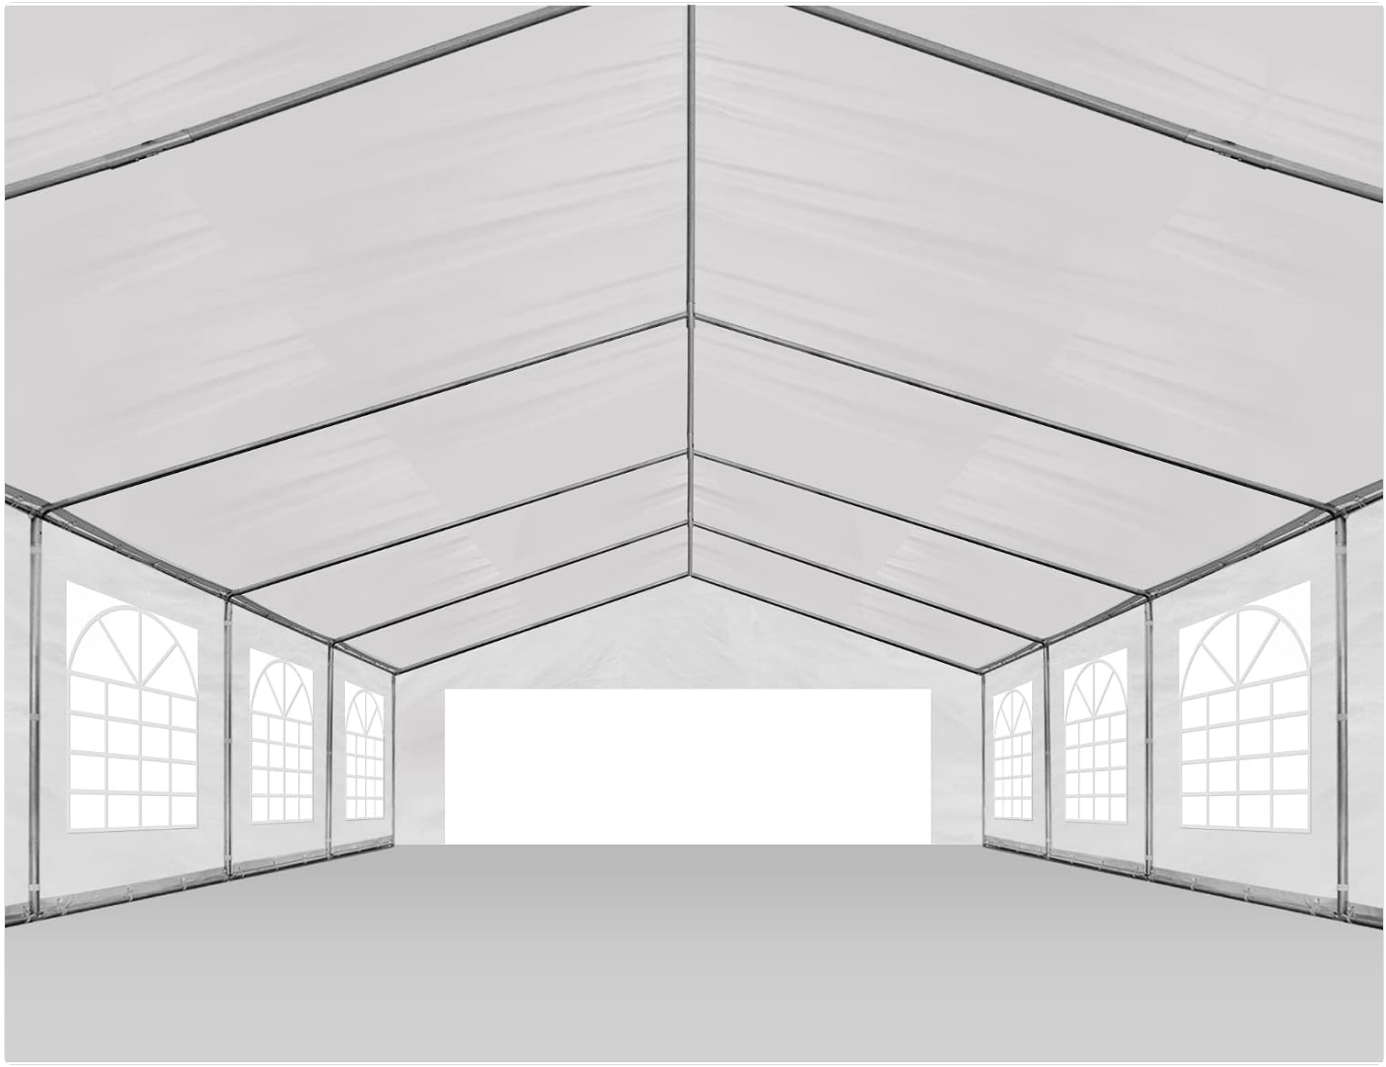


Figure 8.1: Dimensional diagram of the party tent, indicating its 16x26 ft footprint and 9.2 ft peak height.

9. Warranty and Support

For any questions regarding your AMERICAN PHOENIX Party Tent, including missing parts, assembly assistance, or warranty inquiries, please contact AMERICAN PHOENIX customer support directly.

Please note that weather damage is not covered by the manufacturer's warranty. Always adhere to the safety guidelines, especially regarding adverse weather conditions.

You can visit the official AMERICAN PHOENIX store for more information and contact details:AMERICAN PHOENIX Store on Amazon

© 2023 AMERICAN PHOENIX. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B00NY49WHG

More documents and user manuals: **https://manuals.plus/**