Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Hamzer H-STAND

Hamzer Heavy Duty H-Style Piano Keyboard Stand Instruction Manual

Model: H-STAND

Introduction

Thank you for choosing the Hamzer Heavy Duty H-Style Piano Keyboard Stand. This manual provides essential information for the safe assembly, operation, and maintenance of your new keyboard stand. Please read these instructions thoroughly before use and retain them for future reference.



Image: Front view of the Hamzer Heavy Duty H-Style Piano Keyboard Stand.

Safety Information

- Ensure all components are securely fastened before placing a keyboard on the stand.
- Do not exceed the weight capacity of the stand.
- Place the stand on a stable, level surface to prevent tipping.
- Keep small parts away from children to avoid choking hazards.

Package Contents

Verify that all parts are present before beginning assembly:

- H-Style Keyboard Stand Frame (main components)
- Adjustment Knobs/Screws

- Non-slip Rubber End Caps
- Optional Keyboard Fastening Screws (for compatible keyboards)

Assembly Instructions

The Hamzer H-Style Keyboard Stand is designed for easy assembly. No additional tools are typically required.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, flat surface.
2. **Assemble Base:** Connect the horizontal base bars to the vertical support legs. Ensure the non-skid feet are facing downwards. Secure with the provided adjustment knobs.
3. **Attach Keyboard Supports:** Slide the upper keyboard support arms onto the vertical legs. These arms feature grooved rubber end caps for secure keyboard placement.
4. **Adjust Height:** Loosen the adjustment knobs on the vertical legs. Raise or lower the keyboard supports to your desired height (22", 24-1/2", or 27"). Ensure both sides are adjusted to the same height. Tighten the knobs securely.
5. **Optional Keyboard Fastening:** If your keyboard has compatible screw holes (separation range: 20-1/2" to 28-1/2"), you may use the included screws to fasten the keyboard to the stand for additional stability.



Image: Detail of the top support arms with grooved rubber end caps for secure keyboard placement.



Image: Close-up of the adjustment knobs used to secure the stand's height.

Operating Instructions

Adjusting Height

The stand offers three adjustable height positions for user comfort and versatility.

1. **Unlock:** Locate the adjustment knobs on both vertical support legs. Turn them counter-clockwise to loosen.
2. **Adjust:** Carefully raise or lower the keyboard support arms to one of the three preset height positions: 22 inches, 24-1/2 inches, or 27 inches. Ensure the pins align with the desired holes on both sides.

3. **Lock:** Once the desired height is achieved, turn the adjustment knobs clockwise to tighten and secure the stand firmly in place. Verify that both sides are locked before placing a keyboard on the stand.



Image: Visual representation of the stand's three adjustable height settings.

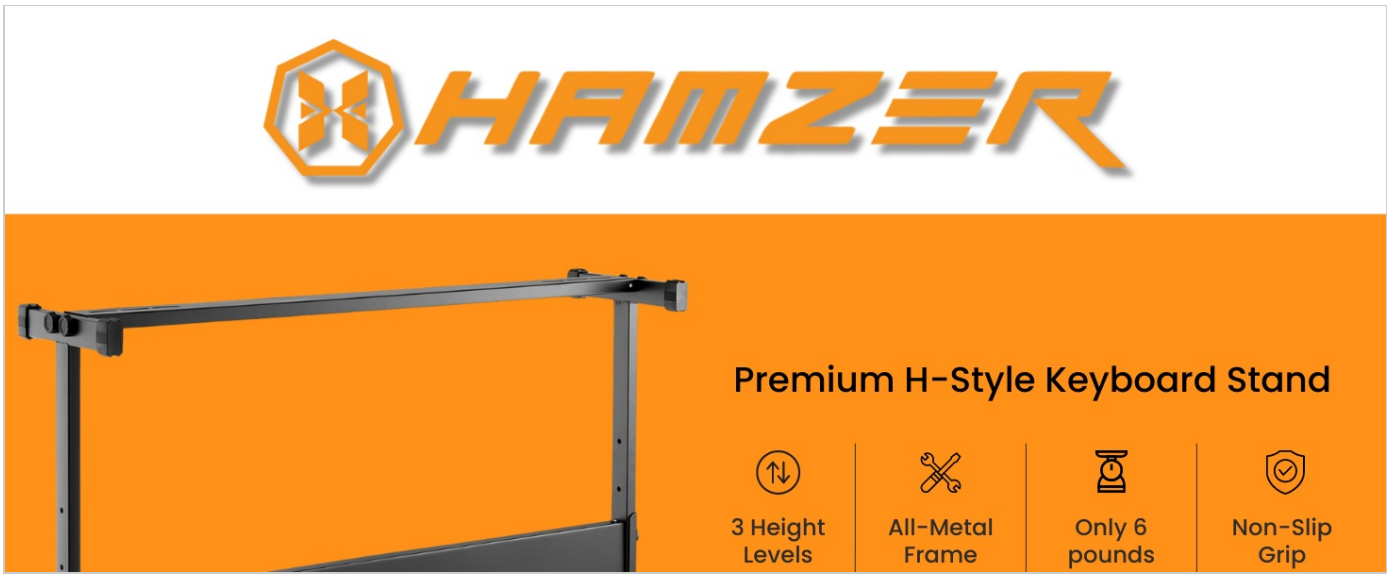


Image: The Hamzer H-Style Keyboard Stand demonstrating its adjustable heights, suitable for various user preferences.

Maintenance

- **Cleaning:** Wipe the stand with a damp cloth to remove dust and dirt. Avoid abrasive cleaners.
- **Inspection:** Periodically check all fasteners and connections to ensure they remain tight. Re-tighten if necessary.
- **Storage:** For long-term storage or transport, the stand can be easily disassembled.

Troubleshooting

Problem	Possible Cause	Solution
Stand feels unstable or wobbly.	Fasteners are loose; stand is on an uneven surface; keyboard not properly seated.	Ensure all adjustment knobs are fully tightened. Move the stand to a level surface. Verify the keyboard is centered and stable on the support arms.
Difficulty adjusting height.	Adjustment knobs are too tight; pins are misaligned.	Loosen adjustment knobs completely. Ensure the support arms are lifted slightly to allow pins to disengage before adjusting. Realign pins with desired height holes.

Specifications

- **Model:** H-STAND
- **Material:** All-metal construction
- **Color:** Black
- **Adjustable Height Positions:** 22", 24-1/2", 27"
- **Keyboard Support Length:** 8-1/4" with grooved rubber end caps
- **Footprint (approx.):** 31" wide x 15" deep
- **Item Weight:** Approximately 4 pounds
- **Optional Fastening Screw Hole Separation Range:** 20-1/2" to 28-1/2"

Warranty and Support

For warranty information or technical support, please refer to the contact details provided with your purchase documentation or visit the official Hamzer website. Keep your proof of purchase for warranty claims.
Online Resources: For additional product information and support, visit Hamzer's Amazon Store.

© 2026 Hamzer. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B00P00C1UW

More documents and user manuals: **https://manuals.plus/**