Samsung N910A

Samsung Galaxy Note 4 N910A Smartphone User Manual

Model: N910A

1. Introduction

This manual provides essential information for setting up, operating, maintaining, and troubleshooting your Samsung Galaxy Note 4 N910A smartphone. Please read this guide thoroughly to ensure optimal performance and longevity of your device.

2. What's in the Box

Verify that all items are present in your product packaging:

- Samsung Galaxy Note 4 N910A Smartphone
- Battery (if removable)
- USB Charging Cable
- Wall Charger Adapter
- S Pen
- Quick Start Guide (if included)





Image: Samsung Galaxy Note 4 N910A with its USB charging cable and wall charger adapter.

3. Device Overview

Familiarize yourself with the physical components of your Samsung Galaxy Note 4 N910A.



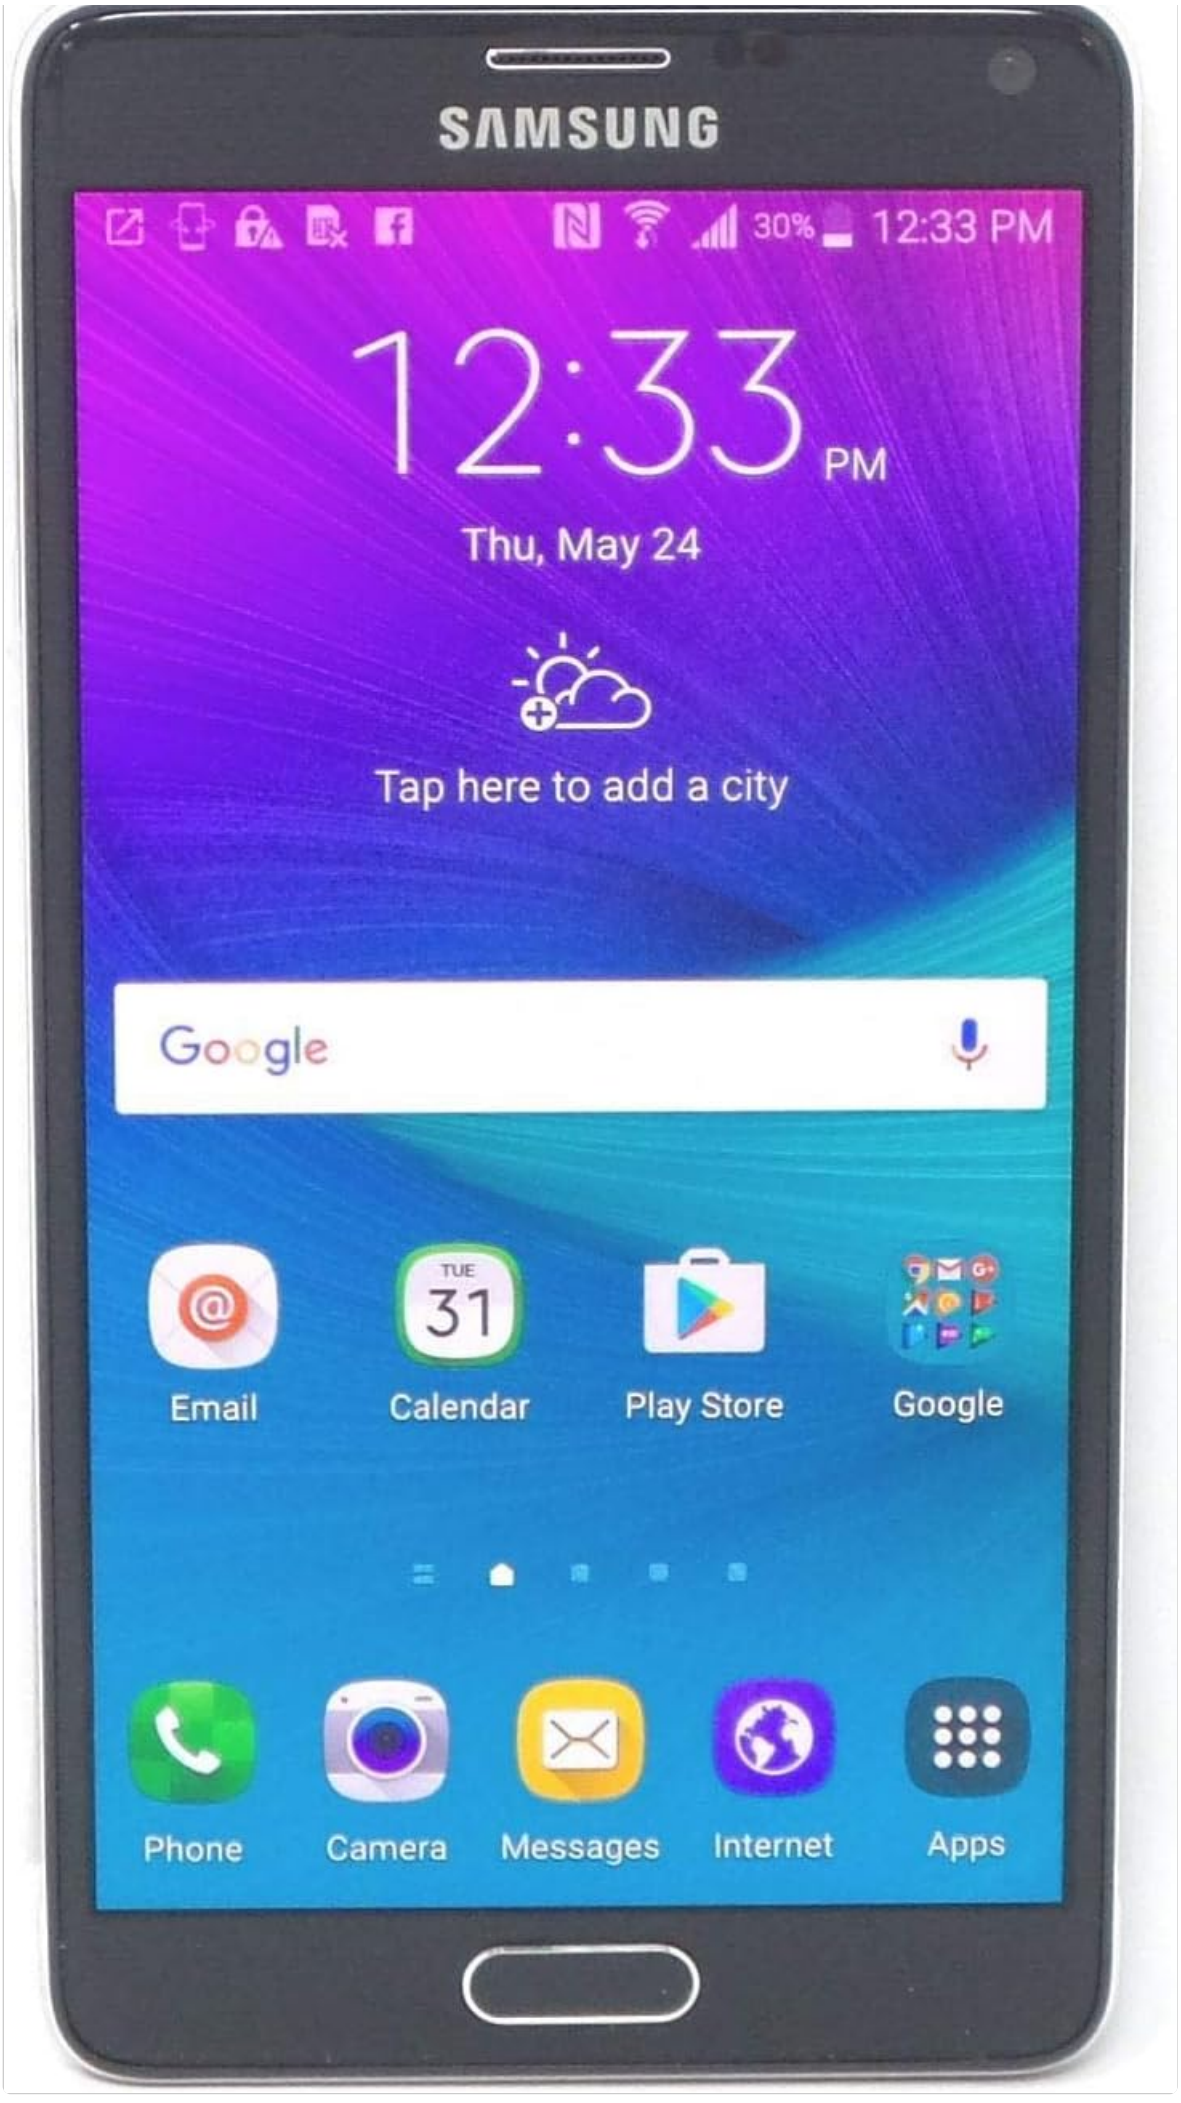

SAMSUNG
30%
12:33 PM
12:33
PM
Thu, May 24
Tap here to add a city
Google
Email
Calendar
Play Store
Google
Phone
Camera
Messages
Internet
Apps

Image: Front view of the Samsung Galaxy Note 4 N910A, showing the display, earpiece, front camera, and home button.





Image: Rear view of the Samsung Galaxy Note 4 N910A, highlighting the main camera, LED flash, and speaker grille.

Key Components:

- **Display:** 5.7-inch Quad HD Super AMOLED touchscreen.
- **Front Camera:** 3.7 Megapixel for selfies and video calls.
- **Rear Camera:** 16 Megapixel with Optical Image Stabilization and Autofocus.
- **S Pen:** Integrated stylus for enhanced interaction.
- **Home Button:** Also functions as a fingerprint sensor.
- **Power/Lock Button:** Located on the side.
- **Volume Buttons:** Located on the side.
- **USB Port:** For charging and data transfer (USB Type C).
- **Headphone Jack:** 3.5 mm audio port.

4. Setup

4.1. Inserting the SIM Card

1. Power off your device.
2. Locate the SIM card slot, typically on the side or under the back cover.
3. Insert your Standard SIM card into the tray with the gold contacts facing down.
4. Ensure the tray is securely closed.

4.2. Inserting a MicroSD Card

Expand your device's storage up to 64GB.

1. Power off your device.
2. Locate the microSD card slot, often near the SIM card slot or under the back cover.
3. Insert the microSD card into the slot until it clicks into place.

4.3. Battery Installation and Charging

The Galaxy Note 4 N910A features a removable battery.

1. Remove the back cover of the phone.
2. Align the battery contacts with the terminals in the battery compartment and gently press down until it is seated.
3. Replace the back cover.
4. Connect the USB charging cable to the phone's USB Type C port and the wall charger adapter.
5. Plug the adapter into a power outlet. Allow the device to charge fully before first use (approximately 1 hour).

4.4. Initial Power On and Setup Wizard

1. Press and hold the Power/Lock button until the Samsung logo appears.

2. Follow the on-screen instructions to select your language, connect to Wi-Fi, set up your Google account, and configure security settings.

5. Operating Your Device

5.1. Basic Navigation

The Galaxy Note 4 N910A operates on Android v4.4.4 (KitKat) with a Super AMOLED capacitive multi-touchscreen.

- **Touch:** Tap to open apps, select items, or press buttons.
- **Swipe:** Move your finger across the screen to scroll through pages or content.
- **Pinch:** Use two fingers to zoom in or out on images and web pages.
- **S Pen:** Use the S Pen for precise input, drawing, and specific S Pen features.



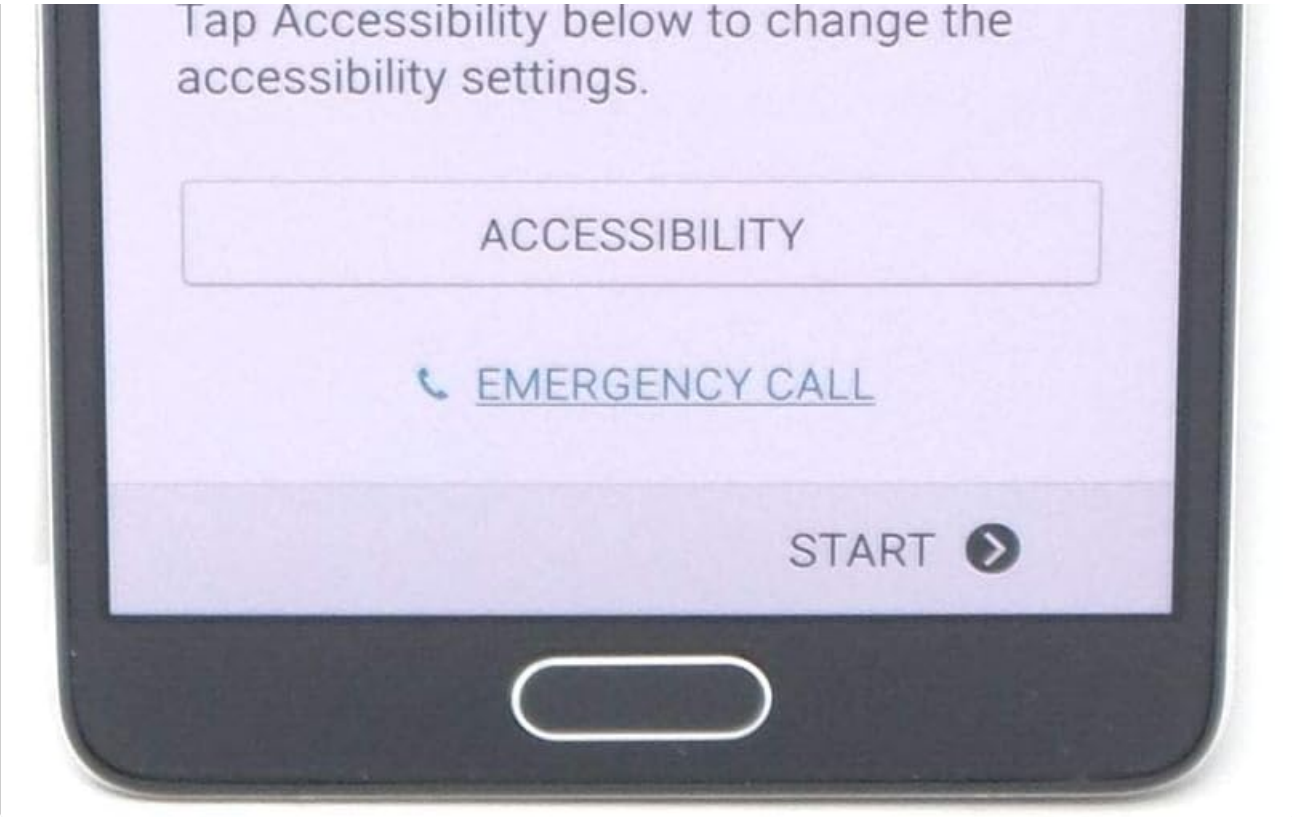


Image: The Samsung Galaxy Note 4 N910A home screen, showing app icons and widgets.

5.2. Making Calls and Sending Messages

- **Calls:** Tap the Phone icon, enter the number, and tap the Call button.
- **Messages:** Tap the Messages icon, compose a new message, enter the recipient, and type your text.

5.3. Connecting to Networks

- **Wi-Fi:** Go to *Settings* > *Wi-Fi*, turn Wi-Fi on, and select an available network.
- **Mobile Data:** Go to *Settings* > *Data usage* and ensure Mobile data is enabled.

5.4. Camera Usage

The device features a 16MP rear camera and a 3.7MP front camera.

1. Open the Camera app.
2. Tap the shutter button to take a photo.
3. Tap the video icon to record video. The rear camera supports 4K video recording (limited to 5 minutes per clip).
4. Switch between front and rear cameras using the camera switch icon.

5.5. S Pen Features

The S Pen offers enhanced productivity and creativity.

- **Action Memo:** Quickly jot down notes and link them to actions like calling or saving contacts.
- **Smart Select:** Capture and collect content from any screen.
- **Image Clip:** Draw around an image to crop it precisely.
- **Screen Write:** Capture a screenshot and write notes directly on it.
- **Handwriting Recognition:** Convert handwritten notes and messages into text.

5.6. Multi-Window Functionality

Run two applications side-by-side for enhanced multitasking.

1. Press and hold the Back button to activate the Multi Window tray.
2. Drag two compatible apps from the tray to the top and bottom halves of the screen.

5.7. Security Features

- **Fingerprint Reader:** Use the home button to unlock your device securely. Register your fingerprints in *Settings > Finger Scanner*.
- **Face Recognition:** Set up face recognition for an alternative unlock method in *Settings > Lock screen and security*.

5.8. S-Health

Utilize the S-Health application to monitor your fitness and well-being. The device includes a sensor on the back for checking pulse and O2 levels.

6. Maintenance

6.1. Cleaning the Device

- Use a soft, lint-free cloth to clean the screen and body.
- Avoid using harsh chemicals or abrasive materials.

6.2. Battery Care

- Avoid extreme temperatures.
- Do not allow the battery to fully discharge frequently.
- If the battery is removable, ensure it is properly seated.

6.3. Software Updates

Regularly check for software updates to ensure your device has the latest features and security patches. Go to *Settings > About device > Software update*.

6.4. Storage Management

To optimize performance, regularly manage your device's storage. Delete unnecessary files, uninstall unused apps, and move media to your microSD card.

7. Troubleshooting

If you encounter issues with your device, refer to the following common solutions:

Problem	Solution
Device not powering on	Ensure the battery is charged. Connect to a charger and wait a few minutes before attempting to power on again.
Screen unresponsive	Perform a soft reset by holding the Power button for 10-15 seconds. If unresponsive, remove and reinsert the battery (if applicable).
Poor network signal	Check SIM card insertion. Move to an area with better network coverage. Restart the device.

Problem	Solution
Apps crashing	Clear the app's cache (*Settings > Apps > [App Name] > Storage > Clear cache*). Update the app or reinstall it.
Battery drains quickly	Reduce screen brightness, disable unused features (Wi-Fi, Bluetooth, GPS), close background apps, and check for rogue apps consuming excessive power.

8. Specifications

Detailed technical specifications for the Samsung Galaxy Note 4 N910A:

- **Operating System:** Android v4.4.4 (KitKat)
- **Processor:** Quad-core 2.7 GHz (Krait 450, Adreno 420 Graphics)
- **Display:** 5.7 Inches, Super AMOLED, 1440 x 2560 pixels resolution
- **RAM:** 3 GB
- **Internal Storage:** 32 GB
- **Expandable Storage:** microSD slot, up to 64 GB
- **Rear Camera:** 16 MP with Optical Image Stabilization, Autofocus
- **Front Camera:** 3.7 MP
- **Battery Capacity:** 2500 mAh
- **Connectivity:** 2G, 3G, 4G LTE (B2/B4/B5/B12/B17), Wi-Fi, Bluetooth 4.1, NFC, GPS
- **Ports:** USB Type C, 3.5 mm Headphone Jack
- **Dimensions:** 6.04 x 0.33 x 3.09 inches
- **Weight:** 0.01 Ounces

9. Warranty and Support

Your Samsung Galaxy Note 4 N910A comes with a standard Samsung warranty. For specific warranty terms and conditions, please refer to the documentation provided with your purchase or visit the official Samsung support website. For further assistance, technical support, or service inquiries, please contact Samsung customer service or visit an authorized service center. Keep your proof of purchase for warranty claims.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question