CANDY CV117-OS, CV166-37/0

Candy Large Lint Filter for Dryer Instruction Manual

Models: CV117-OS, CV166-37/0

Introduction

This manual provides essential information for the proper installation, operation, and maintenance of your Candy large lint filter. This filter is a genuine replacement part designed to ensure the efficient and safe operation of your compatible Candy dryer.



Image: The Candy large lint filter shown in an open position, highlighting its internal structure.

Compatibility

This lint filter is compatible with the following Candy dryer models:

- CV117-OS
- CV166-37/0

Always verify your dryer's model number before installing replacement parts to ensure proper fit and function.

Setup and Installation

Follow these steps to install the new lint filter in your dryer:

1. **Safety First:** Before beginning any installation, ensure your dryer is unplugged from the power outlet to prevent electrical hazards.
2. **Locate the Old Filter:** The lint filter is typically located inside the dryer door opening or on the top panel of the dryer.
3. **Remove the Old Filter:** Gently pull the old lint filter straight out from its housing. Dispose of the old filter responsibly.
4. **Inspect the Housing:** Check the filter housing for any remaining lint or debris and clean it thoroughly to ensure optimal airflow.
5. **Insert the New Filter:** Align the new Candy lint filter with the opening in the dryer. Slide the filter firmly into place until it is fully seated. Ensure there are no gaps.
6. **Verify Installation:** Close the dryer door and ensure it latches properly. The filter should not obstruct the door.
7. **Restore Power:** Plug the dryer back into the power outlet.



Image: The Candy large lint filter shown in a closed position, ready for installation or use.

Operation

Once installed, the lint filter operates automatically during the dryer cycle. Its primary function is to capture lint and debris from your clothes, preventing them from entering the dryer's exhaust system and improving drying efficiency.
Always ensure the lint filter is correctly seated before starting any drying cycle. Operating the dryer without a lint filter or with a improperly installed filter can lead to reduced efficiency, longer drying times, and potential fire hazards.

Maintenance

Regular cleaning of the lint filter is crucial for the performance and safety of your dryer. Follow these maintenance guidelines:

- **Clean After Every Load:** For optimal performance and to prevent fire hazards, remove and clean the lint filter after every drying cycle.
- **How to Clean:**
    a. Pull the lint filter out of its housing.
    b. Peel off the accumulated lint from the screen.
    c. For stubborn residue or fabric softener build-up, wash the filter with warm, soapy water and a soft brush. Rinse thoroughly.
    d. Allow the filter to air dry completely before reinserting it into the dryer.
- **Inspect for Damage:** Periodically inspect the filter for any tears, holes, or damage to the screen. A damaged filter should be replaced immediately to prevent lint from entering the dryer's internal components.



Image: The Candy large lint filter in a closed, slightly angled view, demonstrating its compact form.

Troubleshooting

If you experience issues with your dryer, consider the lint filter as a potential cause:

- **Long Drying Times:** A clogged lint filter is a common cause of extended drying cycles. Ensure the filter is clean before each use.
- **Dryer Overheating:** Restricted airflow due to a dirty filter can cause the dryer to overheat. Clean the filter and check the exhaust vent for blockages.
- **Lint on Clothes:** If lint is still appearing on your clothes after drying, the filter might be damaged, improperly installed, or excessively clogged. Inspect the filter for tears and ensure it is seated correctly.
- **Unusual Noises:** While less common, a loose or damaged filter could potentially cause minor rattling. Ensure the filter is securely in place.

If troubleshooting these steps does not resolve the issue, consult your dryer's main instruction manual or contact a qualified technician.

Specifications

Brand	CANDY

Model Numbers	CV117-OS, CV166-37/0
Part Type	Large Lint Filter
Approximate Dimensions	290mm (Length) x 115mm (Width) x 32mm (Height)
Item Weight	100 grams

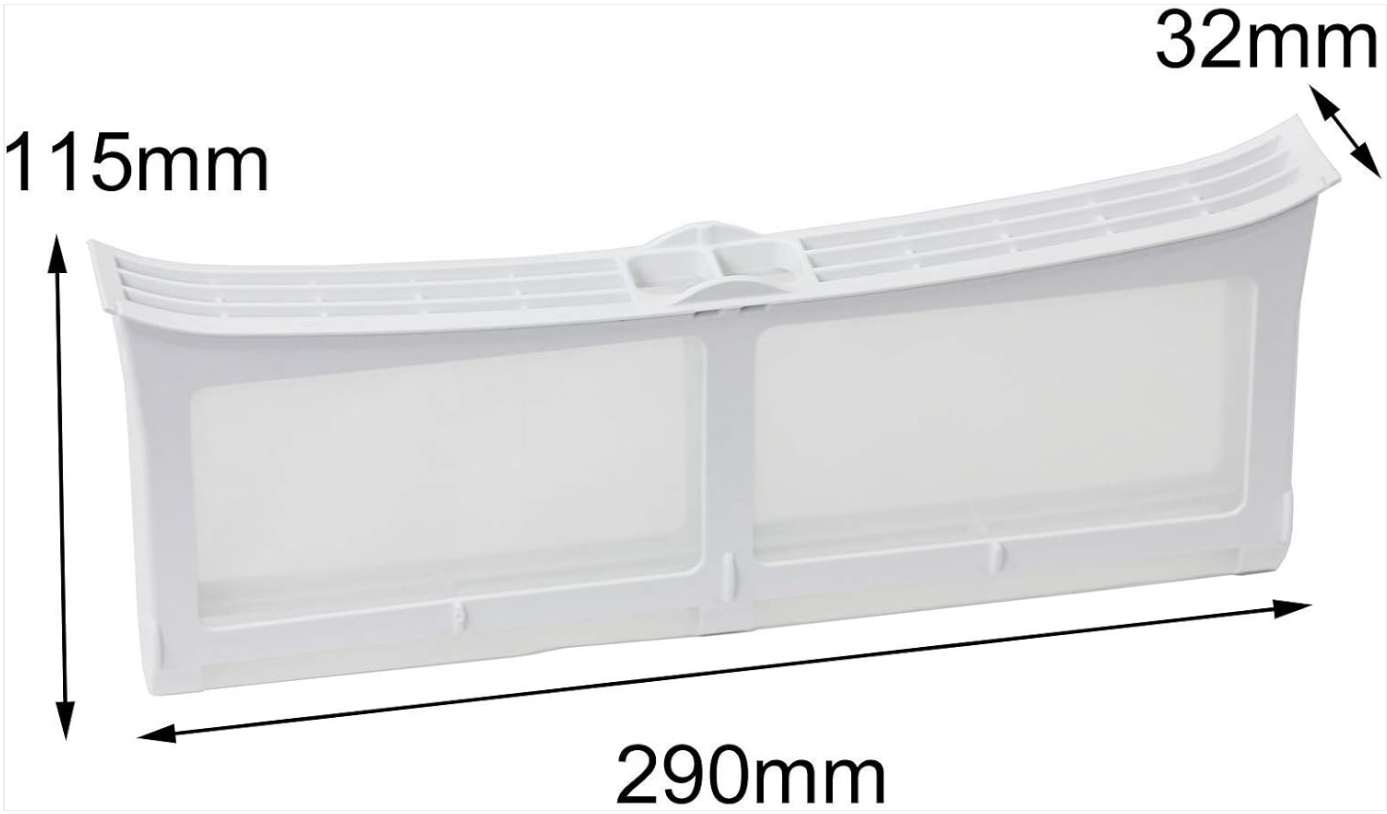


Image: The Candy large lint filter displaying its approximate dimensions: 290mm length, 115mm width, and 32mm height.

Important Notes

Color Variation: The color of the filter supplied may vary between grey or white, depending on the manufacturer's production batch. This variation does not affect the filter's functionality or compatibility.



Image: Two Candy large lint filters, one in white and one in grey, illustrating the possible color variations.

This is a genuine Candy replacement part. For further assistance, please refer to your dryer's main user manual or contact Candy customer support.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question