Quik Shade 160070

Quik Shade Max Shade Folding Camp Chair - Model 160070 Instruction Manual

Brand: Quik Shade

Product Overview

The Quik Shade Max Shade Folding Camp Chair provides comfortable seating with integrated UV sun protection. Designed for portability and durability, it features an adjustable canopy, sturdy construction, and convenient storage options.



Image: The Quik Shade Max Shade Folding Camp Chair in blue, showcasing its integrated canopy and overall design.

Setup and Assembly

For detailed assembly instructions, please refer to the official Installation Manual (PDF) provided by the manufacturer. A general overview is provided below.

Download Installation Manual: Quik Shade Max Shade Chair Installation Manual (PDF)

1. Remove the chair from its carry bag.
2. Unfold the chair by pulling the opposing sides apart until it is fully extended and stable.
3. Raise the adjustable canopy by extending the support arms and securing them into position. The canopy can be tilted for optimal sun protection.

Your browser does not support the video tag.

Video: Official product video demonstrating the setup and features of the Quik Shade MAX Shade Chair. This video is provided by the seller, Shelter Logic.



Image: Front view of the Quik Shade Max Shade Chair with its canopy fully extended, ready for use.

Operating Instructions

The Quik Shade Max Shade Chair is designed for ease of use and comfort.

- **Adjusting the Canopy:** The patented adjustable canopy can be lowered, raised, and tilted to provide optimal UV sun protection throughout the day. Simply adjust the support arms to your desired position.
- **Cup Holders:** Utilize the two integrated cup holders in the armrests for beverages.
- **Storage Pouch:** A mesh side pouch is available to keep small belongings handy.





Image: Close-up view of the canopy adjustment mechanism, highlighting its flexibility for sun protection.



Image: Detail of an integrated cup holder in the armrest of the chair.





Image: Detail of the mesh side pouch, useful for storing small items.

Maintenance

To ensure the longevity and optimal performance of your Quik Shade Max Shade Chair, follow these simple maintenance guidelines:

- **Cleaning:** Wipe clean with a damp cloth. Avoid harsh chemicals or abrasive cleaners that may damage the fabric or frame.
- **Storage:** When not in use, fold the chair and store it in its included carry bag in a dry place to protect it from prolonged exposure to elements.
- **Inspection:** Periodically check all frame connections and fabric for any signs of wear or damage.





Image: A person carrying the folded chair in its carry bag, illustrating its portability and ease of storage.

Troubleshooting

This section addresses common issues you might encounter with your Quik Shade Max Shade Chair.

Problem	Possible Cause	Solution
Chair does not unfold or fold smoothly.	Frame joints may be stiff or obstructed.	Ensure no fabric is caught in the joints. Apply a silicone-based lubricant to hinges if stiffness persists.
Canopy does not stay in position.	Canopy support arms not fully locked or damaged.	Verify that the canopy support arms are securely clicked into their locking mechanisms. If damaged, contact customer support.
Chair feels unstable.	Chair not fully extended or placed on uneven ground.	Ensure all four legs are fully extended and locked. Move the chair to a flat, stable surface.

Specifications

Brand: Quik Shade

Model Name: MAX Adjustable Shade Folding Chair

Model Number: 160070

Color: Blue

Material: Polyester fabric, Alloy Steel frame

Product Dimensions (D x W x H): 22.8"D x 36"W x 42"H

Item Weight: 9 pounds

Maximum Weight Recommendation: 225 pounds

Seat Height: 22.5 inches

Seat Depth: 18 inches

Number of Cup Holders: 2

Features: Adjustable Shade Canopy, Foldable, Cup Holders, Mesh Side Pouch

Included Components: Canopy chair, Carry bag



Image: Diagram showing the dimensions of the Quik Shade Max Shade Chair, including height and width.

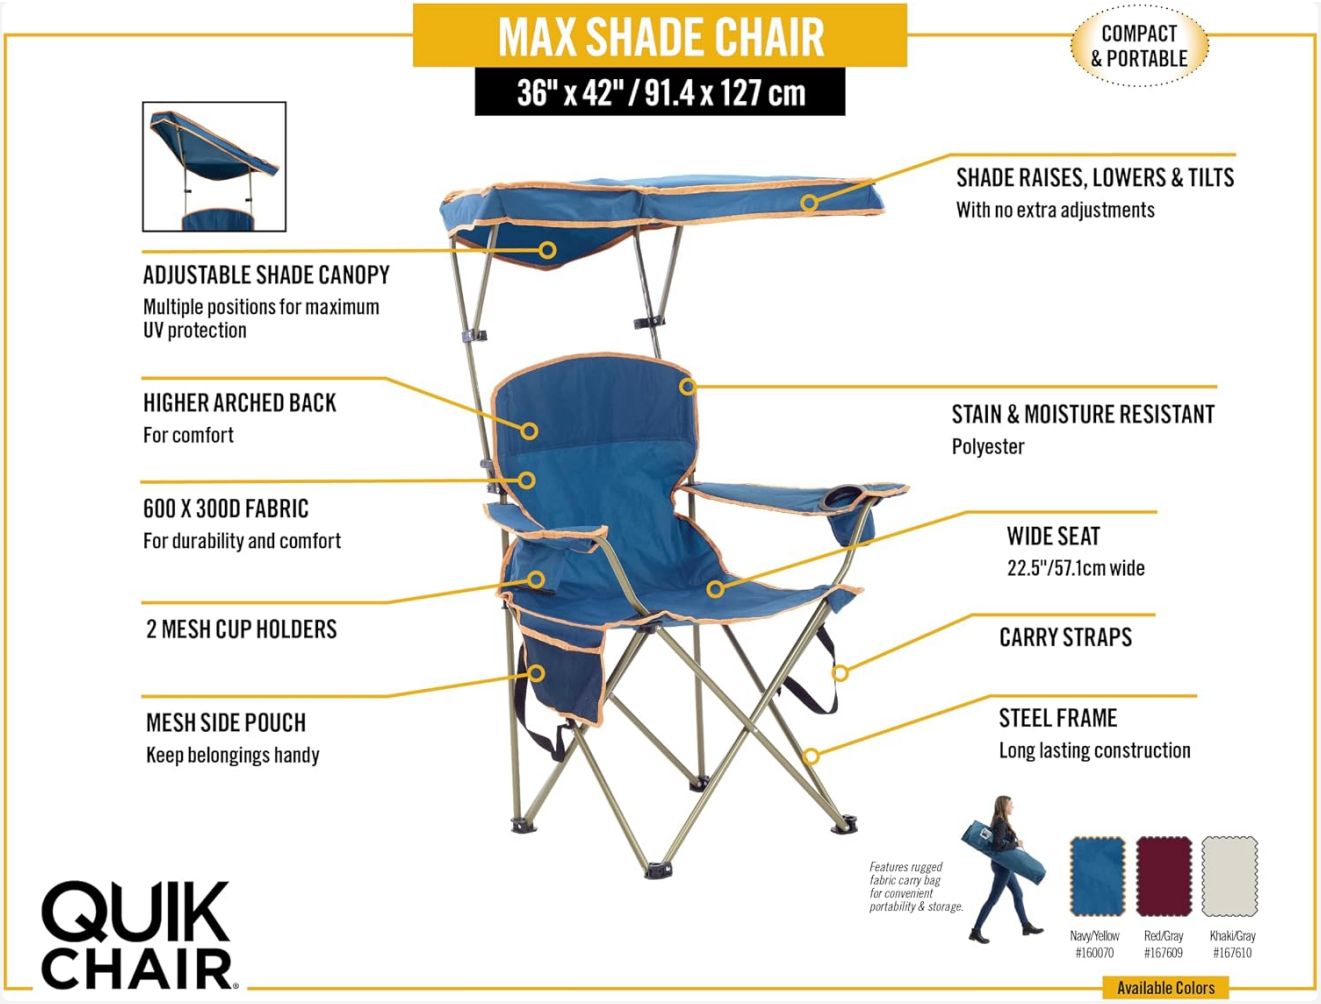


Image: Visual representation highlighting key features such as the adjustable shade canopy, higher arched back, durable fabric, wide seat, cup holders, mesh side pouch, and steel frame.

Warranty and Support

Warranty: The manufacturer states "No warranty." for this product. Please refer to your retailer's return policy for details on returns or exchanges.
Customer Support: For further assistance or inquiries, please contact the retailer where the product was purchased.

© 2026 Quik Shade. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question