Schick 0729

Schick Hydro Silk TrimStyle Razor with Bikini Trimmer for Women User Manual

Model: 0729

Introduction

The Schick Hydro Silk TrimStyle Razor is a versatile 2-in-1 waterproof tool designed for women, offering both shaving and trimming functionalities. It provides precision and control for various body areas, including the bikini line. The razor features 5 Curve-Sensing blades with a skin-protection coating and unique skin guards to minimize irritation. It is formulated with a hypoallergenic Hydra-Boost serum containing shea butter and hyaluronic acid to hydrate the skin for up to 2 hours after shaving.

Included Components

- 1 Schick Hydro Silk TrimStyle Razor and Bikini Trimmer Handle
- 1 Razor Refill
- 1 AAA Battery

Setup

1. Battery Installation

1. Twist the center of the handle to open the battery compartment.
2. Insert 1 AAA battery, ensuring correct polarity (+/-).
3. Twist the handle back to close the compartment securely.

2. Attaching/Replacing Razor Cartridge

1. To remove an old cartridge, press the release button located on the razor head and slide the cartridge off.
2. To attach a new cartridge, align it with the razor handle and push until it clicks securely into place.

3. Attaching/Adjusting Trimmer Comb

1. The trimmer comb can be attached to the trimmer end of the handle.
2. The comb offers 4 customizable length settings. Slide the comb up or down to select your desired trim length.



Figure 1: Trimmer with 4 customizable length settings.

Operating Instructions

Using the Razor

1. Wet the skin and apply shaving cream or gel.
2. Gently glide the 5-blade razor over the skin in the direction of hair growth for a smooth shave. The Hydra-Boost serum will activate upon contact with water.
3. Rinse the razor head frequently during use to prevent clogging.

Using the Bikini Trimmer

1. Ensure the trimmer comb is set to your desired length (4 settings available).
2. Press the power button on the handle to activate the trimmer.
3. Gently move the trimmer against the direction of hair growth to trim hair to the selected length.
4. For a closer trim, remove the comb attachment and use the trimmer directly on the skin.

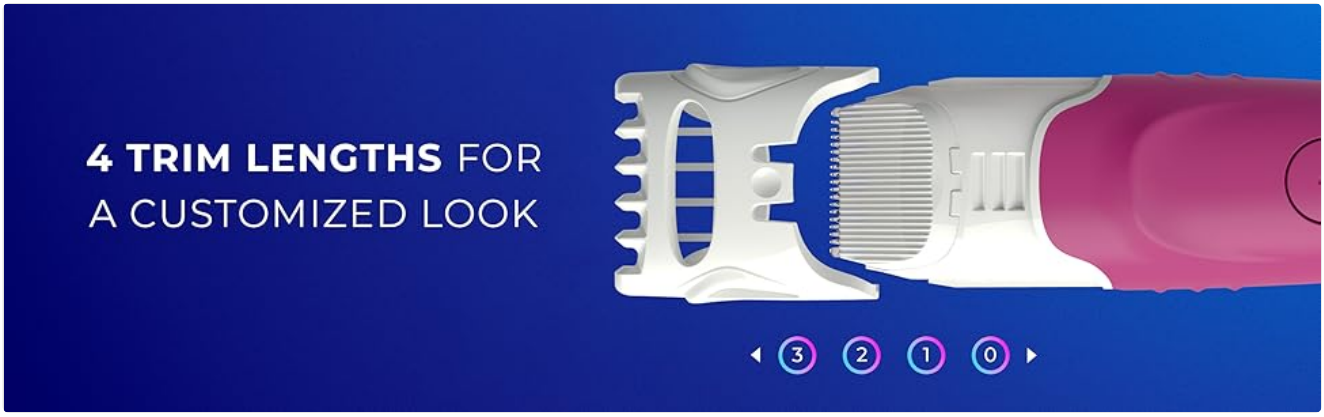


Figure 2: The 2-in-1 waterproof design for versatile use.



Figure 3: Close-up of the 5 Curve-Sensing blades for a smooth shave.

Maintenance

Cleaning the Razor and Trimmer

1. After each use, rinse both the razor and trimmer thoroughly under running water to remove hair and debris.
2. For the trimmer, remove the comb and push back the gray trimmer set to remove the trimmer blade for thorough cleaning. Rinse all parts.
3. Allow all components to air dry completely before reassembling and storing.

Replacing Blades

Replace the razor cartridge when the moisturizing strips wear down or when you feel the blades are no longer providing an optimal shave. Replace the trimmer blade if it becomes dull or damaged.

Your browser does not support the video tag.

Video 1: Official guide on how to clean the Schick Hydro Silk TrimStyle personal groomer.

Troubleshooting

- **Trimmer not turning on:** Check if the AAA battery is inserted correctly with the right polarity. Replace the battery if it is old or depleted.
- **Poor shaving performance:** Ensure the razor cartridge is clean and free of hair buildup. Replace the razor cartridge if the blades are dull or the moisturizing strips are worn.
- **Skin irritation:** Always use the razor on wet skin with shaving cream or gel. Ensure the blades are sharp. If irritation persists, discontinue use.

Specifications

- **Model Number:** 0729
- **Power Source:** 1 AAA battery (included)
- **Razor Blades:** 5 Curve-Sensing blades
- **Trimmer Settings:** 4 customizable trim lengths
- **Special Features:** Waterproof, Compact, Hydra-Boost serum with Shea Butter and Hyaluronic Acid
- **Dimensions:** 0.63 x 3.54 x 7.95 inches
- **Weight:** 0.22 Pounds
- **Color:** Pink
- **Handle Material:** Plastic

Important Safety Information

- Always hold the razor and trimmer with a firm grip to prevent accidental slips.
- Be cautious when using the razor on sensitive skin to avoid nicks and cuts.
- Do not use the razor or trimmer while charging (if applicable).
- Keep the razor and trimmer clean and dry to prevent bacterial growth.
- Do not use the razor or trimmer near water or in the shower unless it is specifically designed for that purpose (this product is waterproof).
- Always replace the blade cartridge when it becomes dull to ensure safe and effective use.
- Always unplug or remove the battery before cleaning or storing the razor and trimmer.
- Always supervise children when using the razor and trimmer.
- **Battery Warning:** Keep away from small children. If swallowed, consult a doctor immediately. Battery can explode or leak if heated, disassembled, short-circuited, recharged, exposed to water, fire or high temperatures. Recycle properly.

Warranty and Support

For warranty information or product support, please visit the official Schick website or contact customer service. Refer to the packaging for specific contact details or visit www.schick.com or www.schick.ca.

Manufacturer: Schick / Edgewell Personal Care Brands LLC

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

Why is my Schick Hydro Silk TrimStyle Bikini Trimmer not cutting any hair even though it turns on and I am moving it against the direction of hair growth?

Based on the Schick Hydro Silk TrimStyle manual and common usage for this 2-in-1 tool, here are several reasons why the trimmer may not be effectively removing hair even if it is powered on:Hair...

Read full answer