Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Dyson 206031-01

Dyson Cinetic Big Ball Animal Upright Vacuum Cleaner User Manual

Model: 206031-01

Introduction

The Dyson Cinetic Big Ball Animal Upright Vacuum Cleaner is engineered for powerful cleaning across various floor types. Featuring revolutionary Dyson Cinetic science, it captures microscopic dust without clogging, ensuring no loss of suction. This model is designed for homes with pets, effectively removing dirt and hair from carpets and upholstery. It incorporates whole-machine HEPA filtration, expelling cleaner air.

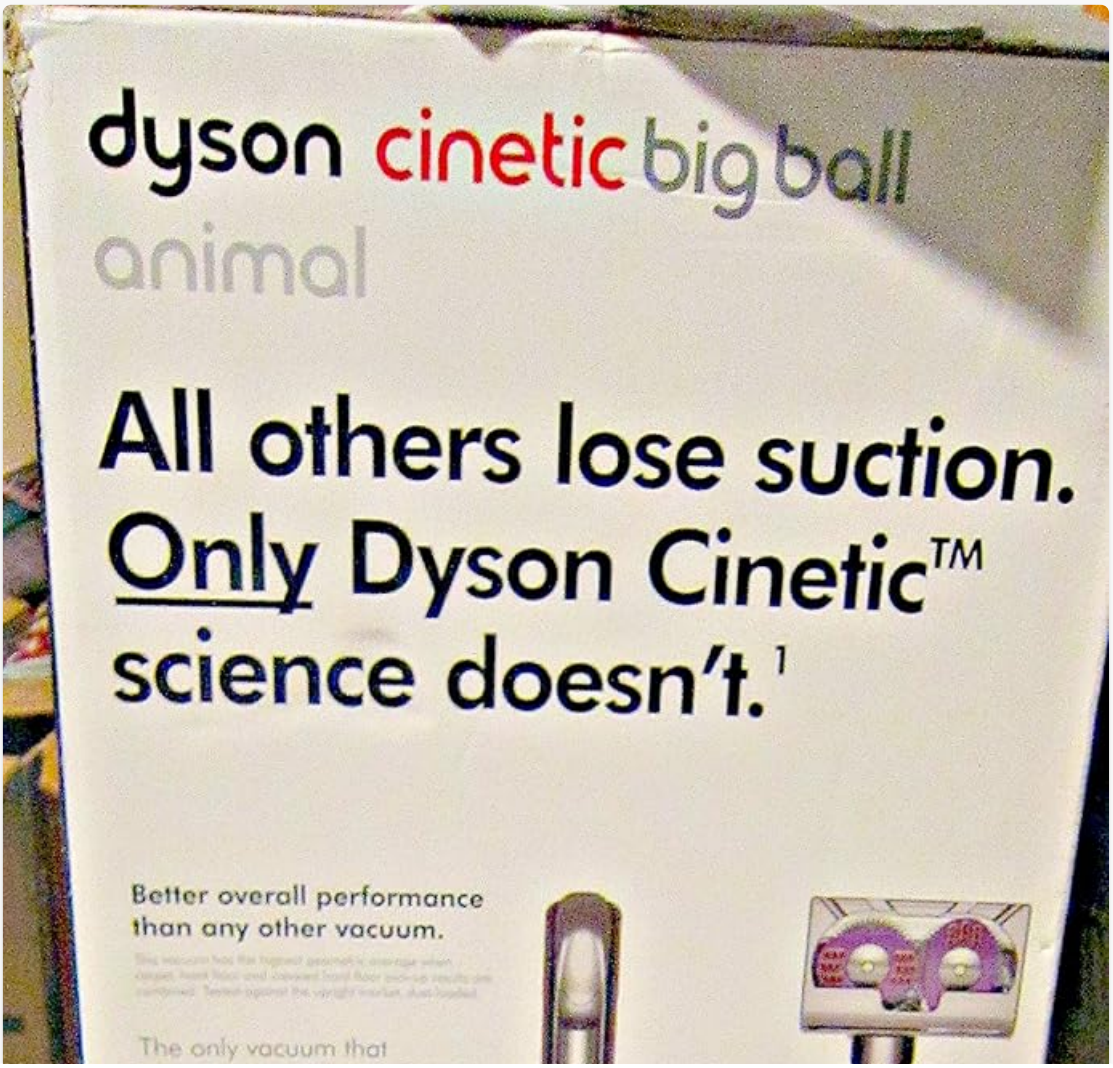




Figure 1: Dyson Cinetic Big Ball Animal Upright Vacuum Cleaner, Purple/Iron.

Key Features

- **Dyson Cinetic Science:** Captures microscopic dust that clogs other vacuums, ensuring no loss of suction.
- **No Dirty Filters to Wash or Replace:** Designed to eliminate the need for filter maintenance.
- **Self-Adjusting Cleaner Head:** Automatically seals in suction across carpets and hard floors.
- **Hygienic Bin Emptying:** Designed for easy and clean disposal of collected dirt.
- **Dyson Ball Technology:** Allows for easy steering and maneuverability around obstacles.
- **Whole-Machine HEPA Filtration:** Traps allergens and bacteria, expelling cleaner air.

Setup

The Dyson Cinetic Big Ball Animal vacuum requires some assembly upon arrival. Please refer to the included user guide for detailed, step-by-step instructions. Ensure all components are securely connected before first use.

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Handle Assembly:** Attach the main handle to the vacuum body until it clicks securely into place.
3. **Hose and Tools:** Connect the flexible hose to the designated port. Attach any included accessory tools to their storage clips on the vacuum.
4. **Power Cord:** Unwind the power cord and plug it into a suitable electrical outlet.

Figure 2: Product packaging highlighting key features and components.

Operating Instructions

The Dyson Cinetic Big Ball Animal vacuum is designed for intuitive operation across various floor types. Its unique ball technology allows for easy navigation around furniture and obstacles.

- **Power On/Off:** Press the red power button located on the main body of the vacuum to turn it on or off.
- **Reclining the Vacuum:** To begin vacuuming, place your foot on the cleaner head and pull the handle back. The vacuum will recline into the operating position.
- **Maneuverability:** Utilize the Dyson Ball technology by twisting your wrist to steer the cleaner head around obstacles and into tight spaces. The self-adjusting cleaner head automatically adapts to different floor types, from hard floors to carpets, without manual adjustment.
- **Using Attachments:** To use the hose and attachments, ensure the vacuum is in the upright locked position. Remove the wand from the main body and attach the desired tool. The hose extends to provide reach for cleaning stairs, upholstery, and high areas.

Your browser does not support the video tag.

Video 1: Official Dyson demonstration of the Cinetic Big Ball Animal vacuum's features and operation, including its maneuverability and dust capture capabilities.

Maintenance

The Dyson Cinetic Big Ball Animal vacuum is designed for minimal maintenance, primarily focusing on hygienic bin emptying. This model does not require filter washing or replacement due to its advanced Cinetic technology.

Emptying the Clear Bin

1. **Remove the Bin:** Press the red button located on the top of the clear bin to release it from the main body of the vacuum.
2. **Position for Emptying:** Hold the bin over a trash can.
3. **Release Dirt:** Press the red lever on the bin to open the base and release the dirt. The hygienic dirt ejector mechanism pushes out trapped dust and debris.
4. **Close the Bin:** Close the bin base firmly until it clicks into place.
5. **Reattach the Bin:** Align the clear bin with the vacuum body and push it firmly until it clicks securely.

Brush Bar Maintenance

Periodically check the brush bar for tangled hair or debris. While the Tangle-free Turbine tool is designed to minimize tangles, occasional inspection ensures optimal performance. Refer to the full user guide for instructions on accessing and cleaning the brush bar if necessary.

Troubleshooting

If you encounter any issues with your Dyson Cinetic Big Ball Animal vacuum, please refer to the following common troubleshooting steps:

- **No Power:** Ensure the power cord is securely plugged into a working electrical outlet. Check the circuit breaker if necessary.
- **Loss of Suction:** Although designed not to lose suction, check the clear bin for fullness and empty it if needed. Inspect the hose and cleaner head for any blockages.
- **Unusual Noises:** Turn off and unplug the vacuum immediately. Check for any foreign objects caught in the brush bar or hose.

For more detailed troubleshooting or persistent issues, please consult the comprehensive user guide or contact Dyson customer support.

Specifications

Feature	Detail
Brand	Dyson
Model Name	Cinetic Big Ball Animal
Model Number	206031-01
Color	Purple / Iron
Special Features	Corded, HEPA filtration, Bagless
Recommended Uses	Carpet
Product Dimensions	43.3 x 13.4 x 17.2 inches
Item Weight	19.18 pounds
Noise Level	80 dB
Assembly Required	Yes

Warranty and Support

The Dyson Cinetic Big Ball Animal Upright Vacuum Cleaner comes with a**5-year limited manufacturer's warranty** covering parts and labor. For warranty claims, technical support, or additional assistance, please refer to the official Dyson website or contact their customer service.

A comprehensive user guide in PDF format is available for download:Dyson Cinetic Big Ball Animal User Guide (PDF).

© 2024 Dyson. All rights reserved.
For more information, visit the Dyson Store on Amazon.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B00SMLJYC4

More documents and user manuals: **https://manuals.plus/**