TOOLPORT 6156

TOOLPORT 3x4m Party Tent Instruction Manual

Model: 6156

Introduction

This manual provides detailed instructions for the assembly, operation, and maintenance of your TOOLPORT 3x4m Party Tent. Designed for various outdoor events, this tent features a robust galvanized steel frame and a high-quality PVC 700 N canvas. Please read these instructions carefully before setting up and using the tent to ensure safe and proper installation and longevity of the product.



Image: The TOOLPORT 3x4m Party Tent in dark green, fully assembled in an outdoor setting.

Setup Instructions

The TOOLPORT Party Tent is designed for straightforward assembly. For optimal safety and efficiency, it is recommended that 3 to 4 people participate in the setup process, which typically takes between 1 hour 30 minutes and 2 hours.

Component Identification

All frame tubes are numbered to facilitate easy identification and correct assembly. Refer to the included assembly diagram for a visual guide.

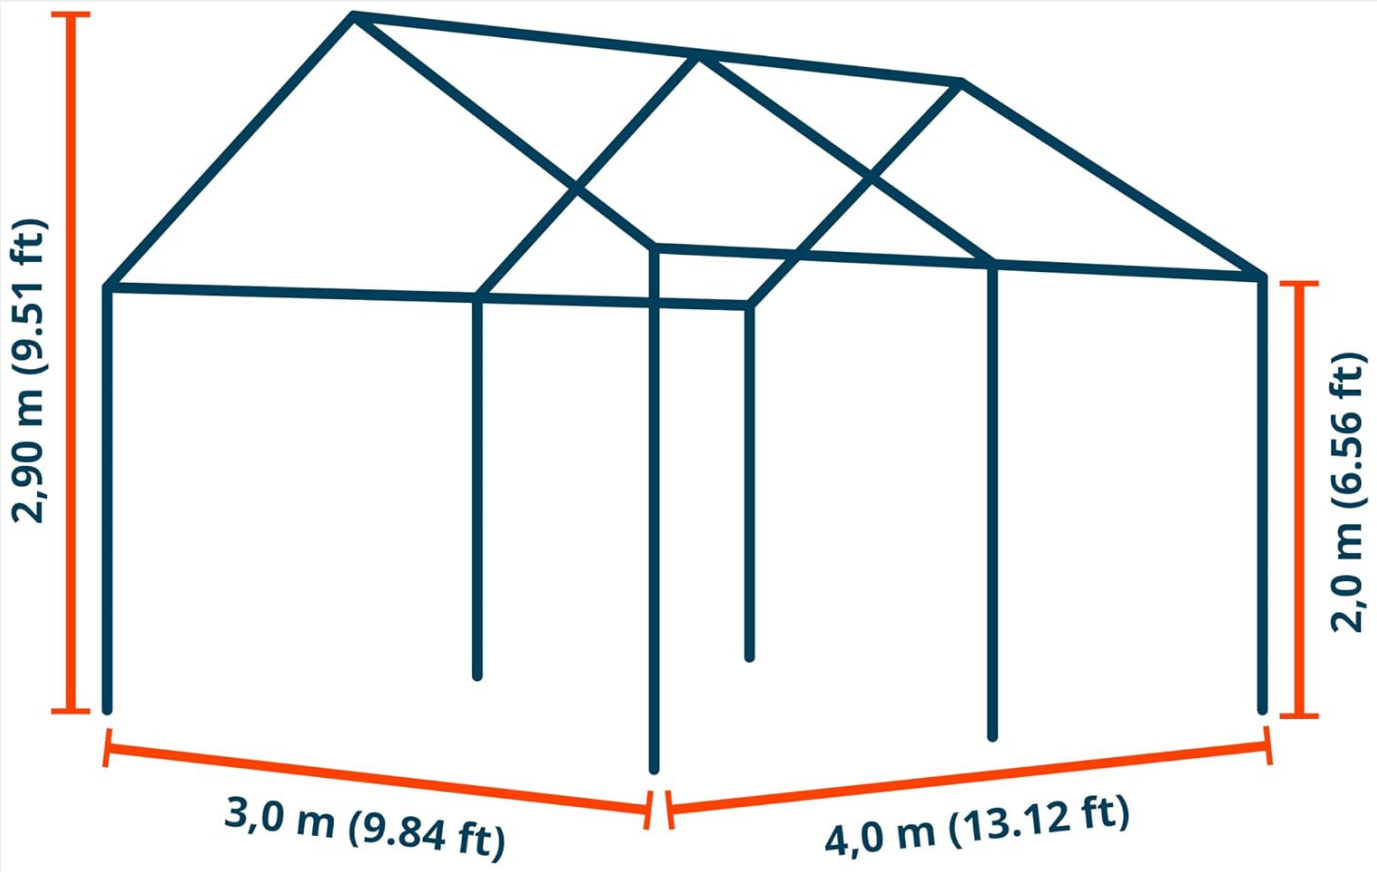


Image: A diagram illustrating the frame structure and key dimensions of the tent (3.0m width, 4.0m length, 2.0m side height, 2.90m peak height).

Frame Assembly

1. **Unpack Components:** Carefully unpack all parts and verify against the packing list. Ensure all galvanized steel tubes (approx. 38mm diameter) and connectors (approx. 42mm diameter) are present.
2. **Assemble Base Frame:** Connect the numbered base tubes using the corresponding connectors. The bolted assembly with wing screws ensures a strong and stable structure.
3. **Install Vertical Supports:** Attach the vertical support tubes to the base frame.
4. **Construct Roof Frame:** Assemble the roof frame sections on the ground, then lift and secure them to the vertical supports. Ensure all connections are tightly bolted.
5. **Attach Canvas:** Drape the single-piece PVC roof canvas over the assembled frame. The canvas is designed to fit snugly, covering all spaces to limit drafts.
6. **Install Side Panels and Gable Ends:** Attach the side panels and gable ends. The gable end features an entrance with a robust zipper. Side panels are equipped with wind deflectors for optimal air circulation.



Image: A close-up view of the galvanized steel frame connection, highlighting the bolted assembly for enhanced stability.

Ground Fixation

Secure the tent firmly to the ground using the provided pegs and guy ropes. This is crucial for stability, especially in windy conditions.

Operating Instructions

Your TOOLPORT Party Tent is designed for temporary outdoor use, ideal for receptions and events.

Ventilation and Temperature Control

The side panels are equipped with wind deflectors, which contribute to optimal air circulation and temperature regulation inside the tent. Adjust the side panels as needed to manage airflow.

Access

The tent features a gable entrance with a robust zipper for easy access. Ensure the zipper is fully closed when not in use to protect the interior from elements.



Image: An interior view of a white party tent, demonstrating the spaciousness and the open side panels for ventilation.

Maintenance

Proper maintenance will extend the lifespan of your TOOLPORT Party Tent.

Canvas Care

- The PVC 700 N canvas is 100% waterproof, tear-resistant, and designed to withstand temperatures between -20°C and +50°C.
- It features high UV protection (UV 50+).
- Clean the canvas with mild soap and water. Avoid harsh chemicals or abrasive cleaners that could damage the PVC material.
- Ensure the canvas is completely dry before folding and storing to prevent mold and mildew.

Frame Care

- The galvanized steel frame is protected against rust both internally and externally.
- Periodically inspect all bolted connections and tighten if necessary.
- Clean the frame with a damp cloth to remove dirt and debris.
- Store the frame in a dry place when not in use.

Troubleshooting

This section addresses common issues you might encounter.

- **Difficulty during assembly:** Ensure all tubes are correctly identified by their numbers and matched according to the assembly diagram. Verify that all bolts and wing screws are properly aligned and tightened.
- **Tent instability:** Check that all ground pegs are securely driven into the ground and guy ropes are taut. Ensure all frame connections are firm. Avoid setting up the tent in excessively strong winds without additional anchoring.
- **Water leakage:** While the PVC canvas is waterproof, ensure the roof canvas is properly tensioned and overlaps the side panels correctly to prevent water ingress. Check for any tears or damage to the canvas.

Specifications

Model Number	6156
Dimensions (L x W x H)	400 x 300 x 200 cm (4L x 3W x 2H meters)
Weight	58.5 kg
Canvas Material	Polychlorure de vinyle (PVC) 700 N
Frame Material	Galvanized Alloy Steel
Tube Diameter	Approx. 38mm
Connector Diameter	Approx. 42mm
Color	Dark Green
Water Resistance Level	Waterproof
UV Protection	UV 50+
Recommended Use	Parties, Receptions
Temperature Resistance	-20°C to +50°C

Warranty and Support

Information regarding specific warranty terms and customer support contacts is not available in this document. For warranty claims, technical assistance, or spare parts inquiries, please refer to the product packaging or contact TOOLPORT customer service directly through their official website or the retailer from whom the product was purchased.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question