Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Milliard B00WZNUN6G

Milliard Raclette Grill for Eight People

Instruction Manual - Model: B00WZNUN6G

1. Important Safety Instructions

Please read all instructions carefully before using the Milliard Raclette Grill. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- **Electrical Safety:** Ensure the voltage of your power outlet matches the rating on the appliance. Do not immerse the appliance, cord, or plug in water or other liquids.
- **Hot Surfaces:** The grill surfaces and heating elements become extremely hot during operation. Use oven mitts or heat-resistant gloves when handling hot parts. Allow the appliance to cool completely before cleaning or storing.
- **Children and Pets:** Keep the appliance out of reach of children and pets. Close supervision is necessary when the appliance is used near children.
- **Ventilation:** Use the appliance in a well-ventilated area. Do not operate near flammable materials.
- **Cord Care:** Do not let the power cord hang over the edge of a table or counter, or touch hot surfaces. Do not operate the appliance with a damaged cord or plug.
- **Intended Use:** This appliance is for household use only. Do not use outdoors.

2. Product Components

The Milliard Raclette Grill includes the following components:

- Main Heating Unit Base
- Granite Cooking Stone
- Reversible Non-Stick Grilling Surface (flat and ribbed sides)
- 8 Individual Raclette Pans (Coupelles)
- 8 Wooden Spatulas



Figure 2.1: The Milliard Raclette Grill showing its overall structure and approximate dimensions (18 inches wide, 9 inches deep, 5 inches high).

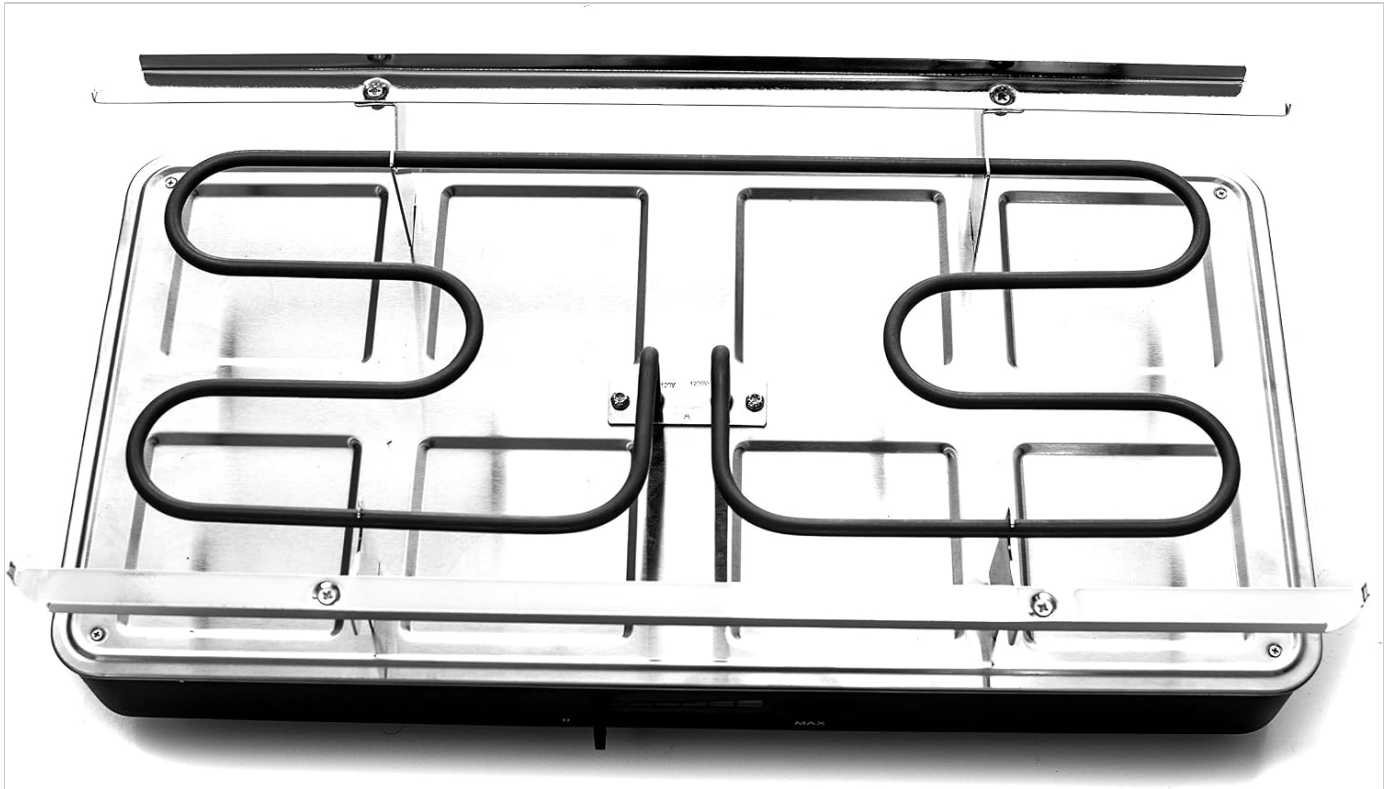


Figure 2.2: View of the heating element located beneath the cooking surface, responsible for heating both the top grill and the raclette pans.



Figure 2.3: A set of eight non-stick raclette pans, designed for melting cheese or cooking small portions of food.

3. Setup and First Use

3.1 Unpacking and Cleaning

1. Carefully remove all components from the packaging.
2. Wash the granite stone, reversible grilling surface, and raclette pans with warm, soapy water. Rinse thoroughly and dry completely.
3. Wipe the main heating unit base with a damp cloth. Do not immerse the base in water.

3.2 Assembly

1. Place the main heating unit base on a stable, heat-resistant surface. Ensure there is adequate ventilation around the unit.
2. Choose your desired cooking surface: either the granite stone or the reversible non-stick grilling surface. Place it securely on top of the heating element.
3. Ensure the raclette pans can slide easily into the slots beneath the heating element.

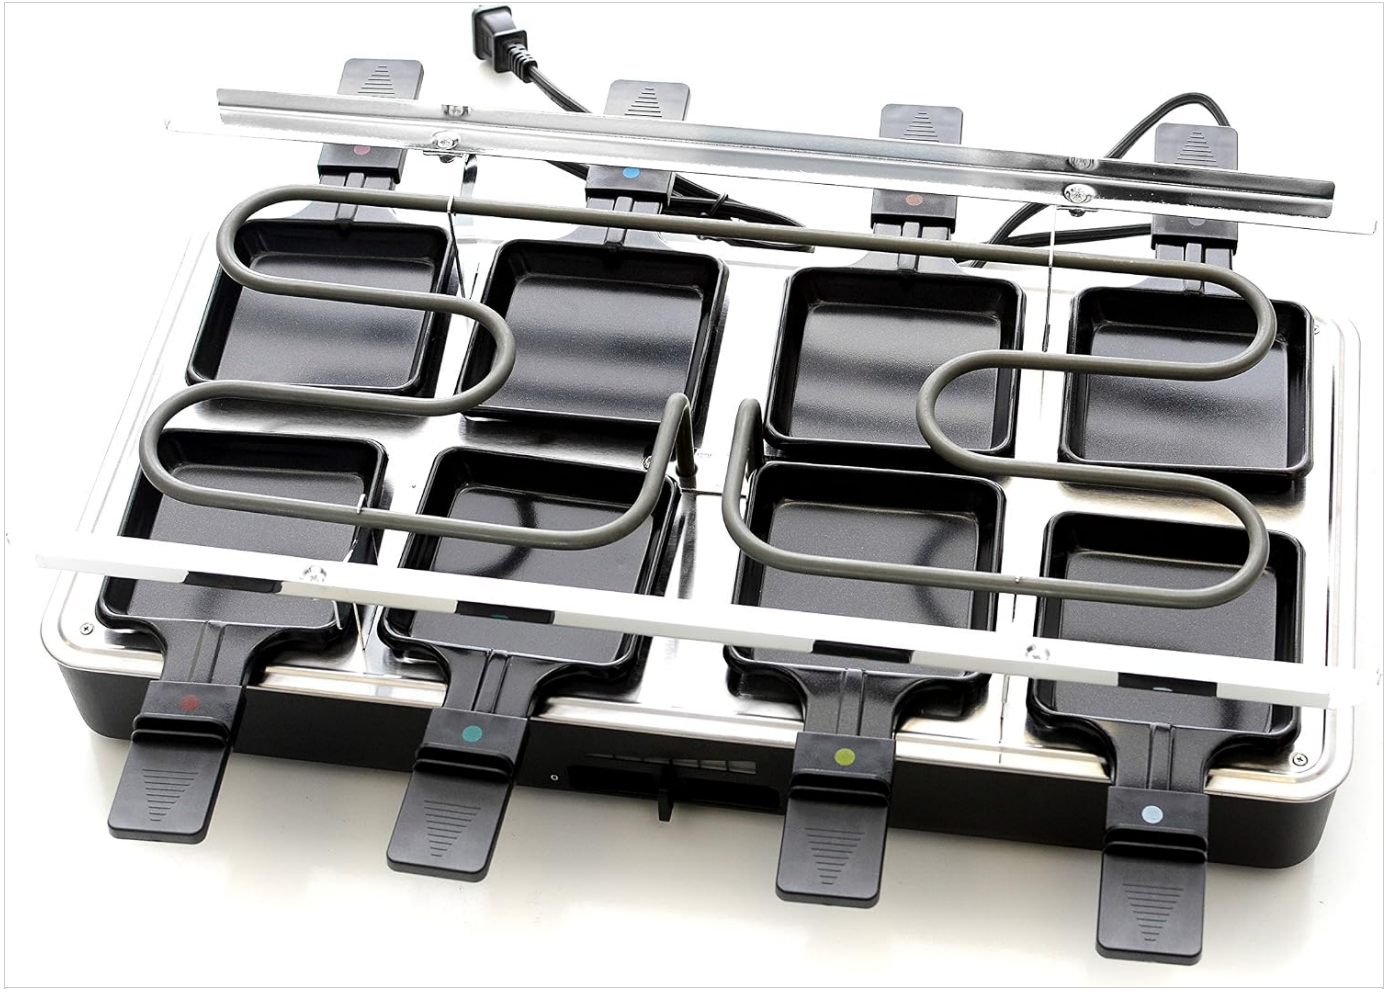


Figure 3.1: The raclette grill fully assembled, showing the top cooking surface and the individual raclette pans inserted below the heating element.

4. Operating Instructions

4.1 Preheating the Grill

1. Plug the power cord into a 120V 60Hz electrical outlet.
2. Turn the temperature control dial to the desired setting. The indicator light will illuminate.
3. Allow the grill to preheat for approximately 10-15 minutes. The granite stone may take longer to reach optimal temperature compared to the non-stick surface.

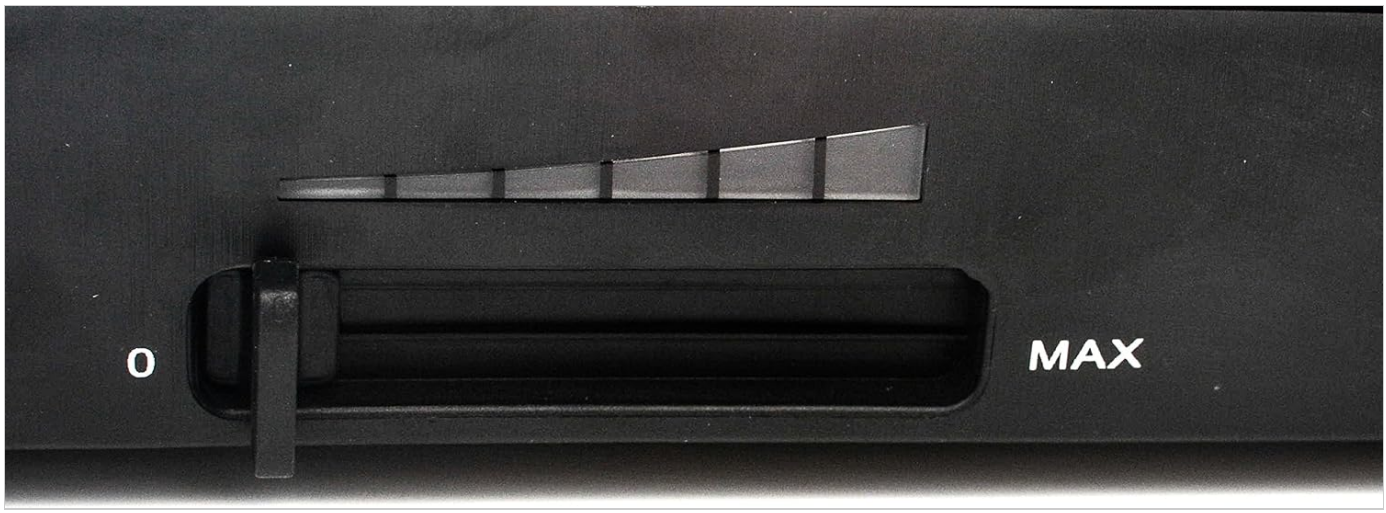


Figure 4.1: Close-up of the temperature control dial, ranging from '0' (off) to 'MAX' for adjustable heat settings.

4.2 Cooking on the Top Surface

- Lightly grease the cooking surface with a small amount of cooking oil or butter before placing food.
- Place thinly sliced meats, vegetables, or seafood directly onto the hot surface.
- Cook until desired doneness, turning food as needed.
- The granite stone heats slowly and evenly, ideal for delicate items. The non-stick surface heats faster and is suitable for searing.

4.3 Using the Raclette Pans

- Place slices of raclette cheese or other desired ingredients (e.g., pre-cooked vegetables, small pieces of bread) into the individual raclette pans.
- Slide the pans into the designated slots beneath the heating element.
- Monitor the cheese until it is melted and bubbly. Use the wooden spatulas to remove the melted cheese from the pans onto your plate.

5. Care and Maintenance

Proper care ensures the longevity and performance of your raclette grill.

1. **Cool Down:** Always unplug the appliance and allow it to cool completely before cleaning.
2. **Cleaning Surfaces:** The granite stone and reversible grilling surface are dishwasher safe. For stubborn residue, soak in warm, soapy water before washing.
3. **Cleaning Pans:** The non-stick raclette pans are dishwasher safe. Avoid using abrasive cleaners or metal utensils that could damage the non-stick coating.
4. **Base Unit:** Wipe the main heating unit base with a soft, damp cloth. Do not use abrasive cleaners or immerse the base in water.
5. **Storage:** Store the clean and dry appliance in a cool, dry place.

6. Troubleshooting

If you encounter issues with your raclette grill, refer to the following common problems and solutions:

- **Appliance does not turn on:**
  - Ensure the power cord is securely plugged into a working electrical outlet.
  - Check if the temperature control dial is set to an 'ON' position (not '0').
  - Verify that the power outlet is functional by testing it with another appliance.
- **Uneven heating:**
  - Allow sufficient preheating time, especially for the granite stone.
  - Ensure the cooking surface is properly seated on the heating element.
- **Food sticking to the surface:**
  - Ensure the cooking surface was lightly greased before use.
  - For the non-stick surface, avoid using metal utensils that can scratch the coating.

If the problem persists after attempting these solutions, please contact customer support.

7. Product Specifications

Feature	Detail
Brand	Milliard
Model Number	B00WZNUN6G
Special Features	8 Paddles, 8 Spatulas, Granite Grilling Stone, Reversible Grilling Surface
Color	Black
Material	Granite, Non-Stick Surface, Stainless Steel
Product Dimensions (D x W x H)	5"D x 18"W x 9.25"H
Wattage	1200W
Voltage	120 Volts
Number of Settings	6 (Temperature Dial)
GTIN / UPC	840985105747

8. Warranty and Customer Support

Milliard products are manufactured to high-quality standards. For information regarding your product's warranty, please refer to the warranty card included in your product packaging or visit the official Milliard website.

If you have any questions, require assistance, or need to report an issue with your Milliard Raclette Grill, please contact our customer support team:

- **Online Support:** Visit the Milliard website for FAQs and support resources.
- **Contact Information:** Refer to your product packaging or the Milliard website for current contact details (phone number, email).

© 2024 Milliard. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B00WZNUN6G

More documents and user manuals: **https://manuals.plus/**