Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Whirlpool 481250568027

Whirlpool Dishwasher Door Hinge Clip 481250568027 Instruction Manual

Model: 481250568027 | Brand: Whirlpool

1. Product Overview

This document provides essential information and general guidance for the installation and maintenance of the Whirlpool Dishwasher Door Hinge Clip, model number 481250568027. This component is a genuine replacement part designed to restore proper functionality to your dishwasher door mechanism.

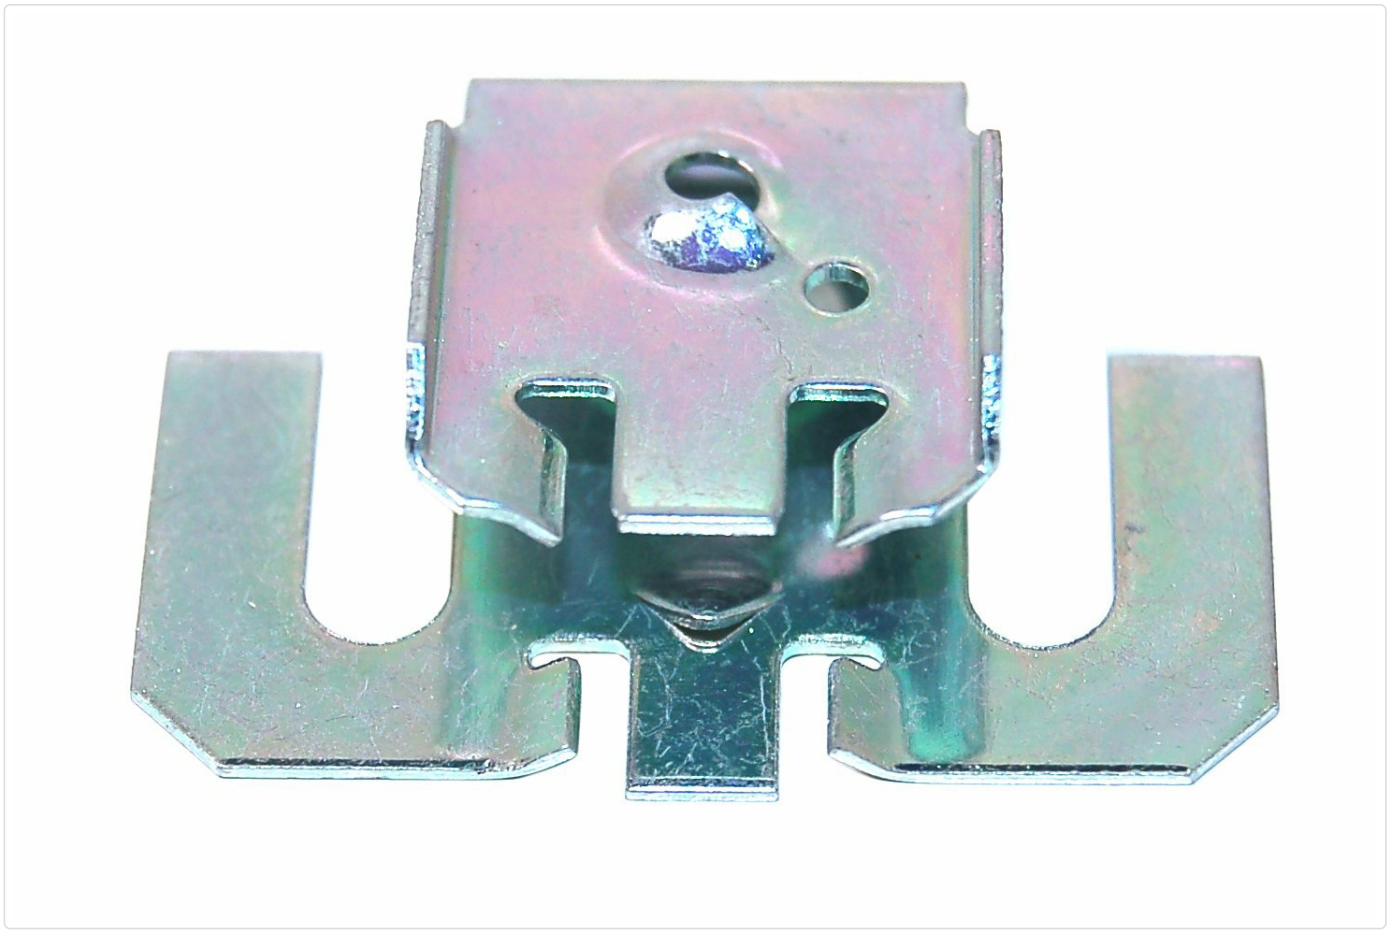


Figure 1: Whirlpool Dishwasher Door Hinge Clip (Model 481250568027)

This image displays the Whirlpool dishwasher door hinge clip, model 481250568027. It is a metallic component, typically

made of galvanized steel, featuring a central mechanism with a pivot point and two U-shaped arms designed to secure the dishwasher door.

2. Safety Information

Before attempting any repair or replacement, please read and understand all safety instructions. Failure to do so may result in personal injury or damage to the appliance.

- **Disconnect Power:** Always ensure the dishwasher is completely disconnected from the main power supply before beginning any work.
- **Professional Installation:** Repairs to gas appliances must only be carried out by Gas Safe registered technicians. While this part is for an electric appliance, if you are unsure about any aspect of the repair, consult a qualified appliance technician.
- **Protective Gear:** Wear appropriate personal protective equipment, such as gloves, to prevent cuts or scrapes from sharp edges.
- **Handle with Care:** Components may have sharp edges or pinch points. Handle the hinge clip and surrounding parts carefully.
- **Original Parts:** Use only genuine replacement parts to ensure proper fit and function.

3. Compatibility

The Whirlpool Dishwasher Door Hinge Clip (Model 481250568027) is a versatile replacement part compatible with a wide range of dishwashers from various manufacturers, including:

- Whirlpool
- Ignis
- CDA
- Ikea
- Firenzi
- Prima
- And many other models.

For a comprehensive list of compatible models, please refer to the product specifications on the original product listing or consult your appliance's service manual.

4. Installation / Setup

Replacing a dishwasher door hinge clip typically involves accessing the door mechanism. Due to variations in dishwasher designs, specific steps may differ. The following is general guidance:

1. **Preparation:** Ensure the dishwasher is unplugged from the power outlet. Clear the area around the dishwasher for safe access.
2. **Access the Hinge Mechanism:** This usually requires removing the outer door panel or accessing the side panels of the dishwasher. Refer to your specific dishwasher's service manual for precise instructions on how to safely open and access the door mechanism.
3. **Remove Old Clip:** Carefully detach the old or damaged hinge clip. Note its orientation and how it connects to the door and the main body of the dishwasher.

4. **Install New Clip:** Position the new Whirlpool 481250568027 hinge clip in the same orientation as the old one. Secure it firmly according to your dishwasher's design. Ensure all connections are tight and stable.
5. **Test Functionality:** Before reassembling the panels, gently test the door's movement to ensure the new hinge clip allows for smooth and proper opening and closing.
6. **Reassembly:** Reattach all panels and secure them. Plug the dishwasher back into the power outlet.

Note: *If you are uncomfortable performing this repair, it is recommended to seek assistance from a qualified appliance technician.*

5. Maintenance

The door hinge clip is a durable component designed for long-term use. Regular maintenance is generally not required for this specific part. However, to ensure the longevity of your dishwasher's door mechanism:

- Avoid excessive force when opening or closing the dishwasher door.
- Periodically inspect the door hinges for any signs of wear, corrosion, or loose connections.
- Keep the area around the door hinges clean and free from debris.

6. Troubleshooting

If you experience issues with your dishwasher door after replacing the hinge clip, consider the following:

- **Door Not Closing Properly:** Double-check that the hinge clip is correctly seated and secured. Ensure no other components are obstructing the door's path.
- **Door Feels Loose:** Verify that all screws and fasteners associated with the hinge mechanism are tightened appropriately.
- **Unusual Noises:** If you hear grinding or squeaking, ensure the hinge clip is not rubbing against other parts. Lubrication (if recommended by your dishwasher manufacturer) might be needed for other hinge components, but typically not for this clip itself.
- **Part Damage:** Inspect the new hinge clip for any manufacturing defects or damage that might have occurred during installation.

If problems persist, consult a professional appliance repair technician.

7. Specifications

Attribute	Detail
Brand	Whirlpool
Model Number	481250568027
Part Type	Dishwasher Door Hinge Clip
Package Dimensions	15.4 x 11.4 x 2.4 cm
Item Weight	60 g
ASIN	B00Y72X5A4

First Available Date	May 18, 2015

8. Warranty and Support

Information regarding specific warranty terms for this replacement part may vary depending on the retailer and your region. Please retain your proof of purchase for any warranty claims.

For technical support or further assistance, please contact the retailer where the part was purchased or refer to the official Whirlpool customer support channels available in your country.

Always refer to your dishwasher's original user manual or manufacturer's website for model-specific repair guides and safety warnings.

© 2026 Whirlpool. All rights reserved. This manual is for informational purposes only.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B00Y72X5A4

More documents and user manuals: **https://manuals.plus/**