Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Makita 345561-6

Makita 345561-6 Ruler Top Support Instruction Manual

Model: 345561-6

Introduction

This manual provides essential information for the proper use, installation, and maintenance of the Makita 345561-6 Ruler Top Support. This component is an O.E.M. authorized replacement part designed to fit various Makita models. Please read this manual thoroughly before installation and use to ensure safe and efficient operation.

Safety Information

Always observe the following safety precautions when handling or installing the Makita 345561-6 Ruler Top Support:

- Ensure the power tool is disconnected from its power source before attempting any installation or maintenance.
- Wear appropriate personal protective equipment (PPE), such as safety glasses and gloves, during installation.
- Refer to the main power tool's instruction manual for specific safety guidelines related to its operation.
- Keep small parts away from children.
- If the part appears damaged, do not install it. Contact an authorized service center.

Parts Included

The Makita 345561-6 Ruler Top Support package typically includes the following:

- 1 x Makita 345561-6 Ruler Top Support

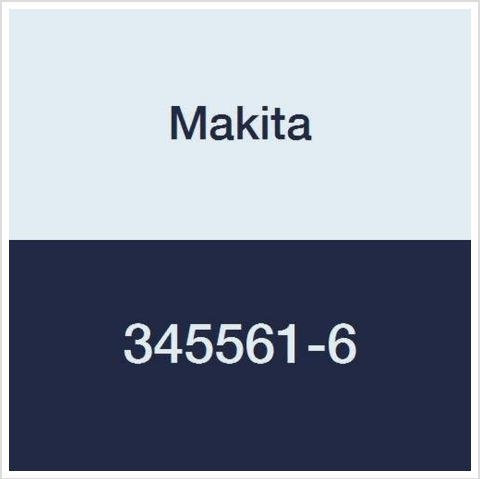


Image: The Makita 345561-6 Ruler Top Support, showing its general shape and design. This is an O.E.M. authorized part.

Installation Instructions

Follow these steps to properly install the Makita 345561-6 Ruler Top Support:

1. **Power Disconnection:** Before beginning, ensure the power tool (e.g., miter saw) is completely disconnected from its power source to prevent accidental startup.
2. **Identify Mounting Location:** Locate the designated mounting area for the ruler top support on your specific Makita power tool. Refer to your power tool's original manual if unsure.
3. **Remove Old Part (if applicable):** If replacing an existing part, carefully remove the old ruler top support and any associated fasteners. Keep track of all screws or bolts.
4. **Position New Part:** Align the Makita 345561-6 Ruler Top Support with the mounting holes on the power tool.
5. **Secure Part:** Use the appropriate fasteners (not included with this part, typically reused from the original tool or specified in the tool's manual) to securely attach the new ruler top support. Do not overtighten.
6. **Verify Installation:** Gently test the stability of the installed part to ensure it is firmly in place and does not wobble.
7. **Reconnect Power:** Once installation is complete and verified, you may reconnect the power tool to its power source.

Operation

The Makita 345561-6 Ruler Top Support is a static component designed to provide stable support for material being cut or measured on compatible Makita power tools. Its function is passive, providing a stable surface or guide.

- Ensure the support is clean and free of debris before each use to maintain accuracy.
- Always position your workpiece firmly against the support for precise cuts or measurements.
- Do not apply excessive force or weight to the support beyond the tool's intended capacity.

Maintenance

Regular maintenance ensures the longevity and proper function of your Makita 345561-6 Ruler Top Support:

- **Cleaning:** Wipe the support clean with a dry or slightly damp cloth after each use to remove dust, sawdust, or other debris. Avoid harsh chemicals that may damage the material.
- **Inspection:** Periodically inspect the support for any signs of wear, cracks, or damage. Ensure it remains securely fastened to the power tool.
- **Storage:** When not in use, store the power tool with the installed support in a clean, dry environment, away from extreme temperatures and direct sunlight.

Troubleshooting

This section addresses common issues you might encounter with the Makita 345561-6 Ruler Top Support.

Problem	Possible Cause	Solution
Support is loose or wobbly.	Fasteners are not tightened sufficiently.	Ensure all mounting fasteners are securely tightened. Do not overtighten.
Support appears damaged (cracked, bent).	Physical impact or excessive force.	The part is likely irreparable. Replace with a new Makita 345561-6 Ruler Top Support.
Difficulty installing the part.	Incorrect alignment or incompatible model.	Double-check alignment with mounting holes. Verify your power tool model is compatible with part number 345561-6.

Specifications

Attribute	Detail
Part Number	345561-6
Manufacturer	Makita
Item Weight	2.36 ounces
Product Dimensions	1 x 1 x 1 inches
Item Package Quantity	1
Batteries Required?	No

Warranty and Support

As an O.E.M. authorized replacement part, the Makita 345561-6 Ruler Top Support is typically covered under the warranty terms of the original Makita power tool it is intended for, or by a limited warranty from Makita for replacement parts. Please retain your purchase receipt.
For specific warranty details or technical support, please contact Makita customer service or visit their official website. Ensure you have your product model number (345561-6) and the model number of the power tool it is used with readily available.
Makita Official Website: www.makitatools.com

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B010G7DV7U

More documents and user manuals: **https://manuals.plus/**