Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

AMERICAN PHOENIX P101

AMERICAN PHOENIX Party Tent 16x32 Instruction Manual

Model: P101

Introduction

Thank you for choosing the AMERICAN PHOENIX Party Tent 16x32. This heavy-duty commercial canopy is designed for various outdoor events, including parties, weddings, and other gatherings. Constructed with a robust galvanized steel frame and durable PE fabric, it offers reliable shelter and protection. This manual provides detailed instructions for the safe and efficient setup, operation, and maintenance of your tent.



Figure 1: Fully assembled AMERICAN PHOENIX 16x32 Party Tent.

Specifications

Feature	Detail
Model Number	P101
Dimensions (L x W x H)	384" x 192" x 120" (32 ft x 16 ft x 10 ft)
Frame Material	Galvanized Steel (38mm tubes), Metal, Alloy Steel
Cover Material	Heavy-duty 180g PE + UV (Polyethylene)
Water Resistance	Waterproof
UV Protection	99%
Item Weight	245 Pounds
Assembly Required	Yes

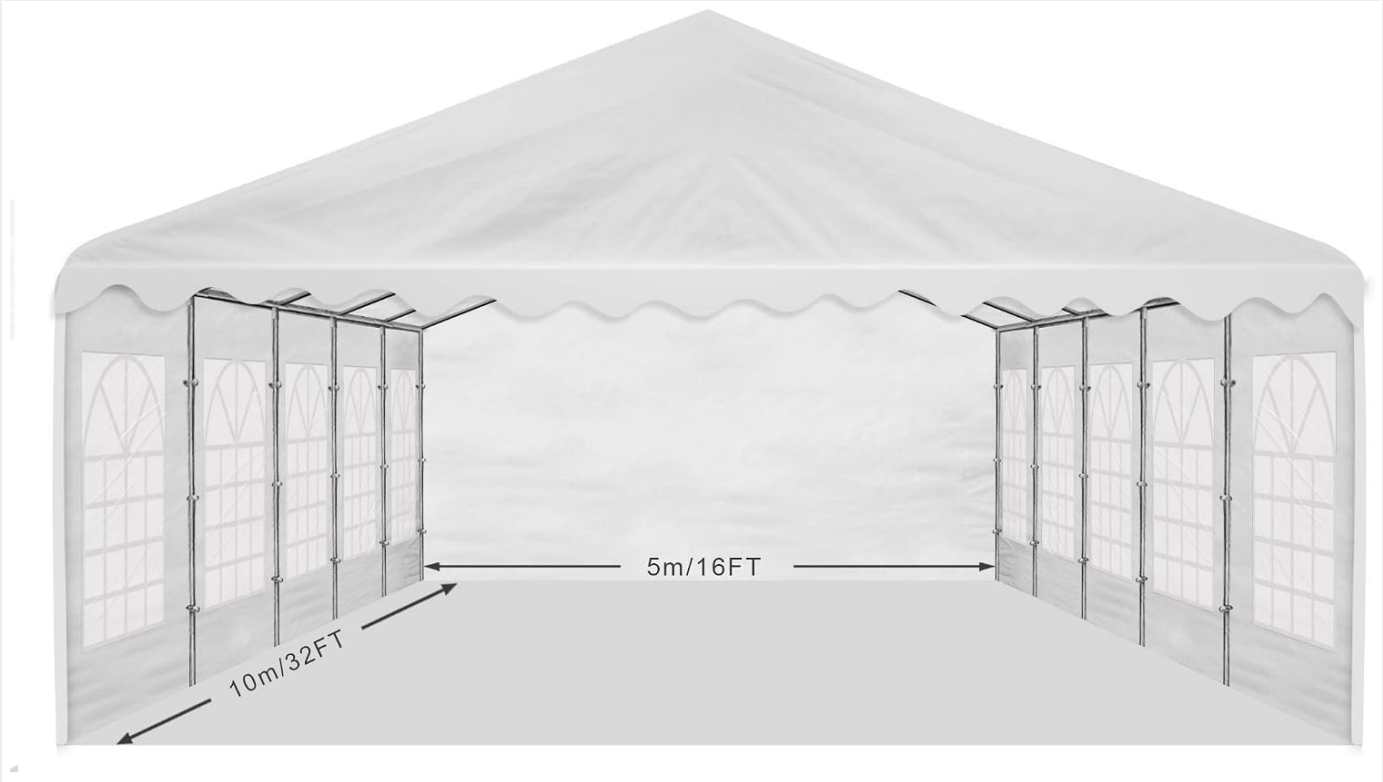


Figure 2: Key dimensions of the Party Tent.

Setup Instructions

Assembly of the AMERICAN PHOENIX Party Tent requires at least 4-6 people due to its size and weight. Ensure you have ample clear space for assembly. It is recommended to lay out all parts and identify them before beginning.

1. Unpack and Verify Components

Carefully unpack all boxes. Verify that all components listed in the packing list (not provided in this manual, refer to your product packaging) are present and undamaged. Components typically include:

- Galvanized Steel Poles (various lengths and types for roof, legs, and connectors)
- Metal Connectors (joints for poles)

- Heavy-duty PE Roof Cover
- Heavy-duty PE Sidewalls (with and without windows)
- Ropes and Stakes for securing

2. Assemble the Roof Frame

Begin by assembling the top frame of the tent. Connect the shorter roof poles using the appropriate connectors to form the rectangular roof structure. Ensure all connections are secure. The frame is designed with durable metal connectors and metal bases for stability.

3. Attach the Legs

Once the roof frame is complete, attach the vertical leg poles to the corner and intermediate connectors. Gradually raise the structure, ensuring it remains stable. It is crucial to have multiple people lifting simultaneously to prevent bending or damage to the poles.

4. Install the Roof Cover

Drape the heavy-duty PE roof cover over the assembled frame. Align the edges and corners, then secure it to the frame using the integrated fasteners or ties. Ensure the cover is taut to prevent water pooling.

5. Attach Sidewalls

Attach the sidewalls to the frame. The tent includes individual wall panels, some with windows, which can be easily removed for airflow or kept closed for protection. Secure them using the provided attachments (e.g., Velcro, ties, or zippers).



Figure 3: Tent with sidewalls partially open, demonstrating flexibility.

6. Secure the Tent

For maximum stability and safety, especially in windy conditions, secure the tent to the ground using the provided ropes and stakes. Anchor all leg bases and guy ropes firmly into the ground. **Warning: Do not use the tent in extreme weather conditions, including heavy winds, snow, or thunderstorms.**

Operating Instructions

The AMERICAN PHOENIX Party Tent is designed for temporary outdoor use. Proper operation ensures longevity and safety.

- **Ventilation:** Utilize the removable sidewalls to adjust airflow and temperature inside the tent. Open windows or remove panels as needed.
- **Weather Conditions:** Monitor weather forecasts. While the tent is waterproof and UV protected, it is not designed for severe weather. Disassemble the tent if strong winds, heavy rain, or snow are anticipated.

- **Heating/Cooling:** If using external heating or cooling units, ensure proper ventilation and maintain a safe distance from tent fabric to prevent fire hazards. Never use open flames inside the tent.
- **Capacity:** Do not overload the tent with excessive weight or people beyond its structural capacity.

Maintenance

Regular maintenance will extend the life of your party tent.

- **Cleaning:** Clean the PE fabric with mild soap and water. Do not use harsh chemicals or abrasive cleaners, as they can damage the material. Rinse thoroughly and allow to air dry completely before storage.
- **Frame Inspection:** Periodically inspect the galvanized steel frame for any signs of rust, bending, or damage. Ensure all connections remain tight. Replace any damaged parts immediately.
- **Storage:** When not in use, disassemble the tent and store all components in a dry, cool place, away from direct sunlight and extreme temperatures. Ensure fabric is completely dry to prevent mold and mildew.
- **Repairs:** Small tears in the fabric can be repaired with a suitable patch kit. For significant damage, contact customer support.

Troubleshooting

Problem	Possible Cause	Solution
Tent unstable or wobbly	Loose connections; insufficient anchoring; uneven ground.	Ensure all pole connections are fully inserted and tight. Use all provided stakes and ropes to anchor the tent securely. Choose a level setup surface.
Water pooling on roof	Roof cover not taut; improper frame assembly.	Re-adjust the roof cover to ensure it is stretched tightly across the frame. Verify that the roof frame is assembled correctly and all poles are at the correct angles.
Difficulty fitting cover/sidewalls	Incorrect frame dimensions; fabric shrinkage/expansion.	Double-check all frame measurements against the specifications. Ensure the tent is assembled on a flat surface. Fabric may be stiff when new; gentle stretching may be required.
Missing or damaged parts	Shipping damage; packaging error.	Contact AMERICAN PHOENIX customer support immediately with your purchase details and a description of the missing/damaged parts.

Warranty Information

AMERICAN PHOENIX products are manufactured to high-quality standards. For specific warranty details regarding your Party Tent, please refer to the warranty card included with your product packaging or visit the official AMERICAN PHOENIX website. The warranty typically covers manufacturing defects under normal use conditions. Damage due to improper setup, extreme weather, misuse, or lack of maintenance is generally not covered.

Customer Support

If you have any questions, require assistance with assembly, or need to report missing/damaged parts, please contact AMERICAN PHOENIX customer support.

Online Support: Visit the AMERICAN PHOENIX Store on Amazon for FAQs and contact options.

Model Number: P101

UPC: 638339982423, 638339982409

© 2024 AMERICAN PHOENIX. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B012XVRZSI

More documents and user manuals: **https://manuals.plus/**