Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Jaclo T686-trim-pch

Jaclo Astor T686-trim-pch Cross V/C Trim Installation and User Manual

Model: T686-trim-pch | Brand: Jaclo

1. Introduction

This manual provides detailed instructions for the safe installation, proper operation, and routine maintenance of your Jaclo Astor T686-trim-pch Cross V/C Trim. Please read this manual thoroughly before beginning installation or use to ensure correct procedures and optimal performance. Retain this manual for future reference.

2. Safety Information

- Always turn off the main water supply before attempting any installation or maintenance.
- Wear appropriate personal protective equipment (PPE) such as safety glasses and gloves during installation.
- If you are unsure about any part of the installation process, consult a qualified plumber.
- Ensure all connections are secure and watertight to prevent leaks.
- Do not use abrasive cleaners or harsh chemicals on the polished chrome finish, as this may cause damage.

3. Package Contents

Verify that all components are present and undamaged before proceeding with installation.

- Astor Cross V/C Trim (Polished Chrome)
- Mounting hardware (screws, escutcheon, handle)
- Installation Guide (this document)

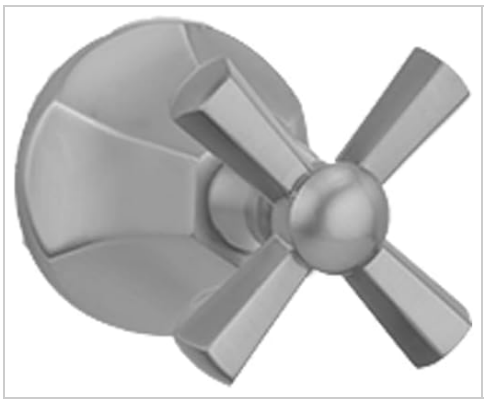


Figure 1: Jaclo Astor Cross V/C Trim. This image displays the polished chrome trim kit, featuring a round base plate and a cross-shaped handle for water control.

4. Setup and Installation

This trim kit is designed to be installed over a compatible Jaclo valve (sold separately). Refer to the valve's instruction manual for rough-in dimensions and specific valve installation procedures.

Required Tools (Not Included):

- Phillips head screwdriver
- Adjustable wrench
- Sealant tape (Teflon tape)
- Soft cloth

Installation Steps:

1. **Prepare the Valve:** Ensure the rough-in valve body is securely installed in the wall and all plumbing connections are complete and tested for leaks. The valve should be flush with the finished wall surface.
2. **Install Escutcheon:** Place the escutcheon (base plate) over the valve body, aligning any mounting holes with those on the valve. Secure the escutcheon to the valve body using the provided screws. Do not overtighten.
3. **Install Handle Adapter (if applicable):** Depending on your valve model, you may need to install a handle adapter onto the valve stem. Refer to your valve's manual for specific instructions.
4. **Attach Handle:** Slide the cross handle onto the valve stem or handle adapter. Secure the handle with the set screw, typically located on the underside of the handle. Use a small hex key (often included with the valve or trim) to tighten the set screw.
5. **Test Operation:** Slowly turn on the main water supply. Check for any leaks around the escutcheon and handle connections. Operate the handle to ensure smooth turning and proper water flow control.

5. Operating Instructions

The Jaclo Astor Cross V/C Trim is designed for simple operation.

- **Turning Water On/Off:** Rotate the cross handle clockwise to turn off the water flow and counter-clockwise to turn on the water flow.
- **Adjusting Flow:** The handle allows for precise control over the water flow rate.

6. Maintenance

Proper care will preserve the finish and functionality of your Jaclo trim.

- **Cleaning:** Clean the polished chrome finish with a soft, damp cloth. For stubborn spots, use a mild soap solution and immediately rinse thoroughly with water, then dry with a soft cloth.
- **Avoid:** Do not use abrasive cleaners, scouring pads, ammonia-based cleaners, or any harsh chemicals, as these can damage the finish.
- **Periodic Checks:** Periodically check all connections for tightness and signs of leaks.

7. Troubleshooting

Problem	Possible Cause	Solution
Water leaks from handle base.	Loose escutcheon or handle connection.	Ensure escutcheon screws and handle set screw are tightened. Check for damaged O-rings or gaskets within the valve (refer to valve manual).
Handle is stiff or difficult to turn.	Mineral buildup or internal valve issue.	Clean around the handle base. If the issue persists, the problem is likely with the internal valve cartridge (refer to valve manual for service).
No water flow or low water pressure.	Main water supply off, clogged aerator (if applicable), or valve issue.	Check main water supply. This trim kit does not directly affect water pressure; refer to the valve manual or consult a plumber for flow issues.

8. Specifications

- **Model:** T686-trim-pch
- **Brand:** Jaclo
- **Finish:** Polished Chrome
- **Item Weight:** 0.16 ounces
- **Product Dimensions:** 2.75 x 3 x 2.25 inches
- **Manufacturer:** Standard Plumbing Supply
- **Country of Origin:** United States

9. Warranty and Support

For warranty information or technical support, please contact Jaclo customer service directly. Details can typically be found on the manufacturer's official website or original product packaging. Please have your model number (T686-trim-pch) and purchase date available when contacting support.
Jaclo Official Website: www.jaclo.com

© 2023 Jaclo. All rights reserved. Information in this manual is subject to change without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0141FZEDM

More documents and user manuals: **https://manuals.plus/**