Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Zippo 28982

Zippo 60.001.600 Harley Davidson Collection Lighter User Manual

Model: 28982

Introduction

This manual provides comprehensive instructions for the safe and effective use, maintenance, and troubleshooting of your Zippo 60.001.600 Harley Davidson Collection Lighter. Please read this manual thoroughly before operating your lighter to ensure optimal performance and longevity.

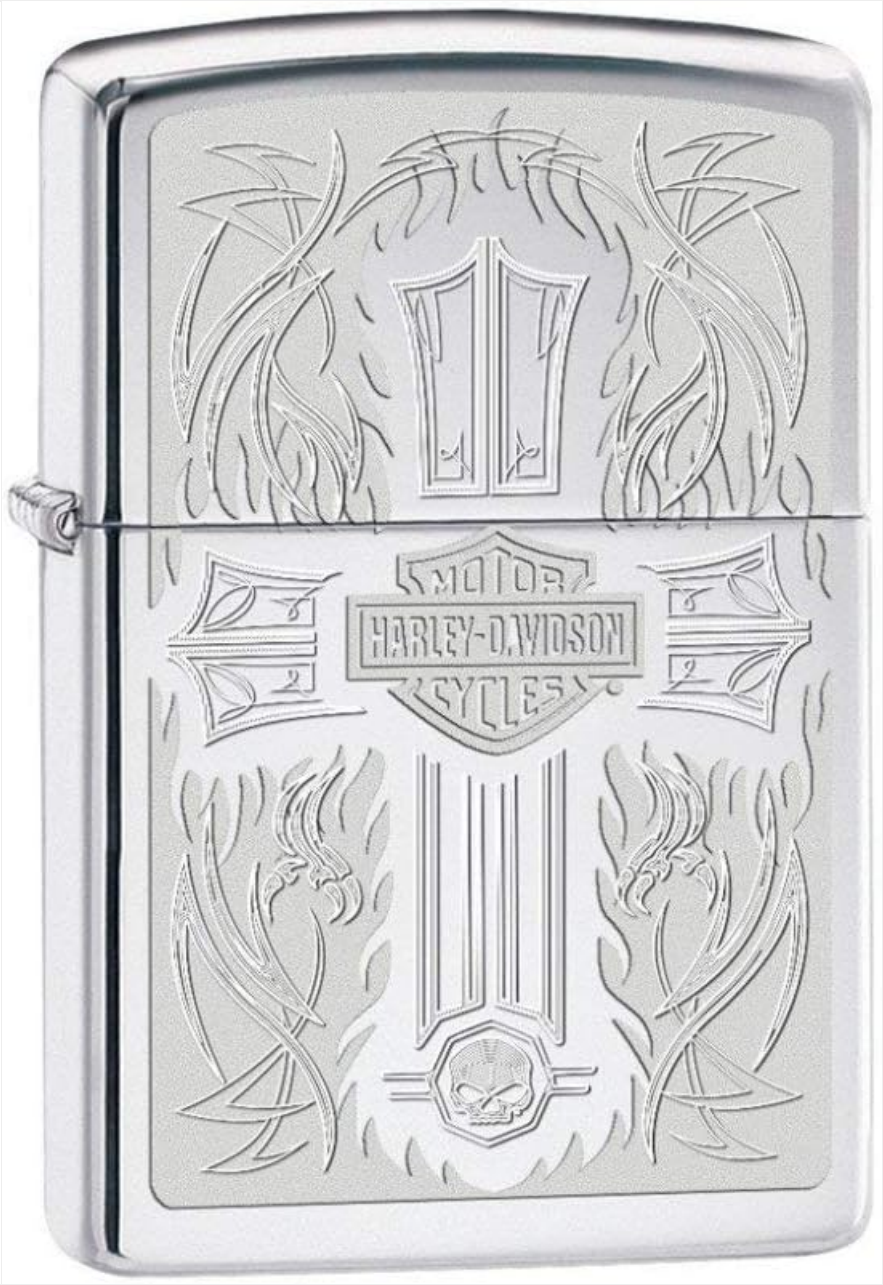


Image: Front view of the Zippo 60.001.600 Harley Davidson Collection Lighter in its closed position, showcasing the high-gloss chrome finish and engraved design.

Important Safety Information

Always handle your Zippo lighter with care. Keep out of reach of children. Do not expose to temperatures above 50°C (122°F) or prolonged sunlight. Use only genuine Zippo lighter fluid and flints.

- Keep away from face and clothing when igniting.
- Do not puncture or incinerate.
- Ensure lighter is extinguished before storing.

Setup and First Use

1. Filling with Lighter Fluid

1. Remove the inner unit from the lighter case.
2. Lift the felt pad on the bottom of the inner unit to expose the packing material.

3. Slowly saturate the packing material with Zippo lighter fluid until the fluid reaches the top of the packing. Do not overfill.
4. Replace the felt pad and insert the inner unit back into the case.
5. Wipe any excess fluid from the lighter and your hands before igniting.



Image: The Zippo lighter with its lid open, revealing the inner unit and the wick. This view is typical when preparing to fill the lighter with fluid.

Operating Instructions

Igniting the Lighter

1. Open the lighter lid to a 90-degree angle.

2. With your thumb, firmly strike the flint wheel downwards against the flint. This action will create a spark and ignite the wick.
3. Once ignited, close the lid to extinguish the flame. The Zippo lighter is designed to only stay lit when the lid is open.



Image: The Zippo lighter with its lid open and the wick ignited, showing a steady flame. This demonstrates the lighter in active use.

Maintenance

1. Replacing the Flint

- Remove the inner unit from the case.

- Unscrew the flint spring from the bottom of the inner unit.
- Remove the old flint and insert a new Zippo flint.
- Replace the flint spring and tighten it securely.

2. Replacing the Wick

- Remove the inner unit and all packing material.
- Pull the old wick out through the top of the chimney.
- Insert a new Zippo wick through the chimney, bending it back and forth through the packing material to ensure good contact.
- Trim the wick even with the top of the chimney.



Image: An open Zippo lighter, with a clear view of the internal components including the wick, flint wheel, and fuel chamber. This image is

useful for understanding maintenance procedures.

Troubleshooting

Problem	Possible Cause	Solution
Lighter won't light	Low fluid, worn flint, or short wick.	Refill with fluid, replace flint, or adjust/replace wick.
Flame is weak or inconsistent	Low fluid, dirty wick, or improper wick placement.	Refill fluid, clean or trim wick, ensure wick is properly threaded.
Lighter leaks fluid	Overfilled, or inner unit not seated correctly.	Do not overfill, ensure inner unit is fully inserted.

Specifications

Model: 28982

Brand: Zippo

Collection: Harley Davidson Collection Spring 2016

Finish: High-Gloss Chrome (Stainless Steel Look)

Material: Brass

Dimensions: Approximately 3.81 x 1.27 x 5.72 cm (1.5 x 0.5 x 2.25 inches)

Weight: Approximately 20 grams (0.7 ounces)

Fuel Type: Zippo Premium Lighter Fluid (sold separately)

Origin: Made in USA

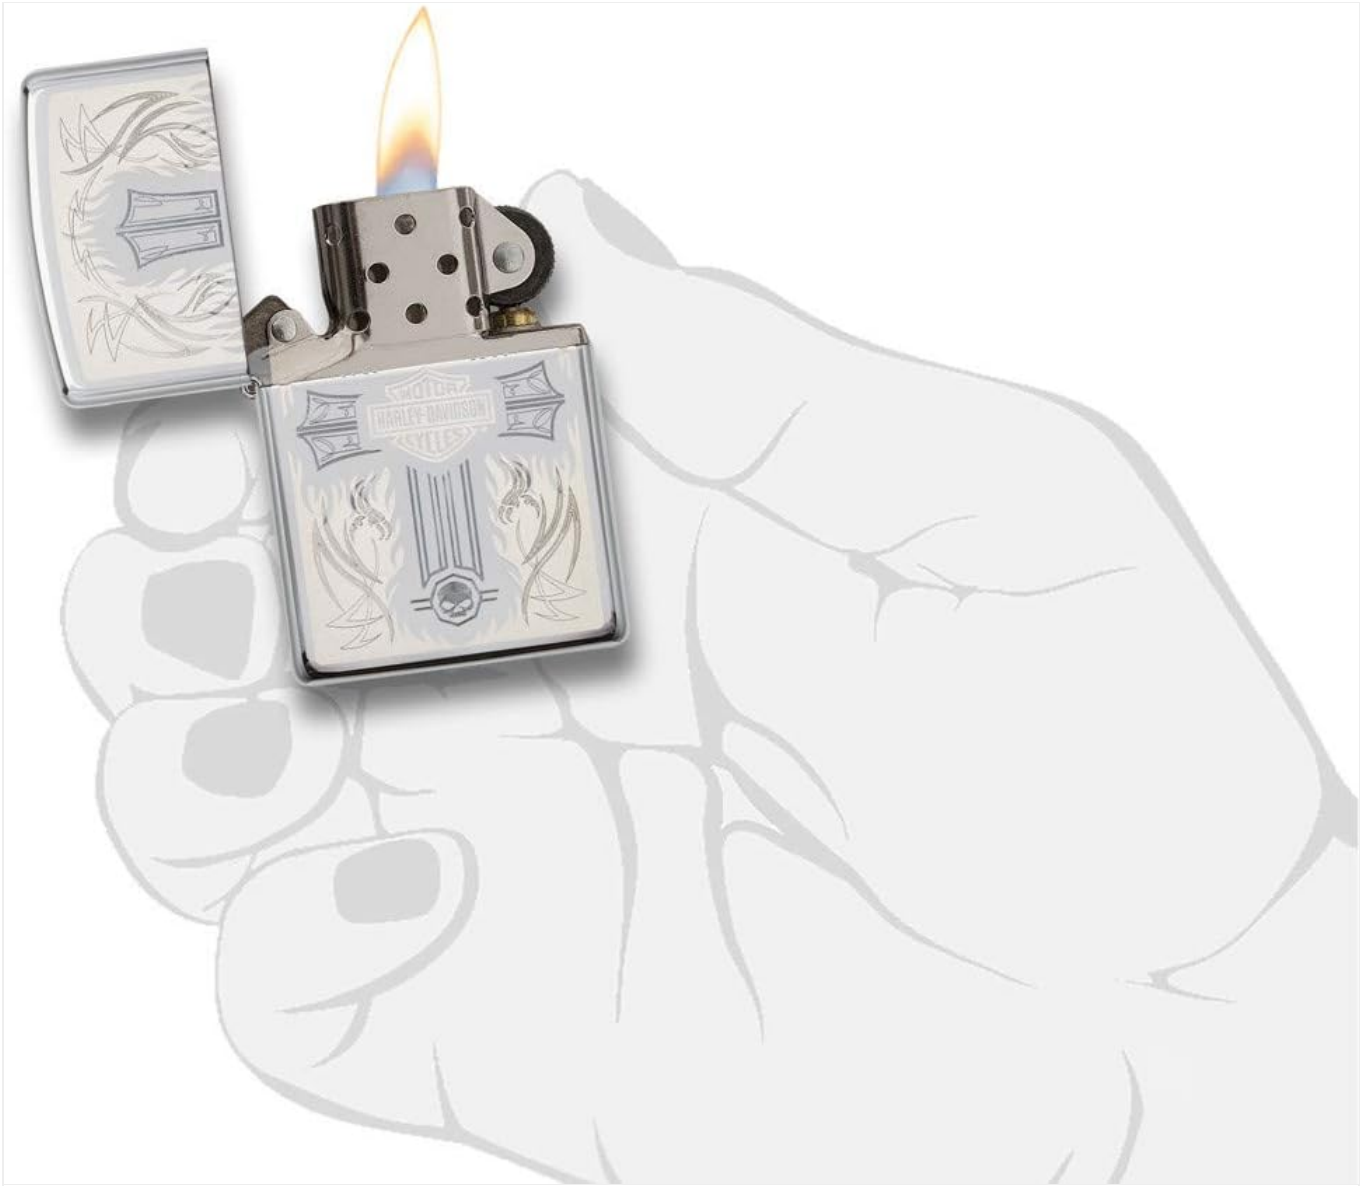


Image: The Zippo lighter held in a hand, providing a sense of its actual size and portability. This image helps visualize the product's dimensions.

Warranty and Support

Zippo lighters are backed by a famous lifetime guarantee: "It works or we fix it free.™" This warranty covers the mechanical function of your Zippo lighter. Damage to the finish is not covered.
For warranty service or technical support, please visit the official Zippo website or contact their customer service department. Keep your lighter's model number (28982) handy when seeking support.



Image: The Zippo lighter displayed alongside its original packaging, which features Harley Davidson branding. This image shows the product as it would be received, including its official box.

© 2024 Zippo Manufacturing Company. All rights reserved.
For more information, visit www.zippo.com

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B014U1EXAM

More documents and user manuals: **https://manuals.plus/**