AEG L87695NWD

AEG L87695NWD Washer Dryer User Manual

Model: L87695NWD | Brand: AEG

Introduction

This user manual provides essential information for the safe and efficient operation of your AEG L87695NWD Washer Dryer. Please read it thoroughly before first use and keep it for future reference. This appliance combines washing and drying functions, offering convenience and space-saving benefits. Key features include the LogiControl LC-Display, Aqua-Alarm system, and Auto and Time Drying options.

1. Important Safety Information

Always adhere to the following safety guidelines to prevent injury or damage to the appliance.

General Safety

- Ensure the appliance is installed by a qualified person.
- Do not allow children to play with or near the appliance.
- Keep pets away from the appliance.

Electrical Safety

- Connect the appliance to a properly grounded electrical outlet (230 Volt).
- Do not use extension cords or multiple adapters.
- Always unplug the appliance before cleaning or maintenance.

Water Safety

- Ensure water hoses are securely connected to prevent leaks.
- The appliance is equipped with an Aqua-Alarm system to detect water leaks.

Child Safety

- Supervise children to ensure they do not tamper with the controls.
- Keep packaging materials out of reach of children.

2. Installation and Setup

Proper installation is crucial for the performance and longevity of your washer dryer.

Unpacking

Carefully remove all packaging materials, including the transport bolts at the rear of the machine. Retain packaging for potential future transport.

Location Requirements

Place the appliance on a firm, level surface. Ensure adequate ventilation around the unit. The product dimensions are approximately 63.9 cm (depth) x 60 cm (width) x 85 cm (height).



Figure 2.1: Front view of the AEG L87695NWD Washer Dryer, showing the control panel, large front-loading door, and overall white finish.

Leveling

Adjust the feet at the bottom of the appliance to ensure it is perfectly level. This prevents vibrations and excessive noise

during operation.

Water and Drainage Connection

Connect the water inlet hose to a cold water tap and the drain hose to a suitable drain pipe. Ensure all connections are tight to prevent leaks.

Electrical Connection

Plug the appliance into a grounded 230 Volt electrical outlet. Do not use adapters or extension cords.

3. Operating Instructions

Follow these steps for effective washing and drying.

Control Panel Overview

The appliance features a LogiControl LC-Display and touch controls for easy program selection and setting adjustments.

Loading Laundry

Open the large front-loading door and load your laundry. The maximum wash capacity is 9 kg, and the maximum dry capacity is 6 kg. Do not overload the drum.



Figure 3.1: The spacious XXL drum of the AEG L87695NWD, designed for efficient washing and drying.

Detergent Dispenser

Pull out the detergent dispenser drawer. Add detergent and fabric softener to the appropriate compartments. The

dispenser supports single chamber detergent options.



Figure 3.2: The detergent dispenser drawer with clearly marked compartments for liquid detergent and fabric softener.

Selecting a Program

Turn the program selector knob or use the touch controls to choose from 16 wash cycles and 5 drying cycles. The OptiSense technology automatically adjusts cycle time and energy consumption based on the load size, ensuring optimal care and efficiency.

- **Wash Programs:** Options include Cotton, Synthetics, Delicates, Wool (Woolmark certified for safe hand-washable woolens), and more.
- **Drying Programs:** Choose from Auto Dry (sensor-based drying) or Time Dry. The Quick Dry function is available for faster drying of smaller loads.
- **Steam Function:** Utilize the steam program to refresh clothes and reduce wrinkles, minimizing the need for ironing.

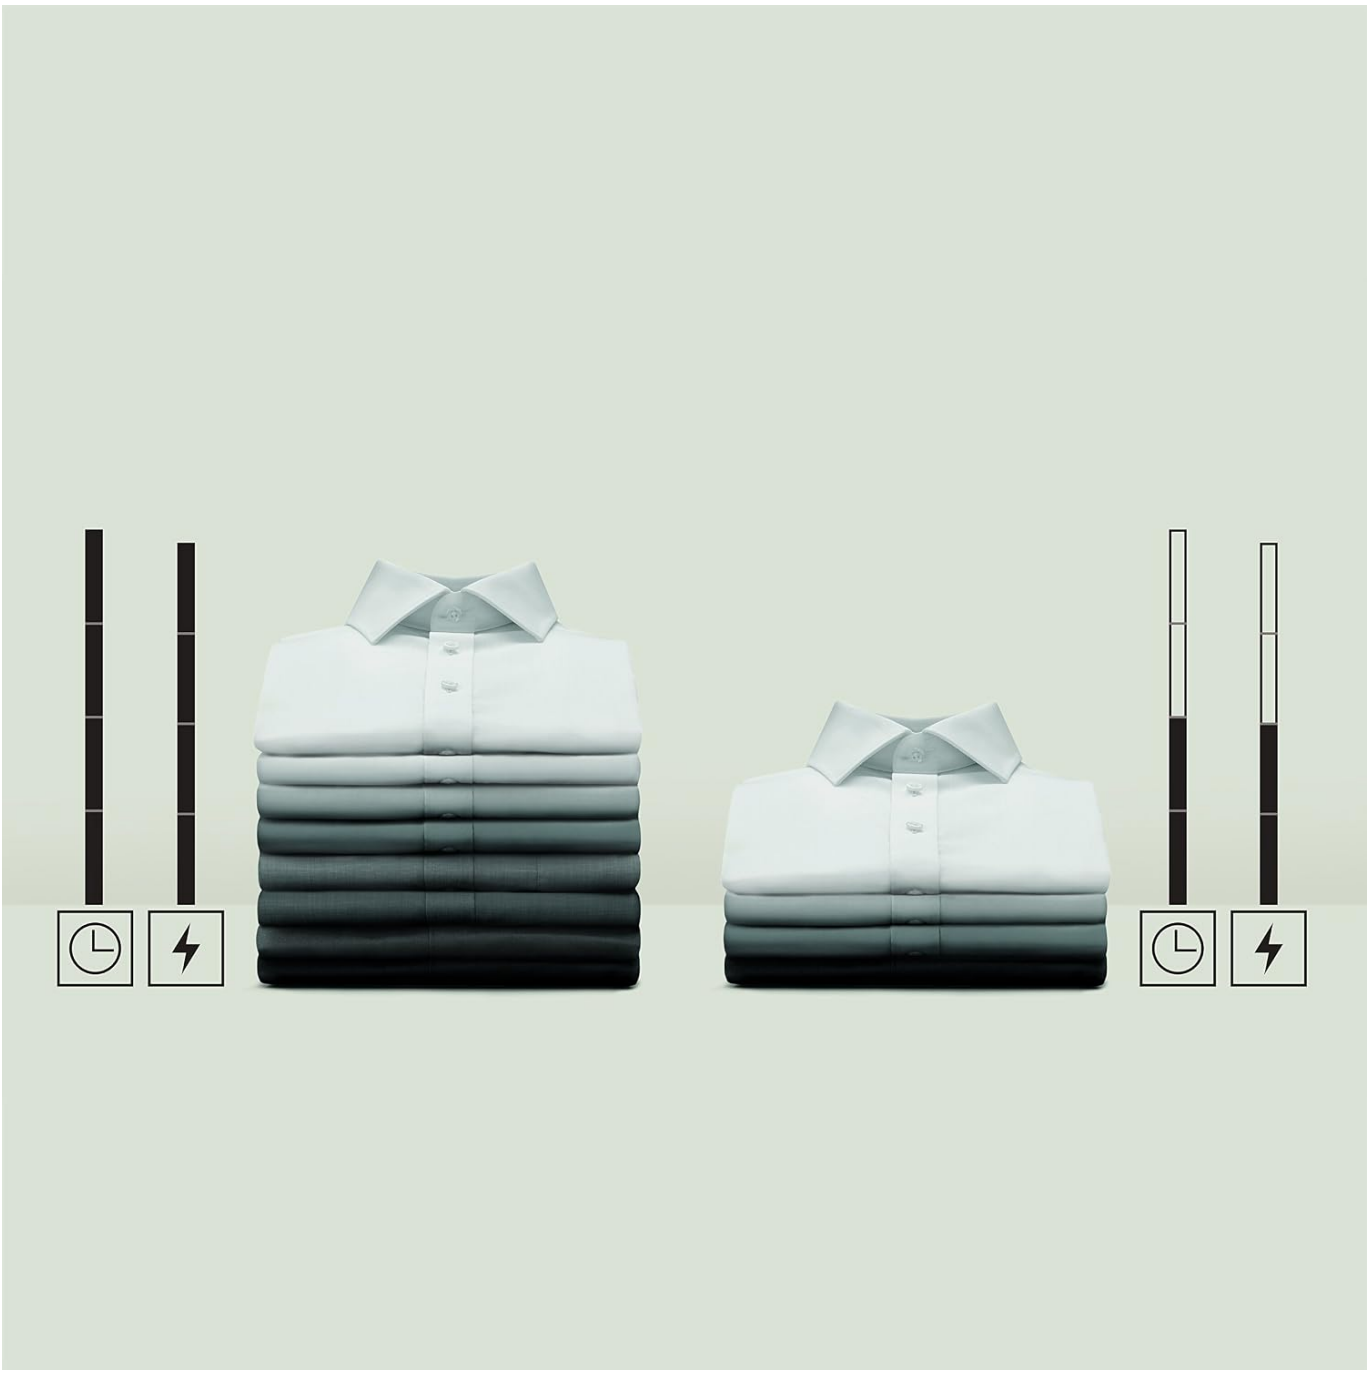


Figure 3.3: Visual representation of how the appliance optimizes energy and time consumption for varying laundry loads.



Figure 3.4: A blue shirt demonstrating the wrinkle-reducing effect of the steam function.

Starting a Program

Press the Start/Pause button to begin the selected program.

Delay Start Function

Use the Delay Start option to postpone the start of a program by a set number of hours, allowing you to take advantage of off-peak electricity rates or have laundry ready at a specific time.



Figure 3.5: Icon indicating the Delay Start feature, allowing users to schedule wash cycles.

End of Cycle

The appliance will signal when the program is complete. Unload the laundry promptly to prevent wrinkles.

4. Maintenance and Cleaning

Regular maintenance ensures optimal performance and extends the lifespan of your appliance.

Cleaning the Exterior

Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners.

Cleaning the Detergent Dispenser

Remove the detergent dispenser drawer and rinse it under running water. Clean any residue from the compartments.

Cleaning the Drum and Lint

After drying cycles, lint may accumulate inside the drum and around the door seal. While there isn't a traditional lint filter, the machine has a special rinse cycle designed to remove lint from the interior and rubber seals. Run this cycle regularly, especially after drying, to prevent lint transfer to subsequent wash loads.



Figure 4.1: A drum paddle, part of the stainless steel drum designed for gentle yet effective laundry care.

Cleaning the Drain Filter

Periodically check and clean the drain filter, usually located at the bottom front of the appliance, to prevent blockages.

5. Troubleshooting

This section addresses common issues you might encounter.

Problem	Possible Cause	Solution
Appliance does not start	No power supply; Door not closed properly; Program not selected.	Check power connection; Ensure door is latched; Select a program and press Start.
Poor washing results	Incorrect detergent dosage; Overloading; Wrong program.	Adjust detergent; Reduce load size (max 9kg wash); Select appropriate program.
Poor drying results / Clothes still damp	Overloading for drying; Incorrect drying program; Lint accumulation.	Reduce load size (max 6kg dry); Select appropriate drying level (e.g., 'Cupboard Dry'); Run lint rinse cycle.
Excessive noise or vibration	Appliance not level; Transport bolts not removed; Uneven load.	Adjust leveling feet; Remove transport bolts; Redistribute laundry evenly.
Water leakage	Loose hose connections; Drain filter clogged.	Check and tighten hose connections; Clean drain filter. The Aqua-Alarm system will alert you to leaks.
Lint on clothes after drying	Lint not cleared from drum.	Run the special lint rinse cycle after drying.

If the problem persists after attempting these solutions, please contact customer support.

6. Technical Specifications

Specification	Value
Model Identifier	L87695NWD
Product Dimensions (D x W x H)	63.9 x 60 x 85 cm
Item Weight	81.27 Kilograms
Wash Capacity (Standard Program)	9 Kilograms
Dry Capacity (Standard Program)	6 Kilograms
Energy Efficiency Class	A (Scale A to G)
Annual Energy Consumption (Full Cycle)	1224 kWh per year
Annual Water Consumption (Full Cycle)	19800 Liters per year
Max Spin Speed	1600 Revolutions per Minute
Washing Noise Emission (Cotton 60°C)	49 dB
Spinning Noise Emission (Cotton 60°C)	75 dB
Drying Noise Emission (Cotton Cupboard Dry)	61 dB
Drum Material	Stainless Steel
Control Type	Touch
Voltage	230 Volt
Special Features	Quick Dry Function, Steam Function

7. Warranty and Support

Your AEG L87695NWD Washer Dryer comes with a comprehensive warranty. The Inverter Motor is covered by a 10-year warranty, ensuring long-term reliability and quiet operation.



Figure 7.1: Icon highlighting the 10-year warranty for the Inverter Motor, emphasizing durability and quiet performance.



Figure 7.2: Icon representing the low noise operation of the appliance.

For warranty claims, technical assistance, or spare parts, please contact AEG customer support. Refer to your purchase documentation for specific contact details.

© 2024 AEG. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question